

### 6-axis IMU with wide bandwidth, low-noise accelerometer, embedded sensor fusion, and AI for industrial applications

#### Features



**LGA-14L**  
**(2.5 x 3.0 x 0.71 mm) typ.**



#### Product status link

[ISM330BX](#)

#### Product summary

Order code	ISM330BXTR
Temperature range [°C]	-40 to +85
Package	LGA-14L (2.5 x 3.0 x 0.71 mm)
Packing	Tape and reel

#### Product resources

[TN0018 \(design and soldering\)](#)



#### Applications

- Condition monitoring
- Robotics
- Motion tracking
- White goods
- Hearing aids

#### Description

The **ISM330BX** is a system-in-package inertial measurement unit (IMU) featuring a 3-axis digital accelerometer and a 3-axis digital gyroscope with triple channels for **processing acceleration and angular rate data for motion tracking and vibration measurements** along with **Qvar sensing** on possibly up to three separate channels with dedicated configuration, processing, and filtering.

The motion tracking in high-performance mode runs at 0.6 mA and enables always-on low-power features for an optimal motion experience.

---

The ISM330BX embeds advanced dedicated features and data processing for motion processing like the finite state machine (FSM), sensor fusion low power (SFLP), adaptive self-configuration (ASC), and machine learning core (MLC) with exportable AI features/filters for IoT applications.

The ISM330BX integrates a 6-axis IMU sensor in a compact package (2.5 x 3.0 x 0.71 mm).

## 1 Overview

The ISM330BX is a system-in-package featuring a high-performance 3-axis digital accelerometer and 3-axis digital gyroscope with up to three processing channels.

**Channel 1** has been designed for data processing for motion tracking and 3D spatial tracking. Acceleration and angular rate data are available on the primary output of the I<sup>2</sup>C / SPI / MIPI I3C® interface for the accelerometer and gyroscope with independent ODR and FS.

**Channel 2** has been designed for acceleration data only. Data are available on the TDM interface at 8 kHz or 16 kHz. Acceleration data made available through channel 2 have dedicated processing and filtering for those applications requiring ultralow noise (down to 30 µg/√Hz), linear phase, and low latency.

**Channel 3** is dedicated to the analog hub and Qvar, which is an electrical potential sensor able to measure the variation of the quasi-electrostatic potential.

The ISM330BX embeds an analog hub, which is able to connect an external analog input and convert it to a digital signal for processing, and includes advanced dedicated features like a finite state machine and data filtering for motion processing.

The event-detection interrupts enable efficient and reliable motion tracking and context awareness, implementing hardware recognition of free-fall events, 6D orientation, click and double-click sensing, activity or inactivity, stationary/motion detection and wake-up events. Machine learning and finite state machine processing allow moving some algorithms from the application processor to the ISM330BX sensor, enabling consistent reduction of power consumption.

Embedded FIFO with compression and dynamic allocation of significant data allows overall power saving of the system with a FIFO buffer size up to 4.5 KB.

The ISM330BX MEMS sensor module leverages the robust and mature in-house manufacturing processes already used for the production of micromachined accelerometers and gyroscopes. The various sensing elements are manufactured using specialized micromachining processes, while the IC interfaces are developed using CMOS technology that allows the design of a dedicated circuit, which is trimmed to better match the characteristics of the sensing element.

The ISM330BX is available in a small plastic, land grid array (LGA) package of 2.5 x 3.0 x 0.71 mm to address ultracompact solutions.

## 2 Embedded low-power features

The ISM330BX features the following on-chip functions:

- 4.5 KB FIFO data buffering, data can be compressed two or three times
  - 100% efficiency with flexible configurations and partitioning
  - Possibility to store timestamp
- Event-detection interrupts (fully configurable)
  - Free-fall
  - Wakeup
  - 6D orientation
  - Click and double-click sensing
  - Activity/inactivity recognition
  - Stationary/motion detection
- Specific IP blocks (called "embedded functions") with negligible power consumption and high-performance
  - Finite state machine (FSM)
  - Machine learning core (MLC) with exportable features and filters for AI applications
  - Adaptive self-configuration (ASC)
  - Embedded sensor fusion low-power (SFLP) algorithm
  - Tilt
  - Significant motion detection
  - Pedometer functions: step detector and step counters
- Analog hub for processing external analog input data
- Qvar: electric charge variation detection

### 2.1

#### Pedometer functions: step detector and step counters

The ISM330BX embeds an advanced pedometer with an algorithm running in an ultralow-power domain in order to ensure extensive battery life in battery-constrained applications.

Leveraging on enhanced configurability, the advanced embedded pedometer is suitable for a large range of wearable devices.

The algorithm processes and analyzes the accelerometer waveform in order to count the user's steps during walking and running activities.

The pedometer works at 30 Hz and it is not affected by the selected device power mode (ultralow-power, low-power, high-performance), thus guaranteeing an ultra-low-power experience and extreme flexibility in conjunction with other device functionalities.

The accelerometer operating mode can be changed at runtime and is based on user requirements without impacting the performance of the pedometer.

The pedometer output can be batched in the device's FIFO buffer, in order to decrease overall system current consumption.

ST freely provides the support and the tools for easily configuring the device and tuning the algorithm configuration for a best-in-class user experience.

## 2.2


### Finite state machine

The ISM330BX can be configured to generate interrupt signals activated by user-defined motion patterns. To do this, up to eight embedded finite state machines can be programmed independently for motion detection such as glance gestures, absolute wrist tilt, shake and double-shake detection.

#### Definition of finite state machine

A state machine is a mathematical abstraction used to design logic connections. It is a behavioral model composed of a finite number of states and transitions between states, similar to a flow chart in which one can inspect the way logic runs when certain conditions are met. The state machine begins with a start state, goes to different states through transitions dependent on the inputs, and can finally end in a specific state (called stop state). The current state is determined by the past states of the system. The following figure shows a generic state machine.

Figure 1. Generic state machine

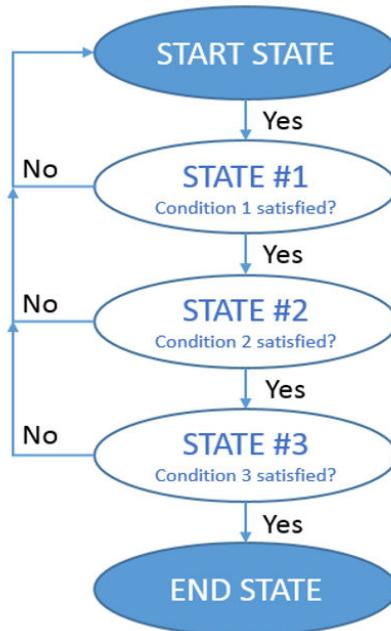

#### Finite state machine in the ISM330BX

The ISM330BX works as a combo accelerometer-gyroscope sensor, generating acceleration and angular rate output data. These data, along with analog hub / Qvar sensor data, can be used as input of up to eight programs in the embedded finite state machine (Figure 2. State machine in the ISM330BX).

All eight finite state machines are independent: each one has its dedicated memory area and it is independently executed. An interrupt is generated when the end state is reached or when some specific command is performed.

Figure 2. State machine in the ISM330BX



## 2.3

### Machine learning core

The ISM330BX embeds a dedicated core for machine learning processing that provides system flexibility, allowing some algorithms run in the application processor to be moved to the MEMS sensor with the advantage of consistent reduction in power consumption.


Machine learning core logic allows identifying if a data pattern (for example, motion) matches a user-defined set of classes.

The ISM330BX machine learning core works on data patterns coming from the accelerometer and gyroscope sensors, but it is also possible to connect and process analog hub / Qvar sensor data.

The input data can be filtered using a dedicated configurable computation block containing filters and features computed in a fixed time window defined by the user. Computed feature values and filtered data values can also be read through the FIFO buffer.

Machine learning processing is based on logical processing composed of a series of configurable nodes characterized by "if-then-else" conditions where the "feature" values are evaluated against defined thresholds.

Figure 3. Machine learning core in the ISM330BX

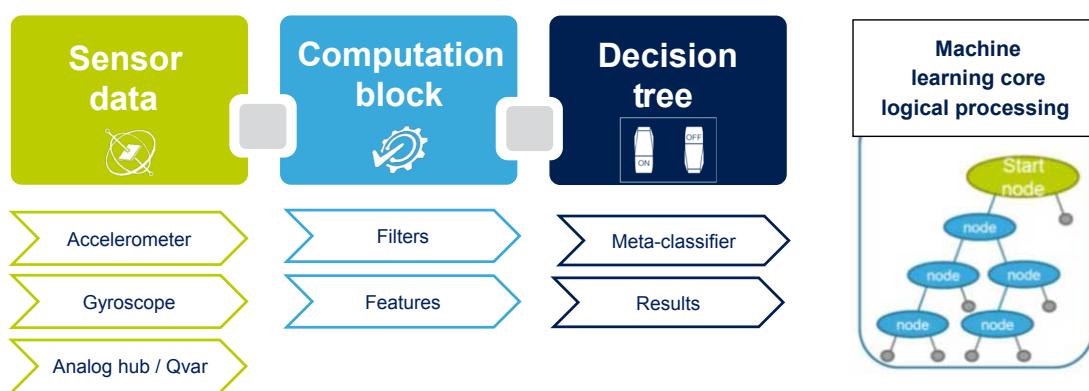

The ISM330BX can be configured to run up to four decision trees simultaneously and independently and every decision tree can generate up to 16 results. The total number of nodes can be up to 128.

The results of the machine learning processing are available in dedicated output registers readable from the application processor at any time.

The ISM330BX machine learning core can be configured to generate an interrupt when a change in the result occurs.

## 2.4

### Adaptive self-configuration (ASC)

The ISM330BX supports the adaptive self-configuration (ASC) feature, which allows the FSM to automatically reconfigure the device in real time based on the detection of a specific motion pattern or based on the output of a specific decision tree configured in the MLC, without any intervention from the host processor. The FSM can write a subset of the device registers using the SETR command, which allows indicating the register address and the new value to be written in such a register. The access to these device registers is mutually exclusive to the host.

## 2.5

## Sensor fusion low power

A sensor fusion low-power (SFLP) block is available in the ISM330BX for generating the following data based on the accelerometer and gyroscope data processing:

- Game rotation vector, which provides a quaternion representing the attitude of the device
- Gravity vector, which provides a three-dimensional vector representing the direction of gravity
- Gyroscope bias, which provides a three-dimensional vector representing the gyroscope bias

The SFLP block is enabled by setting the SFLP\_GAME\_EN bit to 1 of the [EMB\\_FUNC\\_EN\\_A \(04h\)](#) embedded functions register.

The SFLP block can be reinitialized by setting the SFLP\_GAME\_INIT bit to 1 of the [EMB\\_FUNC\\_INIT\\_A \(66h\)](#) embedded functions register.

**Table 1. Sensor fusion performance**

Parameter	Value
Static accuracy	heading / yaw
	pitch
	roll
Low dynamic accuracy	heading / yaw
	pitch
	roll
High dynamic accuracy	heading / yaw
	pitch
	roll
Calibration time	0.8 seconds <sup>(1)</sup>
Orientation stabilization time	0.7 seconds


1. Time required to reach steady state

## 2.6 Pedometer algorithm

The pedometer algorithm is composed of a cascade of four stages:

1. Computation of the acceleration magnitude signal in order to detect the signal independently from device orientation
2. FIR filter to extract relevant frequency components and to smooth the signal by cutting off high frequencies
3. Peak detector to find the maximum and minimum of the waveform and compute the peak-to-peak value
4. Step count: if the peak-to-peak value is greater than the settled threshold, a step is counted

Figure 4. Four-stage pedometer algorithm

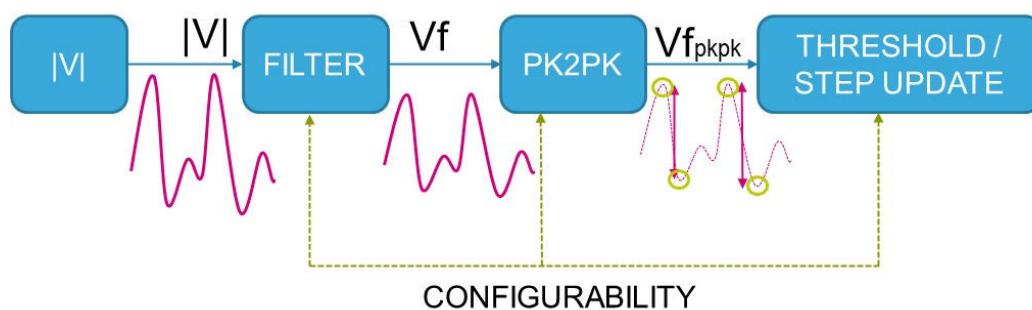

The ISM330BX embeds a dynamic internal threshold for step detection that is updated after each peak-to-peak evaluation: the internal threshold is increased with a configurable speed if a step is detected or decreased with a configurable speed if a step is not detected.

This approach ensures high accuracy when the user starts to walk and a false peak rejection when the user is walking or running.

An internal configurable debounce algorithm can be also set to filter false walks: indeed, an accelerometer pattern is recognized as a walk or run only if a minimum number of steps are counted.

The ISM330BX has been designed to reject a false-positive signal inside the algorithm core.

On top of the mechanisms detailed above, the ISM330BX allows enabling and configuring a dedicated false-positive rejection block to further boost pedometer accuracy.

## 2.7 Tilt detection

The tilt function helps to detect activity change and has been implemented in hardware using only the accelerometer to achieve targets of both ultra-low power consumption and robustness during the short duration of dynamic accelerations.

The tilt function is based on a trigger of an event each time the device's tilt changes and can be used with different scenarios.

## 2.8


## Significant motion detection

The significant motion detection (SMD) function generates an interrupt when a 'significant motion', that could be due to a change in device location, is detected. In the ISM330BX device this function has been implemented in hardware using only the accelerometer.

SMD functionality can be used in location-based applications in order to receive a notification indicating when the user is changing location.

### 3 Pin description

Figure 5. Pin connections

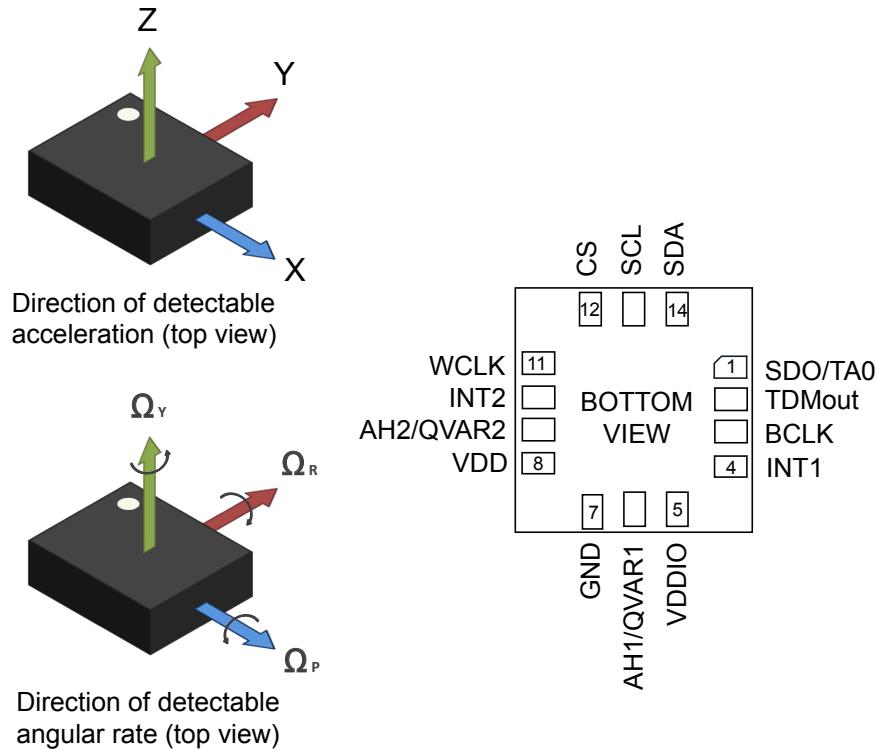


### 3.1 Pin connections

The ISM330BX offers flexibility to connect the pins in order to have two different mode connections and functionalities. In detail:

- **Mode 1:** I<sup>2</sup>C / MIPI I3C® target interface or SPI (3- and 4-wire) serial interface is available.
- **Mode 2:** I<sup>2</sup>C / MIPI I3C® target interface or SPI (3- and 4-wire) serial interface and TDM interface are available.

Figure 6. ISM330BX connection modes

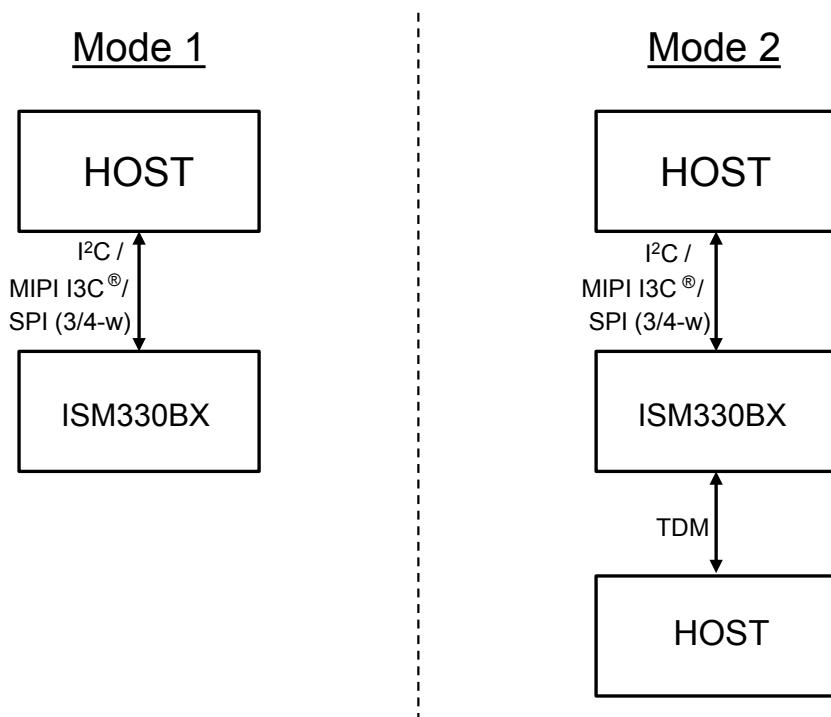

In the following table each mode is described for the pin connections and function.

**Table 2. Pin description**

Pin#	Name	Mode 1 function	Mode 2 function
1	SDO/TA0	SPI 4-wire interface serial data output (SDO) I <sup>2</sup> C least significant bit of the device address (TA0)	SPI 4-wire interface serial data output (SDO) I <sup>2</sup> C least significant bit of the device address (TA0)
2	TDMout	Connect to GND or VDDIO	TDM out
3	BCLK	Connect to GND or VDDIO	TDM bit clock
4	INT1	Programmable interrupt in I <sup>2</sup> C and SPI	Programmable interrupt in I <sup>2</sup> C and SPI
5	VDDIO <sup>(1)</sup>	Power supply for I/O pins	
6	AH1/QVAR1	Connect to VDD or GND if the analog hub and Qvar are disabled.  AH input 1 (or Qvar electrode 1) is connected if the analog hub (or Qvar functionality) is enabled.	Connect to VDD or GND if the analog hub and Qvar are disabled.  AH input 1 (or Qvar electrode 1) is connected if the analog hub (or Qvar functionality) is enabled.
7	GND	0 V supply	
8	VDD <sup>(1)</sup>	Power supply	
9	AH2/QVAR2	Connect to VDD or GND if the analog hub and Qvar are disabled.  AH input 2 (or Qvar electrode 2) is connected if the analog hub (or Qvar functionality) is enabled.	Connect to VDD or GND if the analog hub and Qvar are disabled.  AH input 2 (or Qvar electrode 2) is connected if the analog hub (or Qvar functionality) is enabled.
10	INT2	Programmable interrupt 2 in I <sup>2</sup> C and SPI	Programmable interrupt 2 in I <sup>2</sup> C and SPI
11	WCLK	Connect to VDDIO or leave unconnected	TDM word clock
12	CS	I <sup>2</sup> C / MIPI I3C® / SPI mode selection  (1: SPI idle mode / I <sup>2</sup> C / MIPI I3C® communication enabled; 0: SPI communication mode / I <sup>2</sup> C / MIPI I3C® disabled)	I <sup>2</sup> C / MIPI I3C® / SPI mode selection  (1: SPI idle mode / I <sup>2</sup> C / MIPI I3C® communication enabled; 0: SPI communication mode / I <sup>2</sup> C / MIPI I3C® disabled)
13	SCL	I <sup>2</sup> C / MIPI I3C® serial clock (SCL)  SPI serial port clock (SPC)	I <sup>2</sup> C / MIPI I3C® serial clock (SCL)  SPI serial port clock (SPC)
14	SDA	I <sup>2</sup> C / MIPI I3C® serial data (SDA)  SPI serial data input (SDI)  3-wire interface serial data output (SDO)	I <sup>2</sup> C / MIPI I3C® serial data (SDA)  SPI serial data input (SDI)  3-wire interface serial data output (SDO)

1. Recommended 100 nF filter capacitor

## 4 Module specifications

### 4.1 Mechanical characteristics

@VDD = 1.8 V, T = 25°C, unless otherwise noted.

**Table 3. Mechanical characteristics**

Symbol	Parameter	Test conditions	Min. <sup>(1)</sup>	Typ. <sup>(2)</sup>	Max. <sup>(1)</sup>	Unit
LA_FS	Linear acceleration measurement range					g
G_FS	Angular rate measurement range					dps
LA_So	Linear acceleration sensitivity <sup>(3)</sup>		FS = ±2 g	0.061		mg/LSB
			FS = ±4 g	0.122		
			FS = ±8 g	0.244		
G_So	Angular rate sensitivity <sup>(3)</sup>		FS = ±125 dps	4.375		mdps/LSB
			FS = ±250 dps	8.75		
			FS = ±500 dps	17.50		
			FS = ±1000 dps	35		
			FS = ±2000 dps	70		
			FS = ±4000 dps	140		
G_So%	Sensitivity tolerance <sup>(4)</sup>	at component level		±1		%
LA_SoDr	Linear acceleration sensitivity change vs. temperature <sup>(5)</sup>	from -40° to +85°C	-0.005	±0.002	+0.005	%/°C
G_SoDr	Angular rate sensitivity change vs. temperature <sup>(5)</sup>	from -40° to +85°C	-0.015	±0.005	+0.015	%/°C
LA_TyOff	Linear acceleration zero-g level offset accuracy <sup>(4)</sup>			±20		mg
G_TyOff	Angular rate zero-rate level <sup>(4)</sup>			±2		dps
LA_OffDr	Linear acceleration zero-g level change vs. temperature <sup>(5)</sup>	from -40° to +85°C	-0.7	±0.25	+0.7	mg/°C
G_OffDr	Angular rate typical zero-rate level change vs. temperature <sup>(5)</sup>	from -40° to +85°C	-0.03	±0.016	+0.03	dps/°C
L_Cx	Linear acceleration cross-axis sensitivity	T = 25°C		±0.5		%
G_Cx	Angular rate cross-axis sensitivity	T = 25°C		±1.2		%
Rn	Rate noise density in high-performance mode <sup>(6)</sup>			4.5		mdps/√Hz
RnRMS	Gyroscope RMS noise in low-power mode <sup>(7)</sup>			80		mdps
G_BI	Gyroscope bias instability	T = 25°C		6		deg/h
An	SPI/I3C interface - acceleration noise density in high-performance mode <sup>(8)</sup>	FS independent		70	90	μg/√Hz
	TDM interface - acceleration noise density <sup>(9)</sup>	FS independent		30		
RMS	Accelerometer RMS noise in low-power mode <sup>(10)</sup>	LPM1		2.8		mg RMS

Symbol	Parameter	Test conditions	Min. <sup>(1)</sup>	Typ. <sup>(2)</sup>	Max. <sup>(1)</sup>	Unit
RMS	Accelerometer RMS noise in low-power mode <sup>(10)</sup>	LPM2		2.1		mg RMS
		LPM3		1.4		
LA_ODR	Linear acceleration output data rate		1.875 <sup>(11)</sup>			Hz
			7.5			
			15			
			30			
			60			
			120			
			240			
			480			
			960			
			1.92 k			
			3.84 k			
G_ODR	Angular rate output data rate		7.5			
			15			
			30			
			60			
			120			
			240			
			480			
			960			
			1.92 k			
			3.84 k			
LA_F0	Accelerometer resonant frequency	X,Y-axis		2.8		kHz
		Z-axis		2.2		
LA_BW	Signal bandwidth	SPI/I3C interface ±3 dB point			1.8	kHz
		High-performance mode				
		TDM interface ±3 dB point	1			
Vst	Linear acceleration self-test output change <sup>(12)(13)</sup>		20		1700	mg
	Angular rate self-test output change <sup>(14)</sup>	FS = ±250 dps	20		80	dps
		FS = ±2000 dps	150		700	dps
Top	Operating temperature range		-40		+85	°C

1. Min/Max values are based on characterization results at  $3\sigma$  on a limited number of samples, not tested in production and not guaranteed.
2. Typical specifications are not guaranteed.
3. Sensitivity values after factory calibration test and trimming.
4. Value after calibration.
5. Measurements are performed in a uniform temperature setup and they are based on characterization data in a limited number of samples. Not measured during final test for production.
6. Gyroscope rate noise density in high-performance mode is independent of the ODR and FS setting. Gyroscope noise density is computed starting from measured noise RMS and considering  $BW = ODR/2$ .
7. Gyroscope RMS noise in low-power mode is independent of the ODR and FS setting.
8. Accelerometer noise density in high-performance mode is independent of the selected ODR and FS. Accelerometer noise density is computed starting from measured noise RMS and considering  $BW = ODR/2$ .
9. Noise density is between 10 Hz and 1 kHz.

10. Accelerometer RMS noise in low-power mode is independent of the ODR and FS setting.
11. This ODR is available when the accelerometer is in low-power mode.
12. The sign of the linear acceleration self-test output change is defined by the ST\_XL\_[1:0] bits in a dedicated register for all axes.
13. Accelerometer self-test limits are full-scale independent.
14. The sign of the angular rate self-test output change is defined by the ST\_G\_[1:0] bits in a dedicated register for all axes.

## 4.2 Electrical characteristics

@VDD = 1.8 V, T = 25°C, unless otherwise noted.

**Table 4. Electrical characteristics**

Symbol	Parameter	Test conditions	Min. <sup>(1)</sup>	Typ. <sup>(2)</sup>	Max. <sup>(1)</sup>	Unit
VDD	Supply voltage		1.71	1.8	3.6	V
VDDIO	Power supply for I/O		1.08		3.6	V
IddHP	Gyroscope and accelerometer current consumption in high-performance mode			0.6		mA
LA_IddHP	Accelerometer current consumption in high-performance mode (SPI/I3C)			190		µA
LA_IddLPM2	Accelerometer current consumption in low-power mode (LPM2)	ODR = 60 Hz		20		µA
LA_IddLPM1	Accelerometer current consumption in low-power mode (LPM1)	ODR = 60 Hz		17		µA
IddPD	Gyroscope and accelerometer current consumption during power-down			2.6		µA
Ton	Turn-on time - gyroscope			30		ms
V <sub>IH</sub>	Digital high-level input voltage		0.7 * VDDIO			V
V <sub>IL</sub>	Digital low-level input voltage			0.3 * VDDIO		V
V <sub>OH</sub>	High-level output voltage	I <sub>OH</sub> = 4 mA <sup>(3)</sup>	VDDIO - 0.2			V
V <sub>OL</sub>	Low-level output voltage	I <sub>OL</sub> = 4 mA <sup>(3)</sup>			0.2	V
Top	Operating temperature range			-40	+85	°C

1. Min/Max values are based on characterization results at  $3\sigma$  on a limited number of samples, not tested in production and not guaranteed.
2. Typical specifications are not guaranteed.
3. 4 mA is the maximum driving capability, that is, the maximum DC current that can be sourced/sunk by the digital pin in order to guarantee the correct digital output voltage levels  $V_{OH}$  and  $V_{OL}$ .

**Table 5. Electrical parameters of Qvar (@VDD = 1.8 V, T = 25 °C)**

Parameter	Typ. <sup>(1)</sup>	Unit
Power consumption	15 <sup>(2)</sup>	µA
Offset (shorted inputs)	3	mV
Noise (shorted inputs)	54	µV
Qvar gain	78	LSB/mV
CMRR	54	dB
Input impedance	Configurable (from 235 M to 2.4 G)	Ω
Input range	±460	mV

1.  $VDDIO = 1.8$  V,  $Zin = 235$  MOhm. Typical values are based on characterization and are not guaranteed.
2. Extra power consumption when only the analog hub / Qvar function is enabled. In this condition the accelerometer must be set to high-performance mode.

## 4.3 Temperature sensor characteristics

@VDD = 1.8 V, T = 25°C unless otherwise noted.

**Table 6. Temperature sensor characteristics**

Symbol	Parameter	Test condition	Min. <sup>(1)</sup>	Typ. <sup>(2)</sup>	Max. <sup>(1)</sup>	Unit
TODR <sup>(3)</sup>	Temperature refresh rate			60		Hz
Toff	Temperature offset <sup>(4)</sup>		-15		+15	°C
TSen	Temperature sensitivity			256		LSB/°C
TST	Temperature stabilization time <sup>(5)</sup>				500	μs
T_ADC_res	Temperature ADC resolution			16		bit
Top	Operating temperature range		-40		+85	°C

1. Min/Max values are based on characterization results at  $3\sigma$  on a limited number of samples, not tested in production and not guaranteed.
2. Typical specifications are not guaranteed
3. When the accelerometer is in low-power mode and the gyroscope part is turned off, the TODR value is equal to the accelerometer ODR.
4. The output of the temperature sensor is 0 LSB (typ.) at 25°C.
5. Time from power ON to valid data based on characterization data.

## 4.4 Communication interface characteristics

### 4.4.1 SPI - serial peripheral interface

Subject to general operating conditions for VDD and Top. @VDDIO = 1.8 V, T = 25°C unless otherwise noted.

**Table 7. SPI target timing values**

Symbol	Parameter	Value <sup>(1)</sup>			Unit
		Min	Typ	Max	
$f_{c(SPC)}$	SPI clock frequency			10	MHz
$t_c(SPC)$	SPI clock period	100			
$t_{high(SPC)}$	SPI clock high	45			
$t_{low(SPC)}$	SPI clock low	45			
$t_{su(CS)}$	CS setup time (mode 3)	5			ns
	CS setup time (mode 0)	20			
$t_h(CS)$	CS hold time (mode 3)	20			
	CS hold time (mode 0)	20			
$t_{su(SI)}$	SDI input setup time	5			
$t_h(SI)$	SDI input hold time	15			
$t_v(SO)$	SDO valid output time		15	25	
$t_{dis(SO)}$	SDO output disable time			50	
$C_{load}$	Bus capacitance			100	pF

1. Values are evaluated at 10 MHz clock frequency for SPI with both 4 and 3 wires, based on characterization results, not tested in production

**Figure 7. SPI target timing in mode 0**


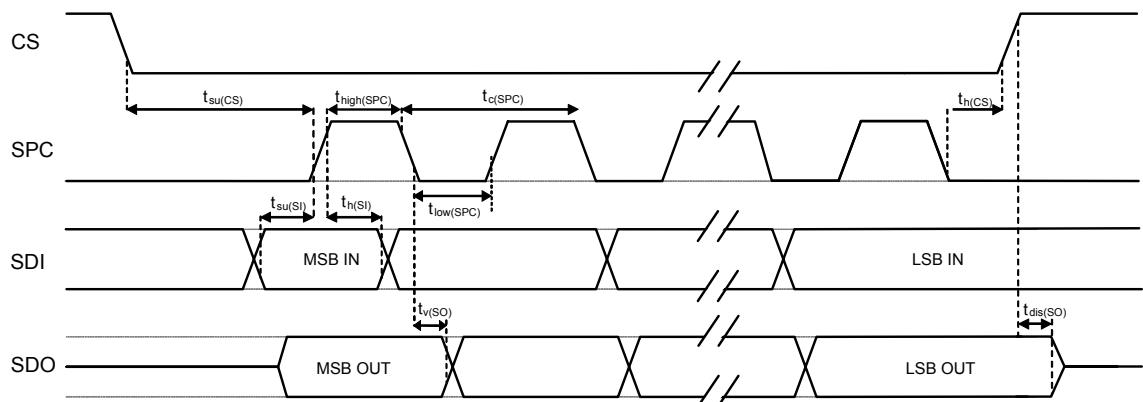


Figure 8. SPI target timing in mode 3

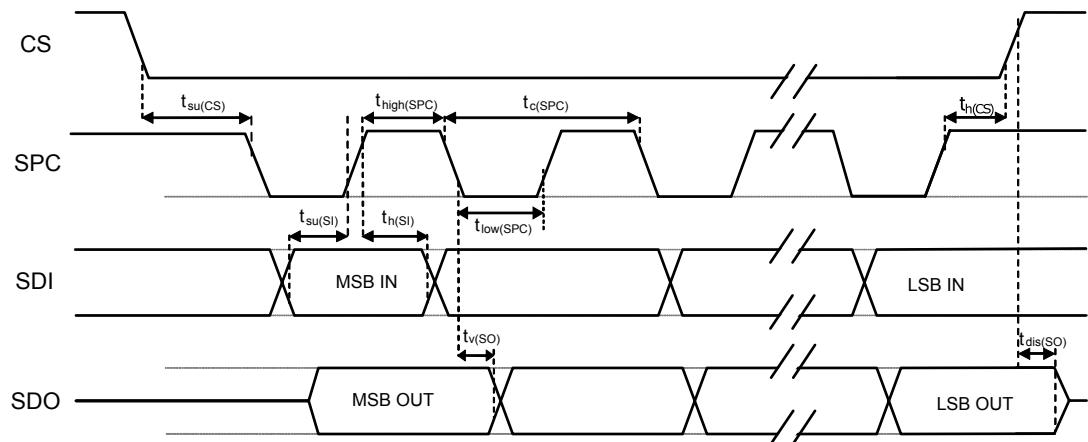

Note: Measurement points are done at  $0.3 \cdot VDDIO$  and  $0.7 \cdot VDDIO$  for both input and output ports.

#### 4.4.2 I<sup>2</sup>C - inter-IC control interface

Subject to general operating conditions for VDD and Top. @VDDIO = 1.8 V, T = 25°C unless otherwise noted.


**Table 8. I<sup>2</sup>C target timing values**

Symbol	Parameter	I <sup>2</sup> C fast mode <sup>(1)(2)</sup>		I <sup>2</sup> C fast mode plus <sup>(1)(2)</sup>		Unit
		Min	Max	Min	Max	
f(SCL)	SCL clock frequency	0	400	0	1000	kHz
t <sub>w</sub> (SCLL)	SCL clock low time	1.3		0.5		μs
t <sub>w</sub> (SCLH)	SCL clock high time	0.6		0.26		
t <sub>su</sub> (SDA)	SDA setup time	100		50		
t <sub>h</sub> (SDA)	SDA data hold time	0	0.9	0		
t <sub>h</sub> (ST)	START/REPEATED START condition hold time	0.6		0.26		
t <sub>su</sub> (SR)	REPEATED START condition setup time	0.6		0.26		
t <sub>su</sub> (SP)	STOP condition setup time	0.6		0.26		
t <sub>w</sub> (SP:SR)	Bus free time between STOP and START condition	1.3		0.5		
	Data valid time			0.9		0.45
	Data valid acknowledge time			0.9		0.45
C <sub>B</sub>	Capacitive load for each bus line		400		550	pF

1. Data based on standard I<sup>2</sup>C protocol requirement, not tested in production.

2. Data for I<sup>2</sup>C fast mode and I<sup>2</sup>C fast mode plus have been validated by characterization, not tested in production.

**Figure 9. I<sup>2</sup>C target timing diagram**

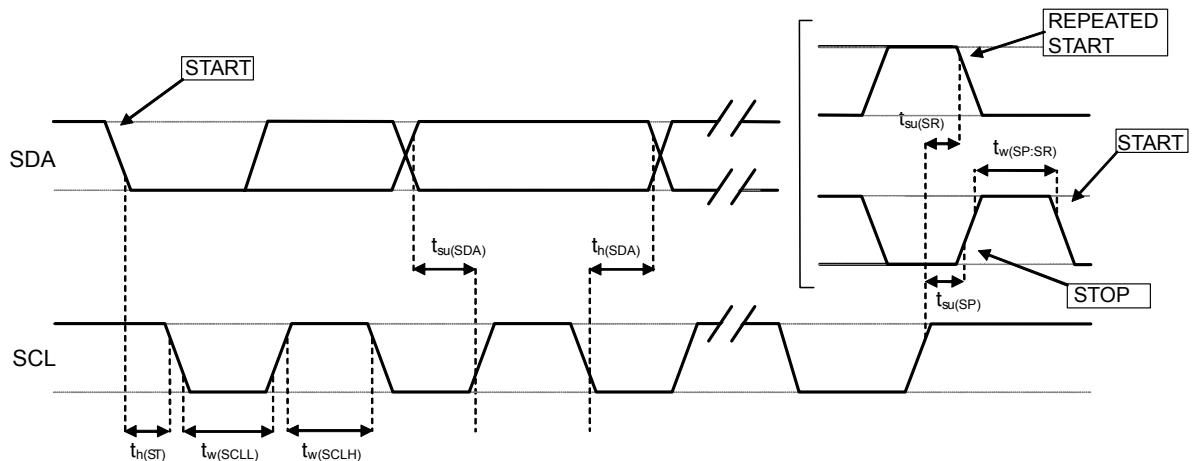

Note: Measurement points are done at  $0.3 \cdot VDDIO$  and  $0.7 \cdot VDDIO$  for both ports.

#### 4.4.3 TDM - time-division multiplexing interface


@VDDIO = 1.8 V, T = 25°C unless otherwise noted. Refer to [Section 5.3: TDM interface](#) for additional details.

**Table 9. TDM timing values**

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
BCLK <sub>f</sub>	BCLK frequency ( $1/t_p$ )	WCLK = 16 kHz		2048		kHz
BWCLKA	BCLK/WCLK frequency accuracy		-0.1		+0.1	%
BCLK <sub>j</sub>	BCLK jitter			4		ns (peak to peak)
WCLK8	8 kHz WCLK mode			8		kHz
WCLK16	16 kHz WCLK mode			16		kHz
PDC	All clock pin duty cycle - referred to BCLK (except WCLK)		45		55	%
WST	WCLK setup time before BCLK rising/falling edge (tss1)		20			ns
WHT	WCLK hold time after BCLK rising/falling edge (ths3)		20			ns
TDMST	TDMout setup time before BCLK rising/falling edge (tss2)		15			ns
TDMHTR	TDMout hold time after BCLK rising/falling edge (ths1)		15			ns
TDMHTZ	TDMout hold time of LSB after BCLK rising/falling edge (ths2)		15		65	ns
C <sub>BCLK</sub>	BCLK pin capacitance				10	pF
C <sub>TDMout</sub>	TDMout load capacitance				60	pF

**Note:** All setup times and hold times in [Table 9](#) and in [Figure 10](#) are valid for BCLK polarity set to “clock on rising”. If BCLK polarity is set to “clock on falling”, then all setup and hold times will refer to the falling edge of BCLK instead. Please refer to [Section 5.3: TDM interface](#) for additional details.

**Figure 10. TDM timing diagram**

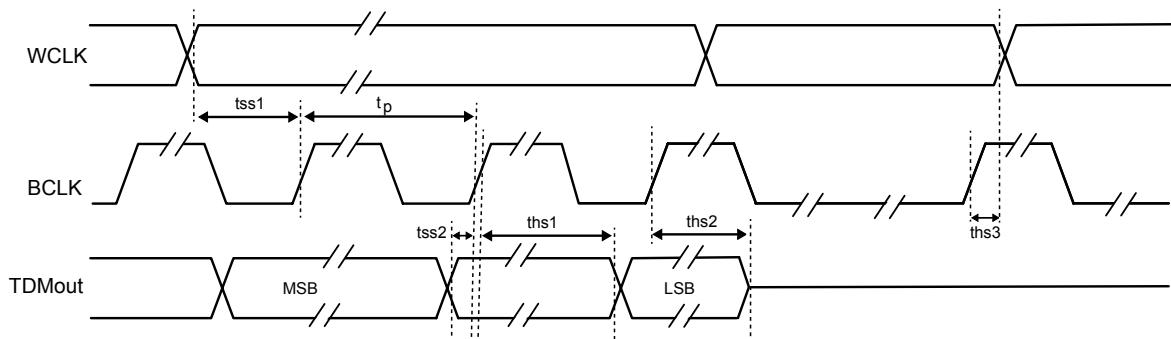

#### 4.5

#### Absolute maximum ratings

Stresses above those listed as "absolute maximum ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device under these conditions is not implied. Exposure to maximum rating conditions for extended periods may affect device reliability.

**Table 10. Absolute maximum ratings**

Symbol	Ratings	Maximum value	Unit
VDD	Supply voltage	-0.3 to +4.8	V
T <sub>STG</sub>	Storage temperature range	-40 to +125	°C
S <sub>g</sub>	Acceleration <i>g</i> for 0.2 ms	20,000	g
ESD	Electrostatic discharge protection (HBM)	2	kV
V <sub>in</sub>	Input voltage on any control pin (including SDO/TA0, BCLK, WCLK, CS, SCL, SDA)	-0.3 to V <sub>DDIO</sub> +0.3	V

**Note:** Supply voltage on any pin should never exceed 4.8 V.



This device is sensitive to mechanical shock, improper handling can cause permanent damage to the part.



This device is sensitive to electrostatic discharge (ESD), improper handling can cause permanent damage to the part.

## 4.6 Terminology

### 4.6.1 Sensitivity

Linear acceleration sensitivity can be determined, for example, by applying 1 g acceleration to the device. Because the sensor can measure DC accelerations, this can be done easily by pointing the selected axis towards the ground, noting the output value, rotating the sensor 180 degrees (pointing towards the sky) and noting the output value again. By doing so,  $\pm 1$  g acceleration is applied to the sensor. Subtracting the larger output value from the smaller one, and dividing the result by 2, leads to the actual sensitivity of the sensor. This value changes very little over temperature and over time. The sensitivity tolerance describes the range of sensitivities of a large number of sensors (see [Table 3](#)).

An angular rate gyroscope is a device that produces a positive-going digital output for counterclockwise rotation around the axis considered. Sensitivity describes the gain of the sensor and can be determined by applying a defined angular velocity to it. This value changes very little over temperature and time (see [Table 3](#)).

### 4.6.2 Zero-g and zero-rate level

Linear acceleration zero-g level offset (TyOff) describes the deviation of an actual output signal from the ideal output signal if no acceleration is present. A sensor in a steady state on a horizontal surface measures 0 g on both the X-axis and Y-axis, whereas the Z-axis measures 1 g. Ideally, the output is in the middle of the dynamic range of the sensor (content of OUT registers 00h, data expressed as two's complement number). A deviation from the ideal value in this case is called zero-g offset.

Offset is to some extent a result of stress to the MEMS sensor and therefore the offset can slightly change after mounting the sensor onto a printed circuit board or exposing it to extensive mechanical stress. Offset changes little over temperature, see "Linear acceleration zero-g level change vs. temperature" in [Table 3](#). The zero-g level tolerance (TyOff) describes the standard deviation of the range of zero-g levels of a group of sensors.

Zero-rate level describes the actual output signal if there is no angular rate present. The zero-rate level of precise MEMS sensors is, to some extent, a result of stress to the sensor and therefore the zero-rate level can slightly change after mounting the sensor onto a printed circuit board or after exposing it to extensive mechanical stress. This value changes very little over temperature and time (see [Table 3](#)).

## 5 Digital interfaces

### 5.1 I<sup>2</sup>C/SPI interface

The registers embedded inside the ISM330BX may be accessed through both the I<sup>2</sup>C and SPI serial interfaces. The latter may be software configured to operate either in 3-wire or 4-wire interface mode. The device is compatible with SPI modes 0 and 3.

The serial interfaces are mapped to the same pins. To select/exploit the I<sup>2</sup>C interface, the CS line must be tied high (that is, connected to VDDIO).

**Table 11. Serial interface pin description**

Pin name	Pin description
CS	Enables SPI I <sup>2</sup> C/SPI mode selection (1: SPI idle mode / I <sup>2</sup> C communication enabled; 0: SPI communication mode / I <sup>2</sup> C disabled)
SCL/SPC	I <sup>2</sup> C serial clock (SCL) SPI serial port clock (SPC)
SDA/SDI/SDO	I <sup>2</sup> C serial data (SDA) SPI serial data input (SDI) 3-wire interface serial data output (SDO)
SDO/TA0	SPI serial data output (SDO) I <sup>2</sup> C less significant bit of the device address

#### 5.1.1 I<sup>2</sup>C serial interface

The ISM330BX I<sup>2</sup>C is a bus target. The I<sup>2</sup>C is employed to write the data to the registers, whose content can also be read back.

The relevant I<sup>2</sup>C terminology is provided in the table below.

**Table 12. I<sup>2</sup>C terminology**

Term	Description
Transmitter	The device that sends data to the bus
Receiver	The device that receives data from the bus
Controller	The device that initiates a transfer, generates clock signals, and terminates a transfer
Target	The device addressed by the controller

There are two signals associated with the I<sup>2</sup>C bus: the serial clock line (SCL) and the serial data line (SDA). The latter is a bidirectional line used for sending and receiving the data to/from the interface. Both the lines must be connected to VDDIO through external pull-up resistors. When the bus is free, both the lines are high.

The I<sup>2</sup>C interface is implemented with fast mode (400 kHz) I<sup>2</sup>C standards as well as with fast mode plus (1000 kHz).

In order to disable the I<sup>2</sup>C block, I<sub>2</sub>C\_I3C\_disable = 1 must be written in [IF\\_CFG \(03h\)](#).

## 5.1.2 I<sup>2</sup>C operation

The transaction on the bus is started through a start (ST) signal. A start condition is defined as a high to low transition on the data line while the SCL line is held high. After this has been transmitted by the controller, the bus is considered busy. The next byte of data transmitted after the start condition contains the address of the target in the first 7 bits and the eighth bit tells whether the controller is receiving data from the target or transmitting data to the target. When an address is sent, each device in the system compares the first seven bits after a start condition with its address. If they match, the device considers itself addressed by the controller.

The target address (TAD) associated to the ISM330BX is 110101xb. The SDO/TA0 pin can be used to modify the less significant bit of the device address. If the SDO/TA0 pin is connected to the supply voltage, LSb is 1 (address 1101011b). If the SDO/TA0 pin is connected to ground, the LSb value is 0 (address 1101010b). This solution permits to connect and address two different inertial modules to the same I<sup>2</sup>C bus.

Data transfer with acknowledge is mandatory. The transmitter must release the SDA line during the acknowledge pulse. The receiver must then pull the data line low so that it remains stable low during the high period of the acknowledge clock pulse. A receiver that has been addressed is obliged to generate an acknowledge after each byte of data received.

The I<sup>2</sup>C embedded inside the ISM330BX behaves like a target device and the following protocol must be adhered to. After the start condition (ST) a target address is sent, once a target acknowledge (TAK) has been returned, an 8-bit subaddress (SUB) is transmitted. The increment of the address is configured by the [CTRL3 \(12h\) \(IF\\_INC\)](#).

The target address is completed with a read/write bit. If the bit is 1 (read), a repeated start (SR) condition must be issued after the two subaddress bytes. If the bit is 0 (write) the controller transmits to the target with direction unchanged. [Table 13](#) explains how the TAD+read/write bit pattern is composed, listing all the possible configurations.

**Table 13. TAD+read/write patterns**

Command	TAD[6:1]	TAD[0] = TA0	R/W	TAD+R/W
Read	110101	0	1	11010101 (D5h)
Write	110101	0	0	11010100 (D4h)
Read	110101	1	1	11010111 (D7h)
Write	110101	1	0	11010110 (D6h)

**Table 14. Transfer when controller is writing one byte to target**

Controller	ST	TAD + W		SUB		DATA		SP
Target			TAK		TAK		TAK	

**Table 15. Transfer when controller is writing multiple bytes to target**

Controller	ST	TAD + W		SUB		DATA		DATA		SP
Target			TAK		TAK		TAK		TAK	

**Table 16. Transfer when controller is receiving (reading) one byte of data from target**

Controller	ST	TAD + W		SUB		SR	TAD + R			NCAK	SP
Target			TAK		TAK			TAK	DATA		

**Table 17. Transfer when controller is receiving (reading) multiple bytes of data from target**

Controller	ST	TAD+W		SUB		SR	TAD+R			CAK		CAK		NCAK	SP
Target			TAK		TAK			TAK	DATA		DATA		DATA		


Data are transmitted in byte format (DATA). Each data transfer contains 8 bits. The number of bytes transferred per transfer is unlimited. Data is transferred with the most significant bit (MSb) first. If a target receiver does not acknowledge the target address (that is, it is not able to receive because it is performing some real-time function) the data line must be left high by the target. The controller can then abort the transfer. A low to high transition on the SDA line while the SCL line is high is defined as a stop condition. Each data transfer must be terminated by the generation of a stop (SP) condition.

In the presented communication format, CAK is controller acknowledge and NCAK is no controller acknowledge.

### 5.1.3 SPI bus interface

The SPI on the ISM330BX is a bus target that allows writing and reading the registers of the device.

Figure 11. Read and write protocol (in mode 3)

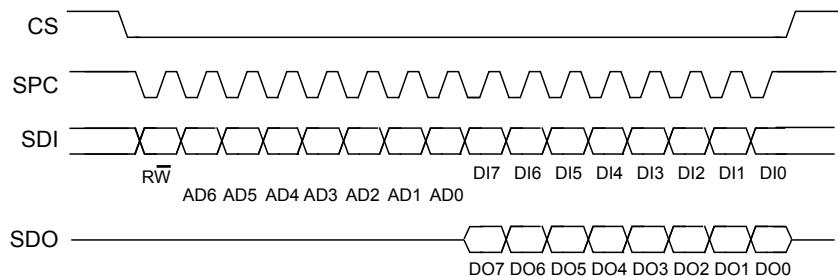

**CS** enables the serial port and it is controlled by the SPI controller. It goes low at the start of the transmission and goes back high at the end. **SPC** is the serial port clock and it is controlled by the SPI controller. It is stopped high when **CS** is high (no transmission). **SDI** and **SDO** are, respectively, the serial port data input and output. Those lines are driven at the falling edge of **SPC** and should be captured at the rising edge of **SPC**.

Both the read register and write register commands are completed in 16 clock pulses or in multiples of 8 in the case of multiple read/write bytes. Bit duration is the time between two falling edges of **SPC**. The first bit (bit 0) starts at the first falling edge of **SPC** after the falling edge of **CS** while the last bit (bit 15, bit 23, ...) starts at the last falling edge of **SPC** just before the rising edge of **CS**.

**bit 0:** **RW** bit. When 0, the data **DI(7:0)** is written into the device. When 1, the data **DO(7:0)** from the device is read. In the latter case, the chip drives **SDO** at the start of bit 8.

**bit 1-7:** address **AD(6:0)**. This is the address field of the indexed register.

**bit 8-15:** data **DI(7:0)** (write mode). This is the data that is written into the device (MSb first).


**bit 8-15:** data **DO(7:0)** (read mode). This is the data that is read from the device (MSb first).

In multiple read/write commands further blocks of 8 clock periods are added. When the **CTRL3 (12h) (IF\_INC)** bit is 0, the address used to read/write data remains the same for every block. When the **CTRL3 (12h) (IF\_INC)** bit is 1, the address used to read/write data is increased at every block.

The function and the behavior of **SDI** and **SDO** remain unchanged.

## 5.1.3.1 SPI read

Figure 12. SPI read protocol (in mode 3)

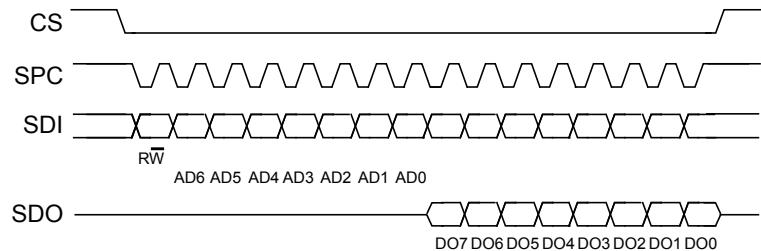

The SPI read command is performed with 16 clock pulses. A multiple byte read command is performed by adding blocks of 8 clock pulses to the previous one.


**bit 0:** READ bit. The value is 1.

**bit 1-7:** address AD(6:0). This is the address field of the indexed register.

**bit 8-15:** data DO(7:0) (read mode). This is the data that is read from the device (MSb first).


**bit 16-...:** data DO(...-8). Further data in multiple byte reads.

Figure 13. Multiple byte SPI read protocol (2-byte example) (in mode 3)

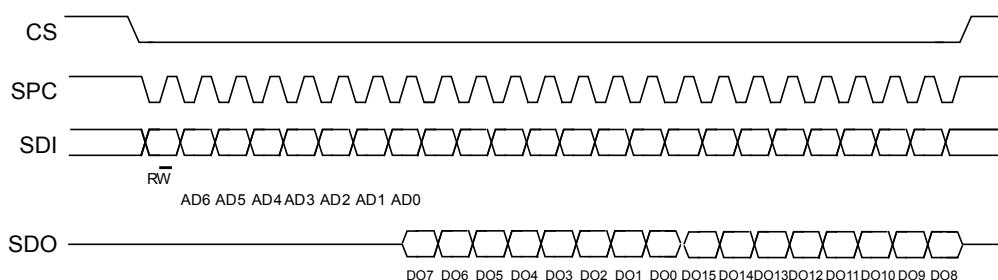

### 5.1.3.2 SPI write

Figure 14. SPI write protocol (in mode 3)

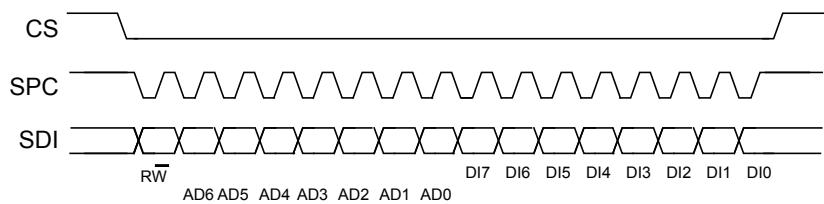

The SPI write command is performed with 16 clock pulses. A multiple byte write command is performed by adding blocks of 8 clock pulses to the previous one.


**bit 0:** WRITE bit. The value is 0.

**bit 1-7:** address AD(6:0). This is the address field of the indexed register.

**bit 8-15:** data DI(7:0) (write mode). This is the data that is written inside the device (MSb first).

**bit 16-... :** data DI(...-8). Further data in multiple byte writes.


Figure 15. Multiple byte SPI write protocol (2-byte example) (in mode 3)

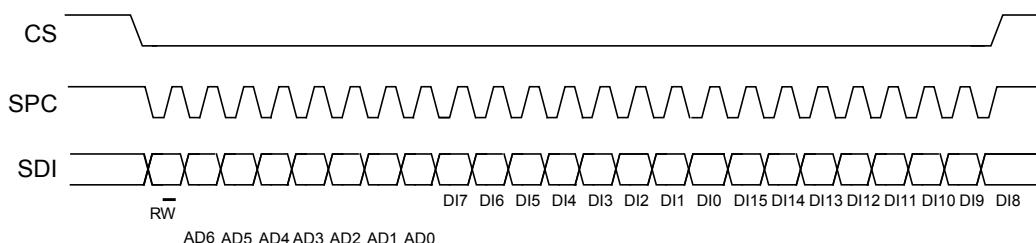

### 5.1.3.3 SPI read in 3-wire mode

3-wire mode is entered by setting the IF\_CFG (03h) (SIM) bit equal to 1 (SPI serial interface mode selection).

Figure 16. SPI read protocol in 3-wire mode (in mode 3)

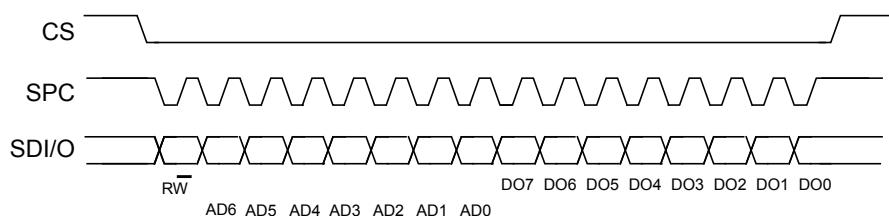

The SPI read command is performed with 16 clock pulses:

**bit 0:** READ bit. The value is 1.

**bit 1-7:** address AD(6:0). This is the address field of the indexed register.

**bit 8-15:** data DO(7:0) (read mode). This is the data that is read from the device (MSb first).

A multiple read command is also available in 3-wire mode.

## 5.2 MIPI I3C® interface

### 5.2.1 MIPI I3C® target interface

The ISM330BX interface includes an MIPI I3C® SDR only target interface (compliant with release 1.1 of the specification) with MIPI I3C® SDR embedded features:

- CCC command
- Direct CCC communication (SET and GET)
- Broadcast CCC communication
- Private communications
- Private read and write for single byte
- Multiple read and write
- In-band interrupt request
- Target reset pattern
- Group address
- Full range VDDIO support
- Asynchronous modes 0 and 1
- Error detection and recovery methods (S0-S6)

In order to disable the MIPI I3C® block, I2C\_I3C\_disable = 1 must be written in [IF\\_CFG \(03h\)](#).

### 5.2.2 MIPI I3C® CCC supported commands

The list of MIPI I3C® CCC commands supported by the device is detailed in the following table.

**Table 18. MIPI I3C® CCC commands**

Command	Command code	Default	Description
ENTDAA	0x07		DAA procedure
SETDASA	0x87		Assign dynamic address using static address 0x6B/0x6A depending on SDO pin
ENECC	0x80 / 0x00		Target activity control (direct and broadcast)
DISEC	0x81/ 0x01		Target activity control (direct and broadcast)
ENTAS0	0x82 / 0x02		Enter activity state (direct and broadcast)
SETXTIME	0x98 / 0x28		Timing information exchange
GETXTIME	0x99	0x06 0x00 0x06 0x92	Timing information exchange
RSTDAA	0x06		Reset the assigned dynamic address (broadcast only)
SETMWL	0x89 / 0x08		Define maximum write length during private write (direct and broadcast)
SETMRL	0x8A / 0x09		Define maximum read length during private read (direct and broadcast)
SETNEWDA	0x88		Change dynamic address
GETMWL	0x8B	0x00 0x08 (2 byte)	Get maximum write length during private write
GETMRL	0x8C	0x00 0x10 0x0A (3 byte)	Get maximum read length during private read

Command	Command code	Default	Description
GETPID	0x8D	0x02	
		0x08	
		0x00	SDO = 1
		0x71	
		0x92	
		0x0B	
		0x02	
		0x08	
		0x00	SDO = 0
		0x71	
		0x12	
		0x0B	
GETBCR	0x8E	0x27 (1 byte)	Bus characteristics register
GETDCR	0x8F	0x44 default	MIPI I3C® device characteristics register
GETSTATUS	0x90	0x00	
		0x00 (2 byte)	Status register
GETMXDS	0x94	0x08 0x60	Return max write and read speed
GETCAPS	0x95	0x00	
		0x11	
		0x18	Provide information about device capabilities and supported extended features
		0x00	
SETGRPA	0x9B		Group address assignment command
RSTGRPA	0x2C / 0x9C		Reset the group address
RSTACT	0x9A / 0x2A		Configure target reset action

### 5.2.3 Overview of antispike filter management

The device acts as a standard I<sup>2</sup>C target as long as it has an I<sup>2</sup>C static address. The device is capable of detecting and disabling the I<sup>2</sup>C antispike filter after detecting the broadcast address (7'h7E/W). In order to guarantee proper behavior of the device, the I3C controller must emit the first START, 7'h7E/W at open-drain speed using I<sup>2</sup>C fast mode plus reference timing.

After detecting the broadcast address, the device can receive the I3C dynamic address following the I3C push-pull timing. If the device is not assigned a dynamic address, then the device continues to operate as an I<sup>2</sup>C device with no antispike filter. For the case in which the host decides to keep the device as I<sup>2</sup>C with an antispike filter, there is a configuration required to keep the antispike filter active. This configuration is done by writing the ASF\_CTRL bit to 1 in the [IF\\_CFG \(03h\)](#) register. This configuration forces the antispike filter to always be turned on instead of being managed by the communication on the bus.

## 5.3 TDM interface

Time-division multiplexing (TDM) is a method of putting multiple data streams in one data signal by separating the signal into many frames. There are many ways to accomplish this.

### 5.3.1 Frame synchronization (WCLK)

The function of the WCLK is simply to identify the beginning of a frame. In particular the frame starts at the rising edge of WCLK and the WCLK widths supported are:

- 50% duty cycle
- One slot width (16 BCLK)
- One BCLK width

In TDM mode, ISM330BX shall output accelerometer data on the TDMout pin at the following sampling rates:

- WCLK = 8 kHz
- WCLK = 16 kHz

### 5.3.2 Serial clock (BCLK)

The sole purpose of the serial clock BCLK is to shift the data out of the serial TDMout port. To this purpose, the TDM interface uses an internal counter that is set to one when the rising edge of the WCLK is detected, and it is reset to zero when the maximum number of BCLK in a WCLK period is reached.

### 5.3.3 Mapping the TDM axes

Within one frame, the data signal (DOUT) is divided into multiple segments. We call each segment a slot in this document.

The data slot width is fixed and equal to 16 bits.

In each slot, data should be left-justified (MSB first).

The number of slots in a WCLK frame can be variable and it depends on the ratio between BCLK and WCLK. However, as depicted in [Table 19](#) and [Table 20](#), only the slots 0, 1, 2 and 4, 5, 6 can be used to send accelerometer data, all the other slots are always set in high-impedance.

The mapping between the input data and the TDM output slots is flexible and can be configured through the I<sup>2</sup>C/SPI/I<sup>3</sup>C register mapping ([TDM\\_CFG0 \(6Ch\)](#)).

In particular two possible configurations can be selected:

- Axes data (Z, Y, X) mapped to TDM slots (0, 1, 2) (mapping = 0)
- Axes data (Z, Y, X) mapped to TDM slots (4, 5, 6) (mapping = 1)

**Table 19. Axes Z, Y, X mapped to SLOT0, SLOT1, SLOT2**

SLOT0	SLOT1	SLOT2	SLOT3	SLOT4	SLOT5	SLOT6	SLOT7	...	SLOTN
Z-axis	Y-axis	X-axis	HiZ	HiZ	HiZ	HiZ	HiZ	...	HiZ

**Table 20. Axes Z, Y, X mapped to SLOT4, SLOT5, SLOT6**

SLOT0	SLOT1	SLOT2	SLOT3	SLOT4	SLOT5	SLOT6	SLOT7	...	SLOTN
HiZ	HiZ	HiZ	HiZ	Z-axis	Y-axis	X-axis	HiZ	...	HiZ


## 5.3.4 TDM configurations

All the ISM330BX TDM configurations programmable through the I<sup>2</sup>C/SPI/I3C interface are detailed in the following subsections.

### 5.3.4.1 Configuration 1

- No delay: SLOT0 data MSB is sampled on the first rising edge of BCLK after rising edge of WCLK (delayed I<sup>2</sup>C register [TDM\\_CFG0 \(6Ch\)](#) bit 6 equal to zero)
- Data valid: data valid on the rising edge of BCLK (data\_valid I<sup>2</sup>C register [TDM\\_CFG0 \(6Ch\)](#) bit 5 equal to zero)

**Figure 17.** WCLK, TDMout change on the falling edge of BCLK and are valid on the rising edge of BCLK, no delay

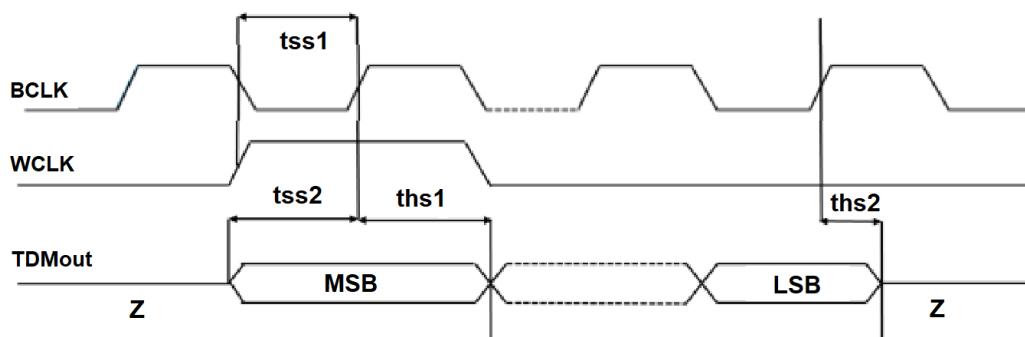


Note: Setup and hold times are defined in [Table 9. TDM timing values](#).

### 5.3.4.2 Configuration 2

- No delay: SLOT0 data MSB is sampled on the first falling edge of BCLK after rising edge of WCLK (delayed I<sup>2</sup>C register [TDM\\_CFG0 \(6Ch\)](#) bit 6 equal to zero)
- Data valid: data valid on the falling edge of BCLK (data\_valid I<sup>2</sup>C register [TDM\\_CFG0 \(6Ch\)](#) bit 5 equal to one)

**Figure 18.** WCLK, TDMout change on the rising edge of BCLK and are valid on the falling edge of BCLK, no delay

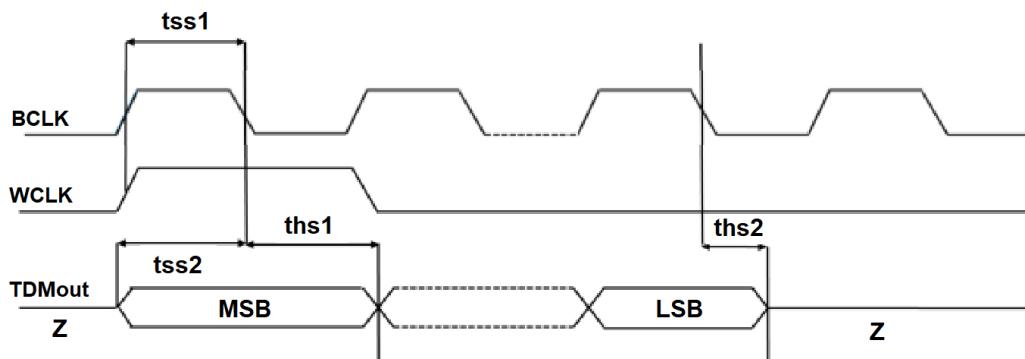


Note: Setup and hold times are defined in [Table 9. TDM timing values](#).

#### 5.3.4.3 Configuration 3

- Delayed: SLOT0 data MSB is sampled on the second rising edge of BCLK after rising edge of WCLK (delayed I<sup>2</sup>C register TDM\_CFG0 (6Ch) bit 6 equal to one)
- Data valid: data valid on the rising edge of BCLK (data\_valid I<sup>2</sup>C register TDM\_CFG0 (6Ch) bit 5 equal to zero)

**Figure 19.** WCLK, TDMout change on the falling edge of BCLK and are valid on the rising edge of BCLK, delayed

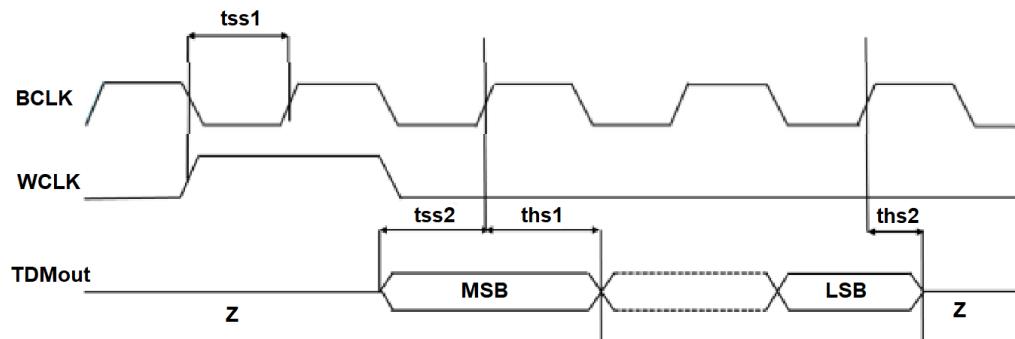


Note: Setup and hold times are defined in Table 9. TDM timing values.

#### 5.3.4.4 Configuration 4

- Delayed: SLOT0 data MSB is sampled on the second falling edge of BCLK after rising edge of WCLK (delayed I<sup>2</sup>C register TDM\_CFG0 (6Ch) bit 6 equal to one)
- Data valid: data valid on the falling edge of BCLK (data\_valid I<sup>2</sup>C register TDM\_CFG0 (6Ch) bit 5 equal to one)

**Figure 20.** WCLK, TDMout change on the rising edge of BCLK and are valid on the falling edge of BCLK, delayed

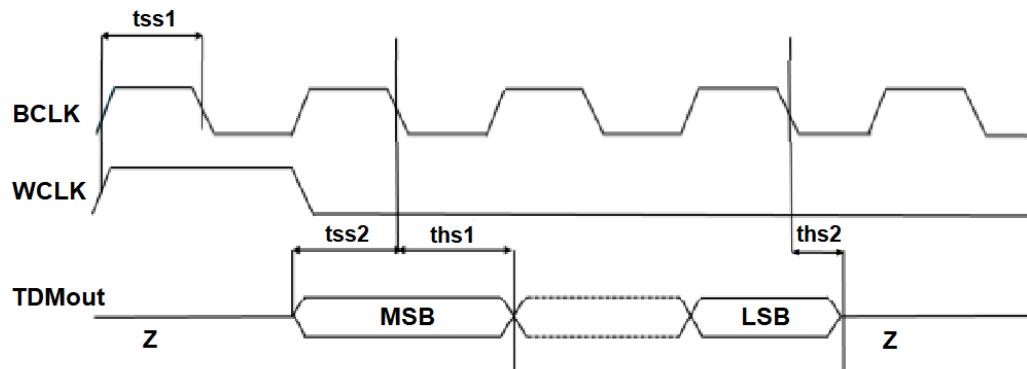

Note: Setup and hold times are defined in Table 9. TDM timing values.

## 6 Functionality

### 6.1 Operating modes

In the ISM330BX, the accelerometer and the gyroscope can be turned on/off independently of each other and are allowed to have different ODRs and power modes.

The ISM330BX has three operating modes available:

- Only accelerometer active and gyroscope in power-down
- Only gyroscope active and accelerometer in power-down
- Both accelerometer and gyroscope sensors active with independent ODR and power mode

The accelerometer is activated from power-down by writing ODR\_XL\_[3:0] in [CTRL1 \(10h\)](#) while the gyroscope is activated from power-down by writing ODR\_G\_[3:0] in [CTRL2 \(11h\)](#). For combo mode, the ODRs are totally independent.

In addition to the accelerometer mode above, a dedicated TDM output can be used for the accelerometer output.

### 6.2 Accelerometer power modes

In the ISM330BX, the accelerometer can be configured in three different operating modes: power-down mode, low-power mode, and high-performance mode.

The operating mode selected depends on the value of the OP\_MODE\_XL\_[2:0] bits in [CTRL1 \(10h\)](#).

If the value of the OP\_MODE\_XL\_[2:0] bits is 000 (default), high-performance mode is valid for all ODRs (from 7.5 Hz up to 3.84 kHz).

In high-performance mode, the analog antialiasing filter is active.

Low-power mode is available for lower ODRs (1.875 Hz, 15 Hz, 30 Hz, 60 Hz, 120 Hz, 240 Hz). The three low-power modes are enabled by setting OP\_MODE\_XL\_[2:0] to 100 (LPM1), 101 (LPM2), 110 (LPM3).


The embedded functions based on accelerometer data (free-fall, 6D, tap/double-tap, wake-up, activity/inactivity, stationary/motion, step counter, step detection, significant motion, tilt) and the FIFO batching functionality are supported in all modes.

## 6.3


## Accelerometer dual-channel mode

The ISM330BX accelerometer block has a dual-channel architecture able to work with two different full scales simultaneously. By default, the device operates in single-channel mode supporting FS scale values from  $\pm 2\text{ g}$  through  $\pm 8\text{ g}$  and different power modes, as described in [Section 6.2: Accelerometer power modes](#). The block diagrams in the following figures show the configuration of acceleration data processing in the two different modes.

**Figure 21. Single-channel mode (XL\_DualC\_EN = 0)**

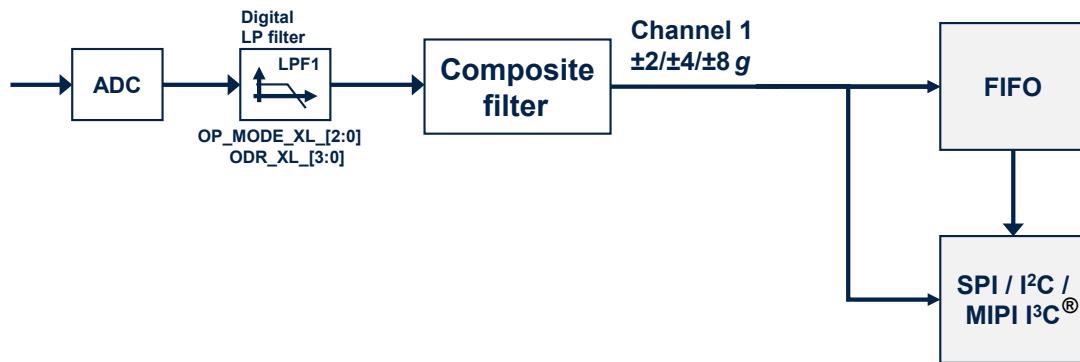

**Figure 22. Dual-channel mode (XL\_DualC\_EN = 1)**

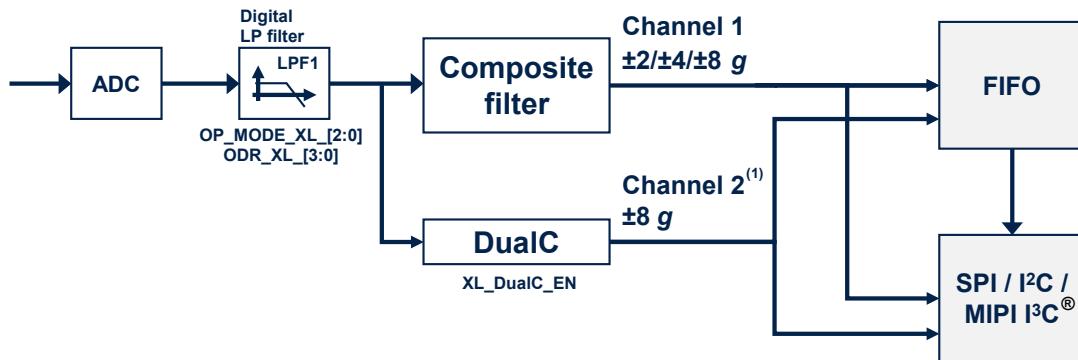

1. In channel 2, the linear acceleration sensitivity is independent of the full scale and fixed at  $0.488\text{ mg/LSB}$ .

The dual-channel functionality can be enabled/disabled by configuring the bit XL\_DualC\_EN to 1 (enable) or to 0 (disable) in [CTRL8 \(17h\)](#).

Referring to [Figure 22. Dual-channel mode \(XL\\_DualC\\_EN = 1\)](#), when the dual-channel mode has been activated:

1. Channel 1 supports user-selectable full-scale acceleration range of  $\pm 2/\pm 4/\pm 8\text{ g}$  based on the value of the FS\_XL\_[1:0] bits in the [CTRL8 \(17h\)](#) register.
2. Channel 2 full scale is set to  $\pm 8\text{ g}$ . Acceleration data are available in the output registers from [UI\\_OUTZ\\_L\\_A\\_DualC \(34h\)](#) and [UI\\_OUTZ\\_H\\_A\\_DualC \(35h\)](#) through [UI\\_OUTX\\_L\\_A\\_DualC \(38h\)](#) and [UI\\_OUTX\\_H\\_A\\_DualC \(39h\)](#).

Note:

In channel 2, the linear acceleration sensitivity is independent of the full scale and fixed at  $0.488\text{ mg/LSB}$ .

## 6.4

### Gyroscope power modes

In the ISM330BX, the gyroscope can be configured in four different operating modes: power-down mode, sleep mode, low-power mode and high-performance mode.

The operating mode selected depends on the value of the OP\_MODE\_G\_[2:0] bits in [CTRL2 \(11h\)](#).

If the value of the OP\_MODE\_G\_[2:0] bits is 000 (default), high-performance mode is valid for all ODRs (from 7.5 Hz up to 3.84 kHz).

Low-power mode is available for lower ODRs (7.5 Hz, 15 Hz, 30 Hz, 60 Hz, 120 Hz, 240 Hz) and it is enabled by setting the the OP\_MODE\_G\_[2:0] bits to 101.

## 6.5

### Analog hub functionality

The ISM330BX embeds an analog hub sensing functionality which is able to connect an analog input and convert it to a digital signal for embedded processing.

In the ISM330BX, the analog hub has a dedicated channel that can be activated by setting the AH\_QVAR\_EN bit and the AH\_QVAR1\_EN / AH\_QVAR2\_EN bits to 1 in the [CTRL7 \(16h\)](#) register.

The accelerometer sensor must be set in high-performance mode when the analog hub channel is enabled.

The analog hub data-ready signal is represented by the AH\_QVARDA bit of the [STATUS\\_REG \(1Eh\)](#) register. This signal can be driven to the INT2 pin by setting the INT2\_DRDY\_AH\_QVAR bit to 1 in the [CTRL7 \(16h\)](#) register.

Analog hub data are available as a 16-bit word in two's complement in the [AH\\_QVAR\\_OUT\\_L \(3Ah\)](#) and [AH\\_QVAR\\_OUT\\_H \(3Bh\)](#) registers.

The AH\_QVAR\_LPF bit in the [CTRL9 \(18h\)](#) register and the AH\_QVAR\_HPF bit in the [CTRL8 \(17h\)](#) register are used to enable/disable, respectively, the embedded digital notch filter and the embedded digital high-pass filter and to set the analog hub data rate and the overall bandwidth of the analog hub channel as shown in [Table 21](#).

Analog hub data can be stored in FIFO (by setting the AH\_QVAR\_BATCH\_EN bit to 1 in the [COUNTER\\_BDR\\_REG1 \(0Bh\)](#) register) and can also be processed by MLC/FSM logic.

The equivalent input impedance of the analog hub buffers can be selected by properly setting the AH\_QVAR\_C\_ZIN\_[1:0] bits in the [CTRL7 \(16h\)](#) register.

Finally, the AH\_QVAR\_SW bit in the [CTRL7 \(16h\)](#) register allows internally swapping the input connected to the AH1/QVAR1 and AH2/QVAR2 pins.

## 6.6

### Qvar functionality

The ISM330BX embeds a Qvar sensor which is able to detect electric charge variations in the proximity of the external electrodes connected to the device.

In the ISM330BX, Qvar has a dedicated channel that can be activated by setting the AH\_QVAR\_EN bit and the AH\_QVAR1\_EN / AH\_QVAR2\_EN bits to 1 in the [CTRL7 \(16h\)](#) register.

The accelerometer sensor must be set in high-performance mode when the Qvar channel is enabled.

The Qvar data-ready signal is represented by the AH\_QVARDA bit of the [STATUS\\_REG \(1Eh\)](#) register. This signal can be driven to the INT2 pin by setting the INT2\_DRDY\_AH\_QVAR bit to 1 in the [CTRL7 \(16h\)](#) register.

Qvar data are available as a 16-bit word in two's complement in the [AH\\_QVAR\\_OUT\\_L \(3Ah\)](#) and [AH\\_QVAR\\_OUT\\_H \(3Bh\)](#) registers.

The AH\_QVAR\_LPF bit in the [CTRL9 \(18h\)](#) register and the AH\_QVAR\_HPF bit in the [CTRL8 \(17h\)](#) register are used to enable/disable, respectively, the embedded digital notch filter and the embedded digital high-pass filter and to set the Qvar data rate and the overall bandwidth of the Qvar channel as shown in [Table 21](#).

**Table 21. Analog hub / Qvar channel ODR and bandwidth configuration**

AH_QVAR_LPF	AH_QVAR_HPF	AH / Qvar ODR (typ.) <sup>(1)</sup>	AH / Qvar bandwidth (typ.) [low, high]
0	0	240 Hz	[0 Hz, 318 Hz]
0	1	240 Hz	[0.15 Hz, 318 Hz]
1	0	120 Hz	[0 Hz, 14.8 Hz] <sup>(2)</sup>
1	1	120 Hz	[0.08 Hz, 14.8 Hz] <sup>(2)</sup>

1. The analog hub / Qvar channel ODR is equal to 240 Hz if the notch filter is disabled, otherwise the ODR is equal to 120 Hz.

2. First -3 dB crossing point


Qvar data can be stored in FIFO (by setting the AH\_QVAR\_BATCH\_EN bit to 1 in the COUNTER\_BDR\_REG1 (0Bh) register) and can also be processed by MLC/FSM logic.

The equivalent input impedance of the Qvar buffers can be selected by properly setting the AH\_QVAR\_C\_ZIN\_[1:0] bits in the CTRL7 (16h) register.

Finally, the AH\_QVAR\_SW bit in the CTRL10 (19h) register allows internally swapping the input electrodes connected to the AH1/QVAR1 and AH2/QVAR2 pins.

## 6.7 Block diagram of filters

Figure 23. Block diagram of filters

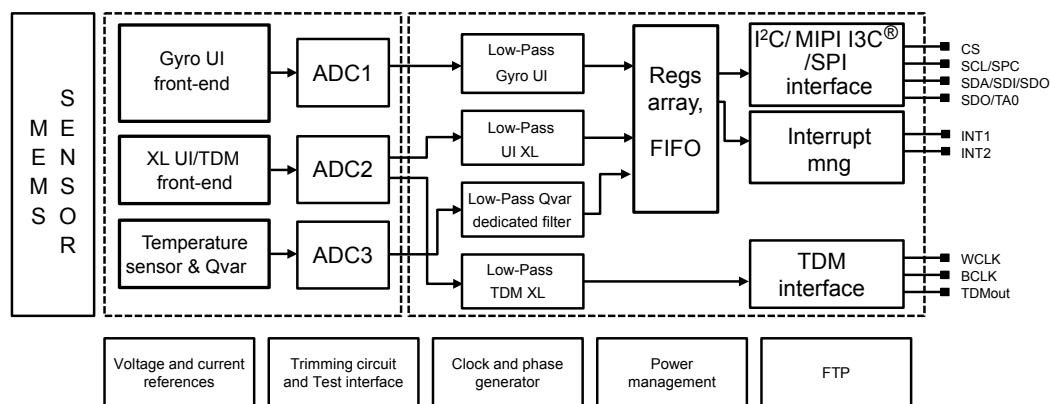


### 6.7.1 Block diagrams of the accelerometer filters

In the ISM330BX, the filtering chain for the accelerometer part is composed of the following:


- Digital filter (LPF1)
- Composite filter

Details of the block diagram appear in the following figure.

**Figure 24. Accelerometer UI chain**

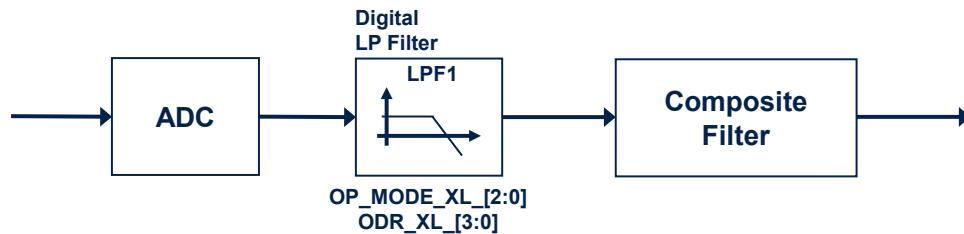

**Figure 25. Accelerometer composite filter**

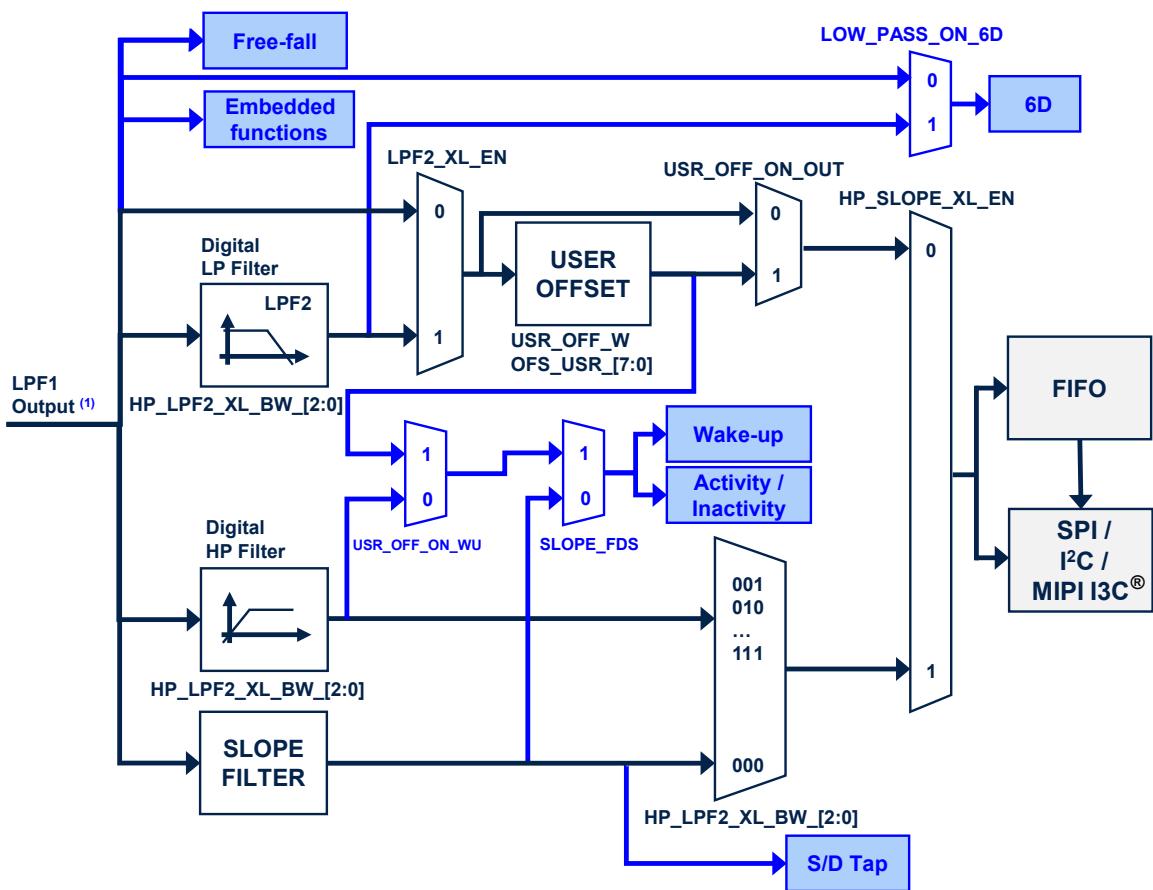

1. The cutoff value of the LPF1 output is ODR/2 when the accelerometer is in high-performance mode. This value is equal to 3100 Hz when the accelerometer is in low-power mode 1 (2 mean), 912 Hz in low-power mode 2 (4 mean) or 431 Hz in low-power mode 3 (8 mean).

Note:

Embedded functions include finite state machine, machine learning core, pedometer, step detector and step counter, significant motion detection, and tilt functions.

### 6.7.1.1 Accelerometer frequency response

The ISM330BX has been designed to offer a flat, wide bandwidth frequency response on 3 axes.

For applications like vibration monitoring, it is possible to use the primary accelerometer chain (the UI chain) with the output over the SPI/I<sup>2</sup>C interface.

The configuration that offers the best results in terms of frequency response is set up as follows:


OP\_MODE\_XL\_[2:0] = 000 (high-performance mode)

ODR\_XL\_[3:0] = 1011 (3.84 kHz)

LPF2\_XL\_EN = 0

The corresponding frequency response diagram is provided in the following figure.

**Figure 26. Frequency response**

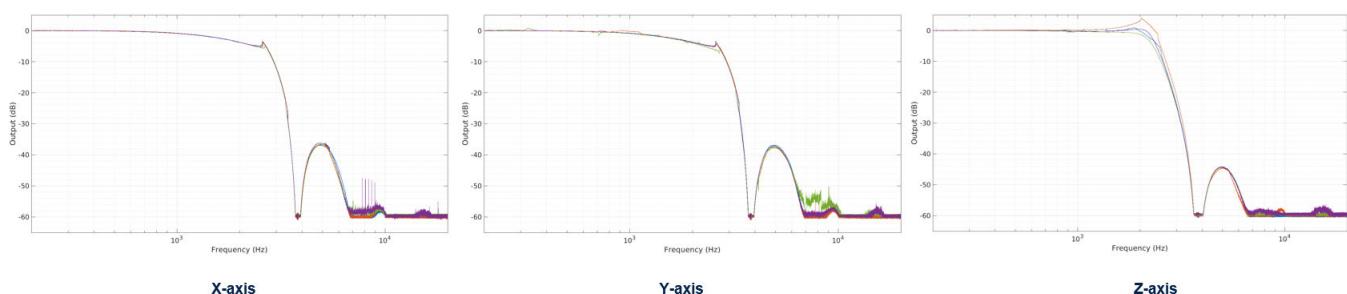

Note:


Frequency response of the accelerometer in HP mode @3.84 kHz ODR. Measured on a mechanical shaker. Characterization data on a limited number of parts. Not measured in production and not guaranteed.

## 6.7.2 Block diagrams of the gyroscope filters

In the ISM330BX, the gyroscope filtering chain depends on the mode configuration:

- Mode 1 (for user interface (UI) functionality through primary interface) and mode 2

**Figure 27. Gyroscope digital chain - mode 1 (UI) and mode 2**

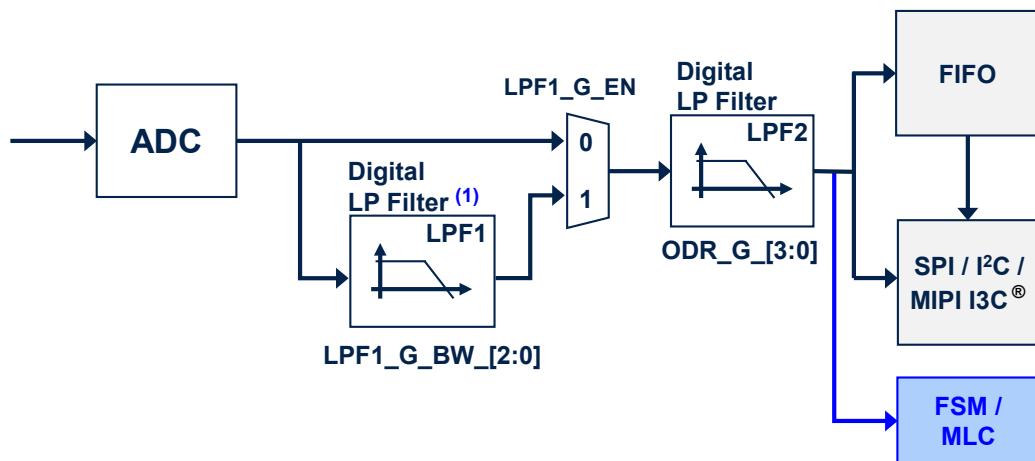

1. The LPF1 filter is available in high-performance mode only. If the gyroscope is configured in low-power mode, the LPF1 filter is bypassed.

In this configuration, the gyroscope ODR is selectable from 7.5 Hz up to 3.84 kHz. A low-pass filter (LPF1) is available, for more details about the filter characteristics see [Table 62. Gyroscope LPF1 + LPF2 bandwidth selection](#).

The digital LPF2 filter's cutoff frequency depends on the selected gyroscope ODR, as indicated in the following table.

**Table 22. Gyroscope LPF2 bandwidth selection**

Gyroscope ODR [Hz]	LPF2 cutoff [Hz]
7.5	3.4
15	6.6
30	13.0
60	24.6
120	49
240	96
480	187
960	342
1.92 kHz	490
3.84 kHz	527

**Note:** Data can be acquired from the output registers and FIFO over the primary I<sup>2</sup>C/MIPI I3C®/SPI interface.

## 6.8 FIFO

The presence of a FIFO allows consistent power saving for the system since the host processor does not need continuously poll data from the sensor, but it can wake up only when needed and burst the significant data out from the FIFO.

The ISM330BX embeds 1.5 KB of data in FIFO (up to 4.5 KB with the compression feature enabled) to store the following data:

- Gyroscope
- Accelerometer
- Qvar
- Step counter
- Timestamp
- Temperature
- MLC features and filters
- SFLP output data (quaternion, gyroscope bias, gravity vector)

Writing data in the FIFO can be configured to be triggered by the:

- Accelerometer / gyroscope data-ready signal
- Step detection signal

The applications have maximum flexibility in choosing the rate of batching for physical sensors with FIFO-dedicated configurations: accelerometer, gyroscope, and temperature sensor batch rates can be selected by the user. The step counter can be stored in FIFO with the associated timestamp each time a step is detected. It is possible to select decimation for timestamp batching in FIFO with a factor of 1, 8, or 32.

The reconstruction of a FIFO stream is a simple task thanks to the FIFO\_DATA\_OUT\_TAG byte that allows recognizing the meaning of a word in FIFO.

FIFO allows correct reconstruction of the timestamp information for each sensor stored in FIFO. If a change in the ODR or BDR (batch data rate) configuration is performed, the application can correctly reconstruct the timestamp and know exactly when the change was applied without disabling FIFO batching. FIFO stores information of the new configuration and timestamp in which the change was applied in the device.

Finally, FIFO embeds a compression algorithm that the user can enable in order to have up to 4.5 KB data stored in FIFO and take advantage of interface communication length for FIFO flushing and communication power consumption.

The programmable FIFO watermark threshold can be set in the [FIFO\\_CTRL1 \(07h\)](#) register using the WTM[7:0] bits. To monitor the FIFO status, dedicated registers ([FIFO\\_STATUS1 \(1Bh\)](#), [FIFO\\_STATUS2 \(1Ch\)](#)) can be read to detect FIFO overrun events, FIFO full status, FIFO empty status, FIFO watermark status, and the number of unread samples stored in the FIFO. To generate dedicated interrupts on the INT1 and INT2 pins of these status events, the configuration can be set in [INT1\\_CTRL \(0Dh\)](#) and [INT2\\_CTRL \(0Eh\)](#).

The FIFO buffer can be configured according to seven different modes:

- Bypass mode
- FIFO mode
- Continuous mode
- Continuous-to-FIFO mode
- ContinuousWTM-to-full mode
- Bypass-to-continuous mode
- Bypass-to-FIFO mode

Each mode is selected by the FIFO\_MODE\_[2:0] bits in the [FIFO\\_CTRL4 \(0Ah\)](#) register.

### 6.8.1 Bypass mode

In bypass mode ([FIFO\\_CTRL4 \(0Ah\)](#)(FIFO\_MODE\_[2:0] = 000), the FIFO is not operational and it remains empty. Bypass mode is also used to reset the FIFO when in FIFO mode.

### 6.8.2 FIFO mode

In FIFO mode ([FIFO\\_CTRL4 \(0Ah\)](#)([FIFO\\_MODE\\_\[2:0\]](#) = 001) data from the output channels are stored in the FIFO until it is full.

To reset FIFO content, bypass mode should be selected by writing [FIFO\\_CTRL4 \(0Ah\)](#)([FIFO\\_MODE\\_\[2:0\]](#)) to 000. After this reset command, it is possible to restart FIFO mode by writing [FIFO\\_CTRL4 \(0Ah\)](#)([FIFO\\_MODE\\_\[2:0\]](#)) to 001.

The FIFO buffer memorizes up to 4.5 KB of data (with compression enabled) but the depth of the FIFO can be resized by setting the WTM[7:0] bits in [FIFO\\_CTRL1 \(07h\)](#). If the STOP\_ON\_WTM bit in [FIFO\\_CTRL2 \(08h\)](#) is set to 1, FIFO depth is limited up to the WTM[7:0] bits in the [FIFO\\_CTRL1 \(07h\)](#) register.

### 6.8.3 Continuous mode

Continuous mode ([FIFO\\_CTRL4 \(0Ah\)](#)([FIFO\\_MODE\\_\[2:0\]](#) = 110) provides a continuous FIFO update: as new data arrives, the older data is discarded.

A FIFO threshold flag [FIFO\\_STATUS2 \(1Ch\)](#)([FIFO\\_WTM\\_IA](#)) is asserted when the number of unread samples in FIFO is greater than or equal to [FIFO\\_CTRL1 \(07h\)](#) (WTM[7:0]).

It is possible to route the [FIFO\\_WTM\\_IA](#) flag to the INT1 pin by writing in register [INT1\\_CTRL \(0Dh\)](#) ([INT1\\_FIFO\\_TH](#)) = 1 or to the INT2 pin by writing in register [INT2\\_CTRL \(0Eh\)](#)([INT2\\_FIFO\\_TH](#)) = 1.

A full-flag interrupt can be enabled, [INT1\\_CTRL \(0Dh\)](#)([INT1\\_FIFO\\_FULL](#)) = 1 or [INT2\\_CTRL \(0Eh\)](#)([INT2\\_FIFO\\_FULL](#)) = 1, in order to indicate FIFO saturation and eventually read its content all at once.

If an overrun occurs, at least one of the oldest samples in FIFO has been overwritten and the [FIFO\\_OVR\\_IA](#) flag in [FIFO\\_STATUS2 \(1Ch\)](#) is asserted.

In order to empty the FIFO before it is full, it is also possible to pull from FIFO the number of unread samples available in [FIFO\\_STATUS1 \(1Bh\)](#) and [FIFO\\_STATUS2 \(1Ch\)](#)([DIFF\\_FIFO\\_\[8:0\]](#)).

### 6.8.4 Continuous-to-FIFO mode

In continuous-to-FIFO mode ([FIFO\\_CTRL4 \(0Ah\)](#)([FIFO\\_MODE\\_\[2:0\]](#) = 011), FIFO behavior changes according to the trigger event detected in one of the following interrupt events:

- Single tap
- Double tap
- Wake-up
- Free-fall
- D6D

When the selected trigger bit is equal to 1, FIFO operates in FIFO mode.

When the selected trigger bit is equal to 0, FIFO operates in continuous mode.

### 6.8.5 ContinuousWTM-to-full mode

In continuousWTM-to-full mode ([FIFO\\_CTRL4 \(0Ah\)](#)([FIFO\\_MODE\\_\[2:0\]](#) = 010), FIFO behavior changes according to the trigger event detected in one of the following interrupt events:

- Single tap
- Double tap
- Wake-up
- Free-fall
- D6D

When the selected trigger bit is equal to 0, FIFO operates in continuous mode with the FIFO size limited to the FIFO watermark level (defined by the WTM[7:0] bits in the [FIFO\\_CTRL1 \(07h\)](#) register).

When the selected trigger bit is equal to 1, FIFO continues to store data until it is full.

### 6.8.6 Bypass-to-continuous mode

In bypass-to-continuous mode ([FIFO\\_CTRL4 \(0Ah\)](#)([FIFO\\_MODE \[2:0\]](#) = 100), data measurement storage inside FIFO operates in continuous mode when selected triggers are equal to 1, otherwise FIFO content is reset (bypass mode).

FIFO behavior changes according to the trigger event detected in one of the following interrupt events:

- Single tap
- Double tap
- Wake-up
- Free-fall
- D6D

### 6.8.7 Bypass-to-FIFO mode

In bypass-to-FIFO mode ([FIFO\\_CTRL4 \(0Ah\)](#)([FIFO\\_MODE \[2:0\]](#) = 111), data measurement storage inside FIFO operates in FIFO mode when selected triggers are equal to 1, otherwise FIFO content is reset (bypass mode).

FIFO behavior changes according to the trigger event detected in one of the following interrupt events:

- Single tap
- Double tap
- Wake-up
- Free-fall
- D6D

### 6.8.8 FIFO reading procedure

The data stored in FIFO are accessible from dedicated registers and each FIFO word is composed of 7 bytes: one tag byte ([FIFO\\_DATA\\_OUT\\_TAG \(78h\)](#), in order to identify the sensor, and 6 bytes of fixed data ([FIFO\\_DATA\\_OUT](#) registers from (79h) to (7Eh)).

The DIFF\_FIFO\_[8:0] field in the [FIFO\\_STATUS1 \(1Bh\)](#) and [FIFO\\_STATUS2 \(1Ch\)](#) registers contains the number of words (1 byte TAG + 6 bytes DATA) collected in FIFO.

In addition, it is possible to configure a counter of the batch events of accelerometer or gyroscope sensors. The flag COUNTER\_BDR\_IA in [FIFO\\_STATUS2 \(1Ch\)](#) alerts that the counter reaches a selectable threshold ([CNT\\_BDR\\_TH \[9:0\]](#) field in [COUNTER\\_BDR\\_REG1 \(0Bh\)](#) and [COUNTER\\_BDR\\_REG2 \(0Ch\)](#)). This allows triggering the reading of FIFO with the desired latency of one single sensor. The sensor is selectable using the TRIG\_COUNTER\_BDR\_[1:0] bits in [COUNTER\\_BDR\\_REG1 \(0Bh\)](#). As for the other FIFO status events, the flag COUNTER\_BDR\_IA can be routed on the INT1 or INT2 pins by asserting the corresponding bits (INT1\_CNT\_BDR of [INT1\\_CTRL \(0Dh\)](#) and INT2\_CNT\_BDR of [INT2\\_CTRL \(0Eh\)](#)).

In order to maximize the amount of accelerometer and gyroscope data in FIFO, the user can enable the compression algorithm by setting to 1 both the FIFO\_COMPR\_EN bit in [EMB\\_FUNC\\_EN\\_B \(05h\)](#) (embedded functions registers bank) and the FIFO\_COMPR\_RT\_EN bit in [FIFO\\_CTRL2 \(08h\)](#). When compression is enabled, it is also possible to force writing non-compressed data at a selectable rate using the UNCOMPR\_RATE\_[1:0] field in [FIFO\\_CTRL2 \(08h\)](#).


Meta information about accelerometer and gyroscope sensor configuration changes can be managed by enabling the ODR\_CHG\_EN bit in [FIFO\\_CTRL2 \(08h\)](#).

## 7 Application hints

### 7.1 ISM330BX electrical connections in mode 1

In this specific example, Qvar is not used.

**Figure 28. ISM330BX electrical connections in mode 1**

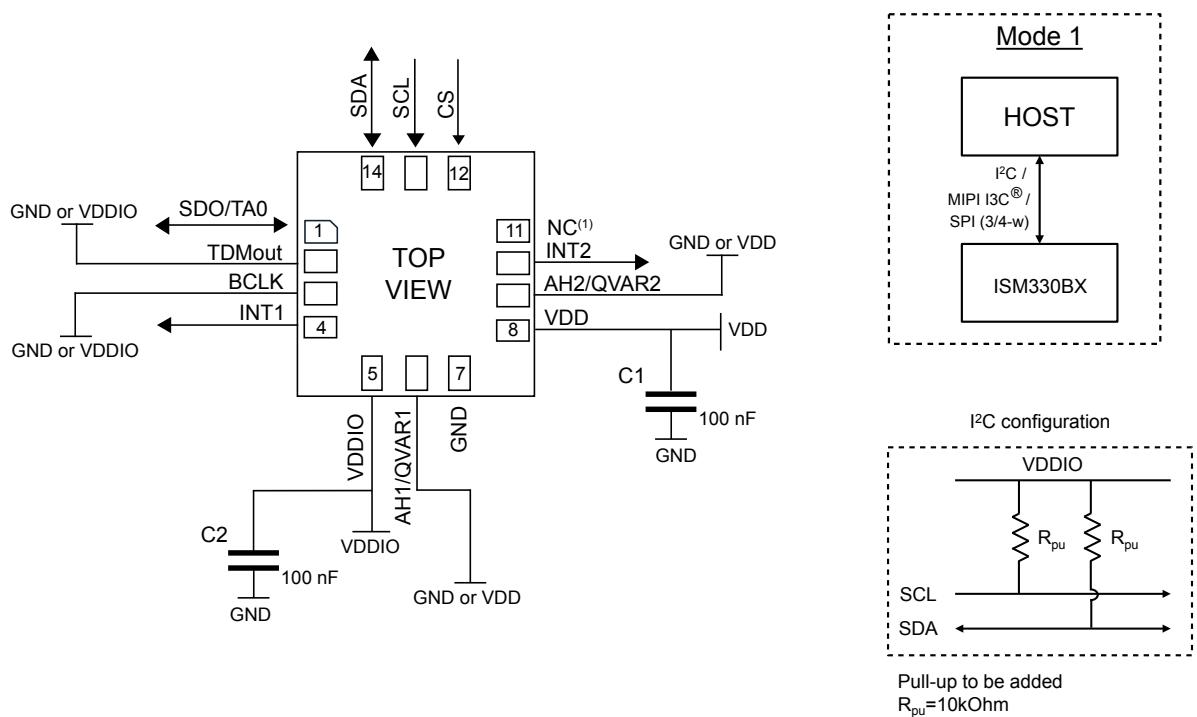

#### 1. Leave pin electrically unconnected and soldered to PCB.

The device core is supplied through the VDD line. Power supply decoupling capacitors ( $C_1, C_2 = 100 \text{ nF}$  ceramic) should be placed as near as possible to the supply pin of the device (common design practice).

The functionality of the device and the measured acceleration/angular rate data is selectable and accessible through the SPI/I<sup>2</sup>C/MIPI I3C® interface.


The functions, the threshold and the timing of the two interrupt pins for each sensor can be completely programmed by the user through the SPI/I<sup>2</sup>C/MIPI I3C® interface.

## 7.2

### ISM330BX electrical connections in mode 2

In this specific example, Qvar is used.

**Figure 29. ISM330BX electrical connections in mode 2**

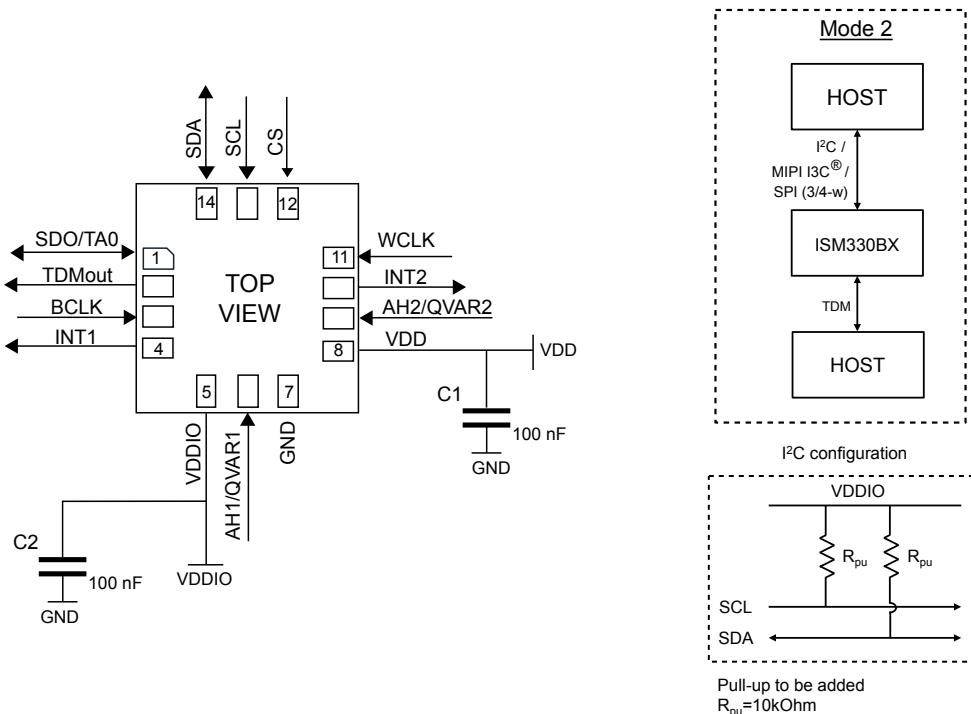

The device core is supplied through the VDD line. Power supply decoupling capacitors ( $C_1, C_2 = 100 \text{ nF}$  ceramic) should be placed as near as possible to the supply pin of the device (common design practice).

The functionality of the device and the measured acceleration/angular rate data is selectable and accessible through the SPI/I<sup>2</sup>C/MIPI I3C<sup>®</sup> primary interface.

The functions, the threshold and the timing of the two interrupt pins for each sensor can be completely programmed by the user through the SPI/I<sup>2</sup>C/MIPI I3C<sup>®</sup> primary interface.


## 7.3

### ISM330BX electrical connections for Qvar

The Qvar core is available in both mode 1 and mode 2 connection modes. It can be enabled by setting to 1 the AH\_QVAR\_EN bit and the AH\_QVAR1\_EN / AH\_QVAR2\_EN bit in the CTRL7 (16h) register.

The Qvar external electrode connections are illustrated in the following figure.

**Figure 30. Qvar external connections to pin 6, 9 (Qvar input)**

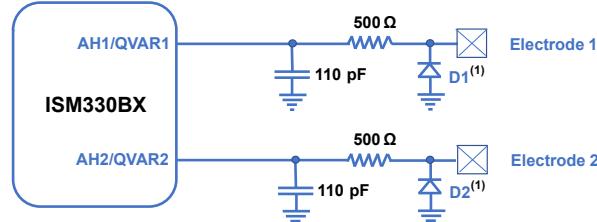

(1) ST ESDALCL5-1BM2 is referenced as an ST catalog product but similar features of other ESD diodes also can be used.

Note:

*Figure 30 provides an example of a test circuit. For a specific application, refer to the related application note.*

## 7.4 ISM330BX internal pin status



**Table 23. Internal pin status**

Pin #	Name	Mode 1 function	Mode 2 function	Pin status mode 1	Pin status mode 2
1	SDO	SPI 4-wire interface serial data output (SDO)	SPI 4-wire interface serial data output (SDO)	Default: input without pull-up Pull-up is enabled if bit SDO_PU_EN = 1 in register PIN_CTRL (02h).	Default: input without pull-up Pull-up is enabled if bit SDO_PU_EN = 1 in register PIN_CTRL (02h).
	TA0	I <sup>2</sup> C least significant bit of the device address (TA0) MIPI I3C® least significant bit of the static address (TA0)	I <sup>2</sup> C least significant bit of the device address (TA0) MIPI I3C® least significant bit of the static address (TA0)		
2	TDMout	Connect to GND or VDDIO	TDM out	Default: input without pull-up Pull-up is enabled if TDM_OUT_PU_EN = 1 in register IF_CFG (03h).	Default: input without pull-up Pull-up is enabled if TDM_OUT_PU_EN = 1 in register IF_CFG (03h).
3	BCLK	Connect to GND or VDDIO	TDM bit clock	Default: input without pull-up	Default: input without pull-up
4	INT1	Programmable interrupt in I <sup>2</sup> C and SPI	Programmable interrupt in I <sup>2</sup> C and SPI	Default: output forced to ground	Default: output forced to ground
5	VDDIO	Power supply for I/O pins	Power supply for I/O pins		
6	AH1/QVAR1	Connect to VDD or GND if the analog hub and/or Qvar are disabled. Connect to the analog input or Qvar electrode 1 if the AH/Qvar function is enabled. <sup>(1)</sup>	Connect to VDD or GND if the analog hub and/or Qvar are disabled. Connect to the analog input or Qvar electrode 1 if the AH/Qvar function is enabled. <sup>(1)</sup>		
7	GND	0 V supply	0 V supply		
8	VDD	Power supply	Power supply		
9	AH2/QVAR2	Connect to VDD or GND if the analog hub and/or Qvar are disabled. Connect to the analog input or Qvar electrode 2 if the AH/Qvar function is enabled. <sup>(1)</sup>	Connect to VDD or GND if the analog hub and/or Qvar are disabled. Connect to the analog input or Qvar electrode 2 if the AH/Qvar function is enabled. <sup>(1)</sup>		
10	INT2	Programmable interrupt in I <sup>2</sup> C and SPI	Programmable interrupt in I <sup>2</sup> C and SPI	Default: output forced to ground	Default: output forced to ground
11	WCLK	Connect to VDDIO or leave unconnected	TDM word clock	Default: input with pull-up Pull-up is disabled if TDM_WCLK_PU_DIS = 1 in register PIN_CTRL (02h).	Default: input with pull-up Pull-up is disabled if TDM_WCLK_PU_DIS = 1 in register PIN_CTRL (02h).
12	CS	I <sup>2</sup> C / SPI mode selection (1: SPI idle mode / I <sup>2</sup> C communication enabled; 0: SPI communication mode / I <sup>2</sup> C disabled)	I <sup>2</sup> C / SPI mode selection (1: SPI idle mode / I <sup>2</sup> C communication enabled; 0: SPI communication mode / I <sup>2</sup> C disabled)	Default: input with pull-up Pull-up is disabled if bit I2C_I3C_disable = 1 in register IF_CFG (03h).	Default: input with pull-up Pull-up is disabled if bit I2C_I3C_disable = 1 in register IF_CFG (03h).
13	SCL	I <sup>2</sup> C / MIPI I3C® serial clock (SCL) / SPI serial port clock (SPC)	I <sup>2</sup> C / MIPI I3C® serial clock (SCL) / SPI serial port clock (SPC)	Default: input without pull-up	Default: input without pull-up
14	SDA	I <sup>2</sup> C / MIPI I3C® serial data (SDA) / SPI serial data input (SDI) / 3-wire interface serial data output (SDO)	I <sup>2</sup> C / MIPI I3C® serial data (SDA) / SPI serial data input (SDI) / 3-wire interface serial data output (SDO)	Default: input without pull-up Pull-up is enabled if bit SDA_PU_EN = 1 in register IF_CFG (03h).	Default: input without pull-up Pull-up is enabled if bit SDA_PU_EN = 1 in register IF_CFG (03h).

1. The analog hub and Qvar functions are enabled by setting the AH\_QVAR\_EN bit to 1 in CTRL7 (16h).

Internal pull-up value is from 30 kΩ to 50 kΩ, depending on VDDIO.

## 8 Register mapping

The table given below provides a list of the 8/16-bit registers embedded in the device and the corresponding addresses.

All these registers are accessible from the primary SPI/I<sup>2</sup>C/MIPI I3C<sup>®</sup> interface only.

Table 24. Registers address map

Name	Type	Register address		Default
		Hex	Binary	
FUNC_CFG_ACCESS	R/W	01	00000001	00000000
PIN_CTRL	R/W	02	00000010	00100011
IF_CFG	R/W	03	00000011	00000000
RESERVED	-	04-06		
FIFO_CTRL1	R/W	07	00000111	00000000
FIFO_CTRL2	R/W	08	00001000	00000000
FIFO_CTRL3	R/W	09	00001001	00000000
FIFO_CTRL4	R/W	0A	00001010	00000000
COUNTER_BDR_REG1	R/W	0B	00001011	00000000
COUNTER_BDR_REG2	R/W	0C	00001100	00000000
INT1_CTRL	R/W	0D	00001101	00000000
INT2_CTRL	R/W	0E	00001110	00000000
WHO_AM_I	R	0F	00001111	01110001
CTRL1	R/W	10	00010000	00000000
CTRL2	R/W	11	00010001	00000000
CTRL3	R/W	12	00010010	01000100
CTRL4	R/W	13	00010011	00000000
CTRL5	R/W	14	00010100	00000000
CTRL6	R/W	15	00010101	00000000
CTRL7	R/W	16	00010110	00000000
CTRL8	R/W	17	0001 0111	00000000
CTRL9	R/W	18	00011000	00000000
CTRL10	R/W	19	00011001	00000000
CTRL_STATUS	R	1A	00011010	output
FIFO_STATUS1	R	1B	00011011	output
FIFO_STATUS2	R	1C	00011100	output
ALL_INT_SRC	R	1D	00011101	output
STATUS_REG	R	1E	00011110	output
RESERVED	-	1F	00011111	
OUT_TEMP_L	R	20	00100000	output
OUT_TEMP_H	R	21	00100001	output
OUTX_L_G	R	22	00100010	output
OUTX_H_G	R	23	00100011	output
OUTY_L_G	R	24	00100100	output

Name	Type	Register address		Default
		Hex	Binary	
OUTY_H_G	R	25	00100101	output
OUTZ_L_G	R	26	00100110	output
OUTZ_H_G	R	27	00100111	output
OUTZ_L_A	R	28	00101000	output
OUTZ_H_A	R	29	00101001	output
OUTY_L_A	R	2A	00101010	output
OUTY_H_A	R	2B	00101011	output
OUTX_L_A	R	2C	00101100	output
OUTX_H_A	R	2D	00101101	output
RESERVED	-	2E-33		
UI_OUTZ_L_A_DualC	R	34	00110100	output
UI_OUTZ_H_A_DualC	R	35	00110101	output
UI_OUTY_L_A_DualC	R	36	00110110	output
UI_OUTY_H_A_DualC	R	37	00110111	output
UI_OUTX_L_A_DualC	R	38	00111000	output
UI_OUTX_H_A_DualC	R	39	00111001	output
AH_QVAR_OUT_L	R	3A	00111010	output
AH_QVAR_OUT_H	R	3B	00111011	output
RESERVED	-	3C-3F		
TIMESTAMP0	R	40	01000000	output
TIMESTAMP1	R	41	01000001	output
TIMESTAMP2	R	42	01000010	output
TIMESTAMP3	R	43	01000011	output
RESERVED	-	44	01000100	
WAKE_UP_SRC	R	45	01000101	output
TAP_SRC	R	46	01000110	output
D6D_SRC	R	47	01000111	output
RESERVED	-	48	01001000	
EMB_FUNC_STATUS_MAINPAGE	R	49	01001001	output
FSM_STATUS_MAINPAGE	R	4A	01001010	output
MLC_STATUS_MAINPAGE	R	4B	01001011	output
RESERVED	-	4C-4E		
INTERNAL_FREQ_FINE	R	4F	01001111	output
FUNCTIONS_ENABLE	R/W	50	01010000	00000000
RESERVED	-	51-53		
INACTIVITY_DUR	R/W	54	01010100	00000100
INACTIVITY_THS	R/W	55	01010101	00000000
TAP_CFG0	R/W	56	01010110	00000000
TAP_CFG1	R/W	57	01010111	00000000
TAP_CFG2	R/W	58	01011000	00000000

Name	Type	Register address		Default
		Hex	Binary	
TAP_THS_6D	R/W	59	01011001	00000000
TAP_DUR	R/W	5A	01011010	00000000
WAKE_UP_THS	R/W	5B	01011011	00000000
WAKE_UP_DUR	RW	5C	01011100	00000000
FREE_FALL	R/W	5D	01011101	00000000
MD1_CFG	R/W	5E	01011110	00000000
MD2_CFG	R/W	5F	01011111	00000000
RESERVED	-	60-62		
EMB_FUNC_CFG	R/W	63	01100011	00000000
RESERVED	-	64-6B		
TDM_CFG0	R/W	6C	01101100	10000000
TDM_CFG1	R/W	6D	01101101	11100000
TDM_CFG2	R/W	6E	01101110	00000001
RESERVED	-	6F-72		
Z_OFS_USR	R/W	73	01110011	00000000
Y_OFS_USR	R/W	74	01110100	00000000
X_OFS_USR	R/W	75	01110101	00000000
RESERVED	-	76-77		
FIFO_DATA_OUT_TAG	R	78	01111000	output
FIFO_DATA_OUT_BYTE_0	R	79	01111001	output
FIFO_DATA_OUT_BYTE_1	R	7A	01111010	output
FIFO_DATA_OUT_BYTE_2	R	7B	01111011	output
FIFO_DATA_OUT_BYTE_3	R	7C	01111100	output
FIFO_DATA_OUT_BYTE_4	R	7D	01111101	output
FIFO_DATA_OUT_BYTE_5	R	7E	01111110	output

Reserved registers must not be changed. Writing to those registers may cause permanent damage to the device.  
The content of the registers that are loaded at boot should not be changed. They contain the factory calibration values. Their content is automatically restored when the device is powered up.

## 9 Register description

The device contains a set of registers which are used to control its behavior and to retrieve linear acceleration, angular rate, temperature and Qvar data. The register addresses, made up of 7 bits, are used to identify them and to write the data through the serial interface.

### 9.1 FUNC\_CFG\_ACCESS (01h)

Enable embedded functions (R/W)

**Table 25. FUNC\_CFG\_ACCESS register**

EMB_FUNC_REG_ACCESS	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	FSM_WR_CTRL_EN	SW_POR	0 <sup>(1)</sup>	0 <sup>(1)</sup>
---------------------	------------------	------------------	------------------	----------------	--------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 26. FUNC\_CFG\_ACCESS register description**

EMB_FUNC_REG_ACCESS	Enables access to the embedded functions configuration registers. <sup>(1)</sup> Default value: 0
FSM_WR_CTRL_EN	Enables the control of the CTRL registers to FSM (FSM can change some configurations of the device autonomously). Default value: 0 (0: disabled; 1: enabled)
SW_POR	Global reset of the device. Default value: 0

1. Details concerning the embedded functions configuration registers are available in [Section 10: Embedded functions register mapping](#) and [Section 11: Embedded functions register description](#).

### 9.2 PIN\_CTRL (02h)

WCLK and SDO pin pull-up register (R/W). This register is not reset during the software reset procedure (see bit 0 of the CTRL3 (12h) register).

**Table 27. PIN\_CTRL register**

TDM_WCLK_PU_DIS	SDO_PU_EN	IBHR_POR_EN	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	1 <sup>(2)</sup>	1 <sup>(2)</sup>
-----------------	-----------	-------------	------------------	------------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.
2. This bit must be set to 1 for the correct operation of the device.

**Table 28. PIN\_CTRL register description**

TDM_WCLK_PU_DIS	Disables pull-up on WCLK pin. Default value: 0 (0: WCLK pin with pull-up; 1: WCLK pin pull-up disconnected)
SDO_PU_EN	Enables pull-up on SDO pin. Default value: 0 (0: SDO pin pull-up disconnected; 1: SDO pin with pull-up)
IBHR_POR_EN	Selects the action the device performs after "reset whole chip" I3C pattern. Default value: 1 (0: configuration reset (software reset + dynamic address reset); (1: global reset (POR reset))

## 9.3 IF\_CFG (03h)

Interface configuration register (R/W). This register is not reset during the software reset procedure (see bit 0 of the **CTRL3 (12h)** register).

**Table 29. IF\_CFG register**

SDA_PU_EN	TDM_OUT_PU_EN	ASF_CTRL	H_LACTIVE	PP_OD	SIM	0 <sup>(1)</sup>	I2C_I3C_disable
-----------	---------------	----------	-----------	-------	-----	------------------	-----------------

1. *This bit must be set to 0 for the correct operation of the device.*

**Table 30. IF\_CFG register description**

SDA_PU_EN	Enables pull-up on SDA pin. Default value: 0 (0: SDA pin pull-up disconnected; 1: SDA pin with pull-up)
TDM_OUT_PU_EN	Enables pull-up on TDMout pin. Default value: 0 (0: TDMout pin pull-up disconnected; 1: TDMout pin with pull-up)
ASF_CTRL	Enables antispike filters. Default value: 0 (0: antispike filters are managed by the protocol and turned off after the broadcast address; 1: antispike filters on SCL and SDA lines are always enabled)
H_LACTIVE	Interrupt activation level. Default value: 0 (0: interrupt output pins active high; 1: interrupt output pins active low)
PP_OD	Push-pull/open-drain selection on INT1 and INT2 pins. Default value: 0 (0: push-pull mode; 1: open-drain mode)
SIM	SPI serial interface mode selection. Default value: 0 (0: 4-wire interface; 1: 3-wire interface)
I2C_I3C_disable	Disables I <sup>2</sup> C and MIPI I3C <sup>®</sup> interfaces. Default value: 0 (0: SPI, I <sup>2</sup> C, and MIPI I3C <sup>®</sup> interfaces enabled; 1: I <sup>2</sup> C and MIPI I3C <sup>®</sup> interfaces disabled)

## 9.4 FIFO\_CTRL1 (07h)

FIFO control register 1 (R/W)

**Table 31. FIFO\_CTRL1 register**

WTM_7	WTM_6	WTM_5	WTM_4	WTM_3	WTM_2	WTM_1	WTM_0
-------	-------	-------	-------	-------	-------	-------	-------

**Table 32. FIFO\_CTRL1 register description**

WTM_[7:0]	FIFO watermark threshold: 1 LSB = TAG (1 byte) + 1 sensor (6 bytes) written in FIFO. Watermark flag rises when the number of bytes written in the FIFO is greater than or equal to the threshold level.
-----------	--

## 9.5 FIFO\_CTRL2 (08h)

FIFO control register 2 (R/W)

**Table 33. FIFO\_CTRL2 register**

STOP_ON_WTM	FIFO_COMPR_RT_EN	0 <sup>(1)</sup>	ODR_CHG_EN	0 <sup>(1)</sup>	UNCOMPR_RATE_1	UNCOMPR_RATE_0	XL_DualC_BATCH_FROM_FSM
-------------	------------------	------------------	------------	------------------	----------------	----------------	-------------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 34. FIFO\_CTRL2 register description**

STOP_ON_WTM	Sensing chain FIFO stop values memorization at threshold level. Default value: 0 (0: FIFO depth is not limited; 1: FIFO depth is limited to threshold level, defined in <a href="#">FIFO_CTRL1 (07h)</a> )
FIFO_COMPR_RT_EN <sup>(1)</sup>	Enables/disables compression algorithm runtime. Default value: 0 (0: FIFO compression algorithm disabled; 1: FIFO compression algorithm enabled)
ODR_CHG_EN	Enables ODR CHANGE virtual sensor to be batched in FIFO. Default value: 0 (0: ODR CHANGE virtual sensor not batched in FIFO; 1: ODR CHANGE virtual sensor batched in FIFO)
UNCOMPR_RATE_[1:0]	This field configures the compression algorithm to write uncompressed data at each rate. (0: uncompressed data writing is not forced (default); 1: uncompressed data every 8 batch data rate; 2: uncompressed data every 16 batch data rate; 3: uncompressed data every 32 batch data rate)
XL_DualC_BATCH_FROM_FSM	When dual-channel mode is enabled, this bit enables FSM-triggered batching in FIFO of accelerometer channel 2. Default value: 0 (0: disabled; 1: enabled)

1. This bit is active when the FIFO\_COMPR\_EN bit of [EMB\\_FUNC\\_EN\\_B \(05h\)](#) is set to 1.

## 9.6 FIFO\_CTRL3 (09h)

FIFO control register 3 (R/W)

**Table 35. FIFO\_CTRL3 register**

BDR_GY_3	BDR_GY_2	BDR_GY_1	BDR_GY_0	BDR_XL_3	BDR_XL_2	BDR_XL_1	BDR_XL_0
----------	----------	----------	----------	----------	----------	----------	----------

**Table 36. FIFO\_CTRL3 register description**

BDR_GY_[3:0]	Selects batch data rate (write frequency in FIFO) for gyroscope data. (0000: gyroscope not batched in FIFO (default); 0001: 1.875 Hz; 0010: 7.5 Hz; 0011: 15 Hz; 0100: 30 Hz; 0101: 60 Hz; 0110: 120 Hz; 0111: 240 Hz; 1000: 480 Hz; 1001: 960 Hz; 1010: 1.92 kHz; 1011: 3.84 kHz; 1100-1111: reserved)
BDR_XL_[3:0]	Selects batch data rate (write frequency in FIFO) for accelerometer data. (0000: accelerometer not batched in FIFO (default); 0001: 1.875 Hz; 0010: 7.5 Hz; 0011: 15 Hz; 0100: 30 Hz; 0101: 60 Hz; 0110: 120 Hz; 0111: 240 Hz; 1000: 480 Hz; 1001: 960 Hz; 1010: 1.92 kHz; 1011: 3.84 kHz; 1100-1111: reserved)

## 9.7 FIFO\_CTRL4 (0Ah)

FIFO control register 4 (R/W)

**Table 37. FIFO\_CTRL4 register**

DEC_TS_BATCH_1	DEC_TS_BATCH_0	ODR_T_BATCH_1	ODR_T_BATCH_0	0 <sup>(1)</sup>	FIFO_MODE_2	FIFO_MODE_1	FIFO_MODE_0
----------------	----------------	---------------	---------------	------------------	-------------	-------------	-------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 38. FIFO\_CTRL4 register description**

DEC_TS_BATCH_[1:0]	Selects decimation for timestamp batching in FIFO. Write rate is the maximum rate between the accelerometer and gyroscope BDR divided by decimation decoder. (00: Timestamp not batched in FIFO (default); 01: decimation 1: max(BDR_XL[Hz],BDR_GY[Hz]) [Hz]; 10: decimation 8: max(BDR_XL[Hz],BDR_GY[Hz])/8 [Hz]; 11: decimation 32: max(BDR_XL[Hz],BDR_GY[Hz])/32 [Hz])
ODR_T_BATCH_[1:0]	Selects batch data rate (write frequency in FIFO) for temperature data (00: temperature not batched in FIFO (default); 01: 1.875 Hz; 10: 15 Hz; 11: 60 Hz)
FIFO_MODE_[2:0]	FIFO mode selection (000: bypass mode: FIFO disabled (default); 001: FIFO mode: stops collecting data when FIFO is full; 010: continuousWTM-to-full mode: continuous mode with FIFO watermark size until trigger is deasserted, then data are stored in FIFO until the buffer is full; 011: continuous-to-FIFO mode: continuous mode until trigger is deasserted, then FIFO mode; 100: bypass-to-continuous mode: bypass mode until trigger is deasserted, then continuous mode; 101: reserved; 110: continuous mode: if the FIFO is full, the new sample overwrites the older one; 111: bypass-to-FIFO mode: bypass mode until trigger is deasserted, then FIFO mode.)

## 9.8 COUNTER\_BDR\_REG1 (0Bh)

Counter batch data rate register 1 (R/W)

**Table 39. COUNTER\_BDR\_REG1 register**

0 <sup>(1)</sup>	TRIG_COUN TER_BDR_1	TRIG_COUN TER_BDR_0	0 <sup>(1)</sup>	0 <sup>(1)</sup>	AH_QVAR_ BATCH_EN	CNT_ BDR_TH_9	CNT_ BDR_TH_8
------------------	------------------------	------------------------	------------------	------------------	----------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 40. COUNTER\_BDR\_REG1 register description**

TRIG_COUNTER_BDR_[1:0]	Selects the trigger for the internal counter of batch events between the accelerometer and gyroscope. (00: accelerometer batch event; 01: gyroscope batch event; 10 – 11: reserved)
AH_QVAR_BATCH_EN	Enables analog hub / Qvar batching in FIFO. Default value: 0 (0: disabled; 1: enabled)
CNT_BDR_TH_[9:8]	In conjunction with CNT_BDR_TH_[7:0] in COUNTER_BDR_REG2 (0Ch), sets the threshold for the internal counter of batch events. When this counter reaches the threshold, the counter is reset and the COUNTER_BDR_IA flag in FIFO_STATUS2 (1Ch) is set to 1.

## 9.9 COUNTER\_BDR\_REG2 (0Ch)

Counter batch data rate register 2 (R/W)

**Table 41. COUNTER\_BDR\_REG2 register**

CNT_ BDR_TH_7	CNT_ BDR_TH_6	CNT_ BDR_TH_5	CNT_ BDR_TH_4	CNT_ BDR_TH_3	CNT_ BDR_TH_2	CNT_ BDR_TH_1	CNT_ BDR_TH_0
------------------	------------------	------------------	------------------	------------------	------------------	------------------	------------------

**Table 42. COUNTER\_BDR\_REG2 register description**

CNT_BDR_TH_[7:0]	In conjunction with CNT_BDR_TH_[9:8] in COUNTER_BDR_REG1 (0Bh), sets the threshold for the internal counter of batch events. When this counter reaches the threshold, the counter is reset and the COUNTER_BDR_IA flag in FIFO_STATUS2 (1Ch) is set to 1.
------------------	---

## 9.10 INT1\_CTRL (0Dh)

INT1 pin control register (R/W)

Each bit in this register enables a signal to be carried over INT1 when the MIPI I3C® dynamic address is not assigned (I<sup>2</sup>C or SPI is used). Some bits can be also used to trigger an IBI (in-band interrupt) when the MIPI I3C® interface is used. The output of the pin is the OR combination of the signals selected here and in [MD1\\_CFG \(5Eh\)](#).

**Table 43. INT1\_CTRL register**

0 <sup>(1)</sup>	INT1_CNT_BDR	INT1_FIFO_FULL	INT1_FIFO_OVR	INT1_FIFO_TH	0 <sup>(1)</sup>	INT1_DRDY_G	INT1_DRDY_XL
------------------	--------------	----------------	---------------	--------------	------------------	-------------	--------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 44. INT1\_CTRL register description**

INT1_CNT_BDR	Enables COUNTER_BDR_IA interrupt on INT1 pin. Default value: 0
INT1_FIFO_FULL	Enables FIFO full flag interrupt on INT1 pin. It can be also used to trigger an IBI when the MIPI I3C® interface is used. Default value: 0
INT1_FIFO_OVR	Enables FIFO overrun interrupt on INT1 pin. It can be also used to trigger an IBI when the MIPI I3C® interface is used. Default value: 0
INT1_FIFO_TH	Enables FIFO threshold interrupt on INT1 pin. It can be also used to trigger an IBI when the MIPI I3C® interface is used. Default value: 0
INT1_DRDY_G	Enables gyroscope data-ready interrupt on INT1 pin. It can be also used to trigger an IBI when the MIPI I3C® interface is used. Default value: 0
INT1_DRDY_XL	Enables accelerometer data-ready interrupt on INT1 pin. It can be also used to trigger an IBI when the MIPI I3C® interface is used. Default value: 0

## 9.11 INT2\_CTRL (0Eh)

INT2 pin control register (R/W)

Each bit in this register enables a signal to be carried over INT2 when the MIPI I3C® dynamic address is not assigned (I<sup>2</sup>C or SPI is used). Some bits can be also used to trigger an IBI when the MIPI I3C® interface is used. The output of the pin is the OR combination of the signals selected here and in [MD2\\_CFG \(5Fh\)](#).

**Table 45. INT2\_CTRL register**

INT2_EMB_FUNC_ENDOP	INT2_CNT_BDR	INT2_FIFO_FULL	INT2_FIFO_OVR	INT2_FIFO_TH	0 <sup>(1)</sup>	INT2_DRDY_G	INT2_DRDY_XL
---------------------	--------------	----------------	---------------	--------------	------------------	-------------	--------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 46. INT2\_CTRL register description**

INT2_EMB_FUNC_ENDOP	Enables routing the embedded functions end of operations signal to the INT2 pin. Default value: 0
INT2_CNT_BDR	Enables COUNTER_BDR_IA interrupt on INT2. Default value: 0
INT2_FIFO_FULL	Enables FIFO full flag interrupt on INT2 pin. Default value: 0
INT2_FIFO_OVR	Enables FIFO overrun interrupt on INT2 pin. Default value: 0
INT2_FIFO_TH	Enables FIFO threshold interrupt on INT2 pin. Default value: 0
INT2_DRDY_G	Gyroscope data-ready interrupt on INT2 pin. Default value: 0
INT2_DRDY_XL	Accelerometer data-ready interrupt on INT2 pin. Default value: 0

## 9.12 WHO\_AM\_I (0Fh)

WHO\_AM\_I register (R). This is a read-only register. Its value is fixed at 71h.

**Table 47. WhoAmI register**

0	1	1	1	0	0	0	1
---	---	---	---	---	---	---	---

## 9.13 CTRL1 (10h)

Accelerometer control register 1 (R/W)

**Table 48. CTRL1 register**

0 <sup>(1)</sup>	OP_MODE_XL_2	OP_MODE_XL_1	OP_MODE_XL_0	ODR_XL_3	ODR_XL_2	ODR_XL_1	ODR_XL_0
------------------	--------------	--------------	--------------	----------	----------	----------	----------

1. This bit must be set to 0 for the correct operation of the device.

**Table 49. CTRL1 register description**

OP_MODE_XL_[2:0]	Accelerometer operating mode selection. (000: high-performance mode (default); 001: reserved; 010: high-performance mode + TDM; 011: reserved; 100: low-power mode 1 (2 mean); 101: low-power mode 2 (4 mean); 110: low-power mode 3 (8 mean); 111: reserved)
ODR_XL_[3:0]	Accelerometer ODR selection (see Table 50)

**Table 50. Accelerometer ODR selection**

ODR_XL_3	ODR_XL_2	ODR_XL_1	ODR_XL_0	ODR selection [Hz]
0	0	0	0	Power-down (default)
0	0	0	1	1.875 Hz (low-power mode)
0	0	1	0	7.5 Hz (high-performance mode)
0	0	1	1	15 Hz (low-power, high-performance mode)
0	1	0	0	30 Hz (low-power, high-performance mode)
0	1	0	1	60 Hz (low-power, high-performance mode)
0	1	1	0	120 Hz (low-power, high-performance mode)
0	1	1	1	240 Hz (low-power, high-performance mode)
1	0	0	0	480 Hz (high-performance mode)
1	0	0	1	960 Hz (high-performance mode)
1	0	1	0	1.92 kHz (high-performance mode)
1	0	1	1	3.84 kHz (high-performance mode)
Others				Reserved

## 9.14 CTRL2 (11h)

Gyroscope control register 2 (R/W)

**Table 51. CTRL2 register**

0 <sup>(1)</sup>	OP_MODE_G_2	OP_MODE_G_1	OP_MODE_G_0	ODR_G_3	ODR_G_2	ODR_G_1	ODR_G_0
------------------	-------------	-------------	-------------	---------	---------	---------	---------

1. This bit must be set to 0 for the correct operation of the device.

**Table 52. CTRL2 register description**

OP_MODE_G_[2:0]	Gyroscope operating mode selection. (000: high-performance mode (default); 001: reserved; 010: reserved; 011: reserved; 100: sleep mode; 101: low-power mode; 110-111: reserved)
ODR_G_[3:0]	Gyroscope output data rate selection. (See <a href="#">Table 53</a> )

**Table 53. Gyroscope ODR selection**

ODR_G_3	ODR_G_2	ODR_G_1	ODR_G_0	ODR [Hz]
0	0	0	0	Power-down (default)
0	0	1	0	7.5 Hz (low-power, high-performance mode)
0	0	1	1	15 Hz (low-power, high-performance mode)
0	1	0	0	30 Hz (low-power, high-performance mode)
0	1	0	1	60 Hz (low-power, high-performance mode)
0	1	1	0	120 Hz (low-power, high-performance mode)
0	1	1	1	240 Hz (low-power, high-performance mode)
1	0	0	0	480 Hz (high-performance mode)
1	0	0	1	960 Hz (high-performance mode)
1	0	1	0	1.92 kHz (high-performance mode)
1	0	1	1	3.84 kHz (high-performance mode)
Others				Reserved

## 9.15 CTRL3 (12h)

Control register 3 (R/W)

**Table 54. CTRL3 register**

BOOT	BDU	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	IF_INC	0 <sup>(1)</sup>	SW_RESET
------	-----	------------------	------------------	------------------	--------	------------------	----------

1. This bit must be set to 0 for the correct operation of the device.

**Table 55. CTRL3 register description**

BOOT	Reboots memory content. This bit is automatically cleared. Default value: 0 (0: normal mode; 1: reboot memory content)
BDU	Block data update. Default value: 1 (0: continuous update; 1: output registers are not updated until LSB and MSB have been read)
IF_INC	Register address automatically incremented during a multiple byte access with a serial interface (I <sup>2</sup> C, MIPI I3C, or SPI). Default value: 1 (0: disabled; 1: enabled)
SW_RESET	Software reset, resets all control registers to their default value. This bit is automatically cleared. Default value: 0 (0: normal mode; 1: reset device)

## 9.16 CTRL4 (13h)

Control register 4 (R/W)

**Table 56. CTRL4 register**

0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	INT2_on_INT1	DRDY_MASK	INT2_DRDY_TEMP	DRDY_PULSED	0 <sup>(1)</sup>
------------------	------------------	------------------	--------------	-----------	----------------	-------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 57. CTRL4 register description**

INT2_on_INT1	Enables routing the embedded functions interrupt signals to the INT1 pin. Default value: 0 <ul style="list-style-type: none"><li>• The corresponding bits in the INT2 control registers need to be enabled.</li><li>• These interrupts are in OR with those enabled on the INT1 pin.</li><li>• They are not fed to the INT2 pin.</li><li>• The movable interrupts are:<ul style="list-style-type: none"><li>– INT2_EMB_FUNC_ENDOP enabled through INT2_CTRL (0Eh)</li><li>– INT2_TIMESTAMP enabled through MD2_CFG (5Fh)</li><li>– INT2_DRDY_TEMP enabled through CTRL4 (13h)</li><li>– INT2_DRDY_AH_QVAR enabled through CTRL7 (16h)</li></ul></li></ul>
DRDY_MASK	Enables / masks data-ready signal. Default value: 0 (0: disabled; 1: masks DRDY on pin (both accelerometer and gyroscope) until filter settling ends (accelerometer and gyroscope independently masked))
INT2_DRDY_TEMP	Enables temperature sensor data-ready interrupt on the INT2 pin. It can be also used to trigger an IBI when the MIPI I3C® interface is used and INT2_ON_INT1 = 1 in CTRL4_C (13h). Default value: 0 (0: disabled; 1: enabled)
DRDY_PULSED	Enables pulsed data-ready mode. Default value: 0 (0: data-ready latched mode (returns to 0 only after the higher part of the associated output register has been read); 1: data-ready pulsed mode (the data-ready pulses are 75 µs long))

## 9.17 CTRL5 (14h)

Control register 5 (R/W)

**Table 58. CTRL5 register**

0 <sup>(1)</sup>	BUS_ACT_SEL_1	BUS_ACT_SEL_0	INT_EN_I3C				
------------------	------------------	------------------	------------------	------------------	---------------	---------------	------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 59. CTRL5 register description**

BUS_ACT_SEL_[1:0]	Bus available time selection for IBI (in-band interrupt): 00: 2 µs; 01: 50 µs (default); 10: 1 ms; 11: 25 ms)
INT_EN_I3C	Enables INT pin when I3C is enabled. Default value: 0 (0: disabled; 1: enabled)

## 9.18 CTRL6 (15h)

Control register 6 (R/W)

**Table 60. CTRL6 register**

0 <sup>(1)</sup>	LPF1_G_BW_2	LPF1_G_BW_1	LPF1_G_BW_0	FS_G_3	FS_G_2	FS_G_1	FS_G_0
------------------	-------------	-------------	-------------	--------	--------	--------	--------

1. This bit must be set to 0 for the correct operation of the device.

**Table 61. CTRL6 register description**

LPF1_G_BW_[2:0]	Gyroscope low-pass filter (LPF1) bandwidth selection <a href="#">Table 62</a> shows the selectable bandwidth values.
FS_G_[3:0]	Gyroscope UI chain full-scale selection: (0000: ±125 dps (default); 0001: ±250 dps; 0010: ±500 dps; 0011: ±1000 dps; 0100: ±2000 dps; 1100: ±4000 dps Others: reserved)

**Table 62.** Gyroscope LPF1 + LPF2 bandwidth selection

LPF1_G_BW_[2:0]	60 Hz	120 Hz	240 Hz	480 Hz	960 Hz	1.92 kHz	3.84 kHz
000	24.6	49	96	174	240	272	279
001	24.6	49	96	157	194	209	212
010	24.6	49	96	131	148	155	156
011	24.6	49	96	186	310	392	410
100	24.8	49	78	94	99	101	102
101	24.7	43	53	57	58	58	58
110	18.0	24.2	27.3	28.4	28.7	28.8	28.9
111	12.1	13.7	14.2	14.3	14.4	14.4	14.4

## 9.19 CTRL7 (16h)

Control register 7 (R/W)

**Table 63.** CTRL7 register

AH_QVAR_EN	INT2_DRDY_AH_QVAR	AH_QVAR_C_ZIN_1	AH_QVAR_C_ZIN_0	AH_QVAR1_EN	AH_QVAR2_EN	0 <sup>(1)</sup>	LPF1_G_EN
------------	-------------------	-----------------	-----------------	-------------	-------------	------------------	-----------

1. This bit must be set to 0 for the correct operation of the device.

**Table 64.** CTRL7 register description

AH_QVAR_EN	Enables the analog hub and Qvar chain. When this bit is set to 1, the analog hub Qvar buffers are connected to the AH1/QVAR1 and AH2/QVAR2 pins. Before setting this bit to 1, the accelerometer and gyroscope sensors have to be configured in power-down mode. Default value: 0 (0: disabled; 1: enabled)
INT2_DRDY_AH_QVAR	Analog hub and Qvar data-ready interrupt on the INT2 pin. Default value: 0 (0: disabled; 1: enabled)
AH_QVAR_C_ZIN_[1:0]	Configures the equivalent input impedance of the analog hub and Qvar buffers. (00: 2.4 GΩ (default); 01: 730 MΩ; 10: 300 MΩ; 11: 235 MΩ)
AH_QVAR1_EN	Enables the AH1/QVAR1 pin. Default value: 0 (0: disabled; 1: enabled)
AH_QVAR2_EN	Enables the AH2/QVAR2 pin. Default value: 0 (0: disabled; 1: enabled)
LPF1_G_EN	Enables the gyroscope digital LPF1 filter

## 9.20 CTRL8 (17h)

Control register 8 (R/W)

**Table 65. CTRL8 register**

HP_LPF2_XL_BW_2	HP_LPF2_XL_BW_1	HP_LPF2_XL_BW_0	AH_QVAR_HPF	XL_DualC_EN	0 <sup>(1)</sup>	FS_XL_1	FS_XL_0
-----------------	-----------------	-----------------	-------------	-------------	------------------	---------	---------

1. This bit must be set to 0 for the correct operation of the device.

**Table 66. CTRL8 register description**

HP_LPF2_XL_BW_[2:0]	Accelerometer LPF2 and HP filter configuration and cutoff setting. Refer to <a href="#">Table 67</a> .
AH_QVAR_HPF	Enables the analog hub / Qvar high-pass filter (refer to <a href="#">Table 21</a> in <a href="#">Section 6.6: Qvar functionality</a> ). Default value: 0 (0: disabled; 1: enabled)
XL_DualC_EN	Enables dual-channel mode. When this bit is set to 1, data with the maximum full scale are sent to the output registers at addresses 34h to 39h. The UI processing chain is used. Default value: 0 (0: disabled; 1: enabled)
FS_XL_[1:0]	Accelerometer full-scale selection: (00: ±2 g; 01: ±4 g; 10: ±8 g; 11: reserved)

**Table 67. Accelerometer bandwidth configurations**

Filter type	HP_SLOPE_XL_EN	LPF2_XL_EN	HP_LPF2_XL_BW_[2:0]	Bandwidth
Low pass	0	1	0	-
			000	ODR/2 <sup>(1)</sup>
			001	ODR/4
			010	ODR/10
			011	ODR/20
			100	ODR/45
			101	ODR/100
			110	ODR/200
			111	ODR/400
High pass	1	-	000	SLOPE (ODR/4)
			001	ODR/10
			010	ODR/20
			011	ODR/45
			100	ODR/100
			101	ODR/200
			110	ODR/400
			111	ODR/800

1. This value is ODR/2 when the accelerometer is in high-performance mode. It is equal to 3100 Hz when the accelerometer is in low-power mode 1 (2 mean), 912 Hz in low-power mode 2 (4 mean) and 431 Hz in low-power mode 3 (8 mean).

## 9.21 CTRL9 (18h)

Control register 9 (R/W)

**Table 68. CTRL9 register**

AH_QVAR_LPF	HP_REF_MODE_XL	XL_FASTSETTL_MODE	HP_SLOPE_XL_EN	LPF2_XL_EN	0 <sup>(1)</sup>	USR_OFF_W	USR_OFF_ON_OUT
-------------	----------------	-------------------	----------------	------------	------------------	-----------	----------------


1. This bit must be set to 0 for the correct operation of the device.

**Table 69. CTRL9 register description**

AH_QVAR_LPF	Enables the analog hub / Qvar notch filter (refer to Table 21 in Section 6.6: Qvar functionality). The ODR is switched to 120 Hz. Default value: 0 (0: disabled; 1: enabled)
HP_REF_MODE_XL	Enables accelerometer high-pass filter reference mode (valid for high-pass path - HP_SLOPE_XL_EN bit must be 1). Default value: 0 (0: disabled, 1: enabled) <sup>(1)</sup>
XL_FASTSETTL_MODE	Enables accelerometer LPF2 and HPF fast-settling mode. The filter sets the first sample after writing this bit. Active only during device exit from power-down mode. Default value: 0 (0: disabled, 1: enabled)
HP_SLOPE_XL_EN	Accelerometer slope filter / high-pass filter selection. Refer to Figure 31. Default value: 0 (0: low-pass filter path selected; 1: high-pass filter path selected)
LPF2_XL_EN	Accelerometer high-resolution selection. Refer to Figure 31. Default value: 0 (0: output from first stage digital filtering selected; 1: output from LPF2 second filtering stage selected)
USR_OFF_W	Weight of XL user offset bits of registers Z_OFS_USR (73h), Y_OFS_USR (74h), X_OFS_USR (75h). Default value: 0 (0: 2 <sup>-10</sup> g/LSB; 1: 2 <sup>-6</sup> g/LSB)
USR_OFF_ON_OUT	Enables the accelerometer user offset correction block; it is valid for the low-pass path. Refer to Figure 31. Default value: 0 (0: accelerometer user offset correction block bypassed; 1: accelerometer user offset correction block enabled)

1. When enabled, the first output data has to be discarded.

Figure 31. Accelerometer block diagram

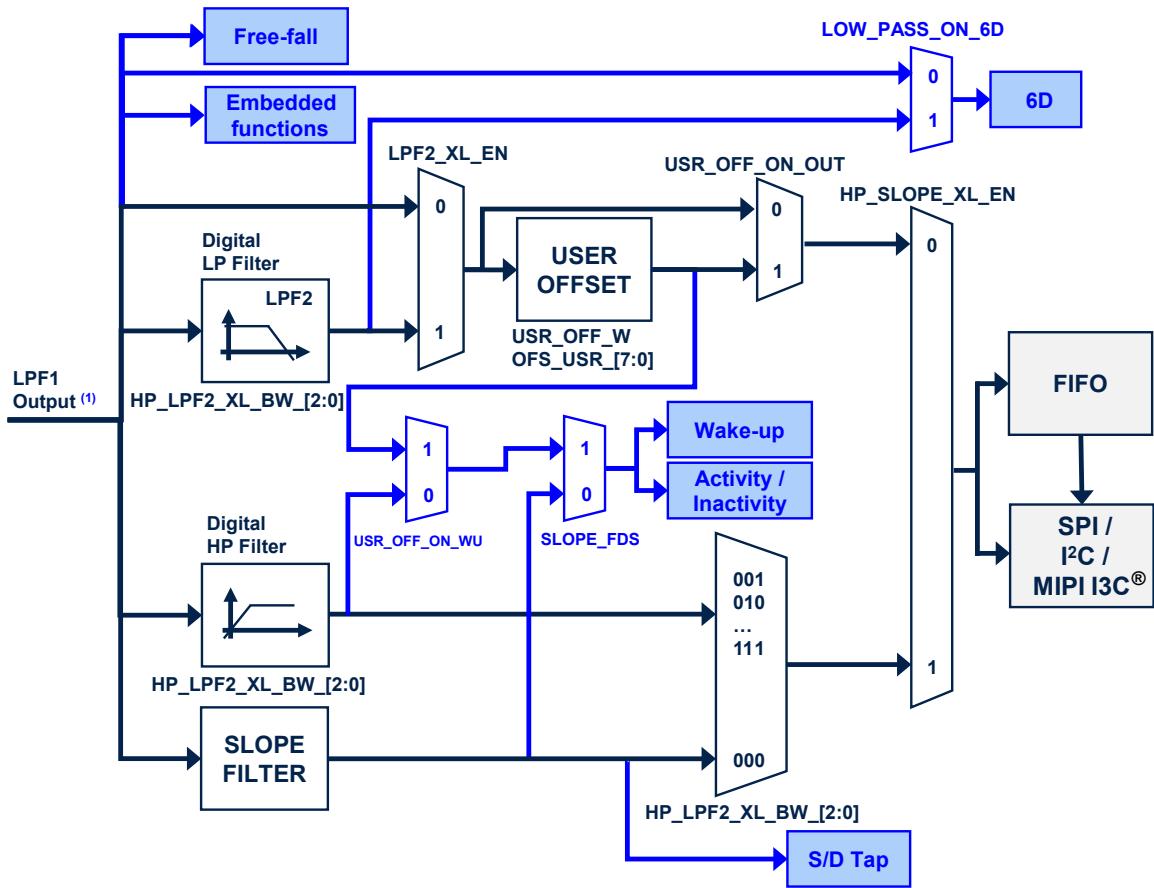

1. The cutoff value of the LPF1 output is ODR/2 when the accelerometer is in high-performance mode. This value is equal to 3100 Hz when the accelerometer is in low-power mode 1 (2 mean), 912 Hz in low-power mode 2 (4 mean) or 431 Hz in low-power mode 3 (8 mean).

## 9.22 CTRL10 (19h)

Control register 10 (R/W)

**Table 70. CTRL10 register**

0 <sup>(1)</sup>	EMB_FUNC_DEBUG	AH_QVAR_SW	XL_ST_OFFSET	ST_G_1	ST_G_0	ST_XL_1	ST_XL_0
------------------	----------------	------------	--------------	--------	--------	---------	---------

1. This bit must be set to 0 for the correct operation of the device.

**Table 71. CTRL10 register description**

EMB_FUNC_DEBUG	Enables debug mode for the embedded functions. (0: disabled; 1: enabled)
AH_QVAR_SW	Swaps the input electrodes of Qvar. Default value: 0 (0: swap disabled; 1: swap enabled)
XL_ST_OFFSET	To be used during the accelerometer self-test procedure. When this bit is set to 1, only the offset is measured; when set to 0, the offset plus the self-test signal is measured. The final self-test output is obtained by the difference between the outputs with XL_ST_OFFSET 1 and 0.
ST_G_[1:0]	Gyroscope self-test selection (00: normal mode (default); 01: positive sign self-test; 10: negative sign self-test; 11: reserved)
ST_XL_[1:0]	Accelerometer self-test selection (00: normal mode (default); 01: positive sign self-test; 10: negative sign self-test; 11: reserved)

## 9.23 CTRL\_STATUS (1Ah)

(R)

**Table 72. CTRL\_STATUS register**

0	0	0	0	0	FSM_WR_CTRL_STATUS	-	0
---	---	---	---	---	--------------------	---	---

**Table 73. CTRL\_STATUS register description**

FSM_WR_CTRL_STATUS	This flag indicates the current controller of the device configuration registers. This flag must be used as an acknowledge flag when the value of the FSM_WR_CTRL_EN bit in the FUNC_CFG_ACCESS (01h) register is changed. Default value: 0 (0: all registers and configurations are writable from the standard interface; 1: some registers and configurations are under FSM control and are in read-only mode from the standard interface).
--------------------	---

## 9.24 FIFO\_STATUS1 (1Bh)

FIFO status register 1 (R)

**Table 74. FIFO\_STATUS1 register**

DIFF_FIFO_7	DIFF_FIFO_6	DIFF_FIFO_5	DIFF_FIFO_4	DIFF_FIFO_3	DIFF_FIFO_2	DIFF_FIFO_1	DIFF_FIFO_0
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

**Table 75. FIFO\_STATUS1 register description**

DIFF_FIFO_[7:0]	Number of unread sensor data (TAG + 6 bytes) stored in FIFO In conjunction with DIFF_FIFO_8 in FIFO_STATUS2 (1Ch).
-----------------	---

## 9.25 FIFO\_STATUS2 (1Ch)

FIFO status register 2 (R)

**Table 76. FIFO\_STATUS2 register**

FIFO_WTM_IA	FIFO_OVR_IA	FIFO_FULL_IA	COUNTER_BDR_IA	FIFO_OVR_LATCHED	0	0	DIFF_FIFO_8
-------------	-------------	--------------	----------------	------------------	---	---	-------------

**Table 77. FIFO\_STATUS2 register description**

FIFO_WTM_IA	FIFO watermark status. Default value: 0 (0: FIFO filling is lower than WTM; 1: FIFO filling is equal to or greater than WTM) Watermark is set through bits WTM[7:0] in FIFO_CTRL1 (07h).
FIFO_OVR_IA	FIFO overrun status. Default value: 0 (0: FIFO is not completely filled; 1: FIFO is completely filled)
FIFO_FULL_IA	Smart FIFO full status. Default value: 0 (0: FIFO is not full; 1: FIFO will be full at the next ODR)
COUNTER_BDR_IA	Counter BDR reaches the CNT_BDR_TH_[10:0] threshold set in COUNTER_BDR_REG1 (0Bh) and COUNTER_BDR_REG2 (0Ch). Default value: 0 This bit is reset when these registers are read.
FIFO_OVR_LATCHED	Latched FIFO overrun status. Default value: 0 This bit is reset when this register is read.
DIFF_FIFO_8	Number of unread sensor data (TAG + 6 bytes) stored in FIFO. Default value: 00 In conjunction with DIFF_FIFO[7:0] in FIFO_STATUS1 (1Bh)

## 9.26 ALL\_INT\_SRC (1Dh)

Source register for all interrupts (R)

**Table 78. ALL\_INT\_SRC register**

EMB_FUNC_IA	0	SLEEP_CHANGE_IA	D6D_IA	0	TAP_IA	WU_IA	FF_IA
-------------	---	-----------------	--------	---	--------	-------	-------

**Table 79. ALL\_INT\_SRC register description**

EMB_FUNC_IA	Embedded functions interrupt status. Default value: 0 (0: embedded functions event not detected; 1: embedded functions event detected)
SLEEP_CHANGE_IA	Detects change event in activity/inactivity status. Default value: 0 (0: change status not detected; 1: change status detected)
D6D_IA	Interrupt active for change in position of portrait, landscape, face-up, face-down. Default value: 0 (0: change in position not detected; 1: change in position detected)
TAP_IA	Single or double-tap event detection status depending on SINGLE_DOUBLE_TAP_bit value (see <a href="#">WAKE_UP_THS (5Bh) register</a> ). Default value: 0 (0: tap event not detected; 1: tap event detected)
WU_IA	Wake-up event status. Default value: 0 (0: event not detected, 1: event detected)
FF_IA	Free-fall event status. Default value: 0 (0: event not detected, 1: event detected)

## 9.27 STATUS\_REG (1Eh)

The STATUS\_REG register is read by the primary interface SPI/I<sup>2</sup>C & MIPI I3C® (R).

**Table 80. STATUS\_REG register**

TIMESTAMP_ENDCOUNT	0	0	0	AH_QVARDA	TDA	GDA	XLDA
--------------------	---	---	---	-----------	-----	-----	------

**Table 81. STATUS\_REG register description**

TIMESTAMP_ENDCOUNT	Alerts timestamp overflow within 5.6 ms
AH_QVARDA	Analog hub or Qvar new data available. Default value: 0 (0: no set of data available at the analog hub or Qvar output; 1: a new set of data is available at the analog hub or Qvar output)
TDA	Temperature new data available. Default: 0 (0: no set of data is available at temperature sensor output; 1: a new set of data is available at temperature sensor output)
GDA	Gyroscope new data available. Default value: 0 (0: no set of data available at gyroscope output; 1: a new set of data is available at gyroscope output)
XLDA	Accelerometer new data available. Default value: 0 (0: no set of data available at accelerometer output; 1: a new set of data is available at accelerometer output)

## 9.28 OUT\_TEMP\_L (20h), OUT\_TEMP\_H (21h)

Temperature data output register (R). L and H registers together express a 16-bit word in two's complement.

**Table 82. OUT\_TEMP\_L register**

Temp7	Temp6	Temp5	Temp4	Temp3	Temp2	Temp1	Temp0
-------	-------	-------	-------	-------	-------	-------	-------

**Table 83. OUT\_TEMP\_H register**

Temp15	Temp14	Temp13	Temp12	Temp11	Temp10	Temp9	Temp8
--------	--------	--------	--------	--------	--------	-------	-------

**Table 84. OUT\_TEMP register description**

Temp[15:0]	Temperature sensor output data The value is expressed in two's complement.
------------	---

## 9.29 OUTX\_L\_G (22h) and OUTX\_H\_G (23h)

Angular rate sensor pitch axis (X) angular rate output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the full-scale ([CTRL6 \(15h\)](#)) and ODR settings ([CTRL2 \(11h\)](#)) of the gyroscope user interface.

**Table 85. OUTX\_L\_G register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 86. OUTX\_H\_G register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 87. OUTX\_G register description**

D[15:0]	Gyroscope UI chain pitch axis (X) angular rate output value
---------	---

## 9.30 OUTY\_L\_G (24h) and OUTY\_H\_G (25h)

Angular rate sensor roll axis (Y) angular rate output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the full-scale ([CTRL6 \(15h\)](#)) and ODR settings ([CTRL2 \(11h\)](#)) of the gyroscope user interface.

**Table 88. OUTY\_L\_G register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 89. OUTY\_H\_G register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 90. OUTY\_G register description**

D[15:0]	Gyroscope UI chain roll axis (Y) angular rate output value
---------	--

## 9.31 OUTZ\_L\_G (26h) and OUTZ\_H\_G (27h)

Angular rate sensor yaw axis (Z) angular rate output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the full-scale ([CTRL6 \(15h\)](#)) and ODR settings ([CTRL2 \(11h\)](#)) of the gyroscope user interface.

**Table 91. OUTZ\_L\_G register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 92. OUTZ\_H\_G register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 93. OUTZ\_H\_G register description**

D[15:0]	Gyroscope UI chain yaw axis (Z) angular rate output value
---------	---

## 9.32 OUTZ\_L\_A (28h) and OUTZ\_H\_A (29h)

Linear acceleration sensor Z-axis output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the full-scale ([CTRL8 \(17h\)](#)) and ODR settings ([CTRL1 \(10h\)](#)) of the accelerometer user interface.

**Table 94. OUTZ\_L\_A register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 95. OUTZ\_H\_A register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 96. OUTZ\_A register description**

D[15:0]	Accelerometer UI chain Z-axis linear acceleration output value
---------	--

## 9.33 OUTY\_L\_A (2Ah) and OUTY\_H\_A (2Bh)

Linear acceleration sensor Y-axis output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the full-scale ([CTRL8 \(17h\)](#)) and ODR settings ([CTRL1 \(10h\)](#)) of the accelerometer user interface.

**Table 97. OUTY\_L\_A register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 98. OUTY\_H\_A register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 99. OUTY\_A register description**

D[15:0]	Accelerometer UI chain Y-axis linear acceleration output value
---------	--

## 9.34 OUTX\_L\_A (2Ch) and OUTX\_H\_A (2Dh)

Linear acceleration sensor X-axis output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the full-scale ([CTRL8 \(17h\)](#)) and ODR settings ([CTRL1 \(10h\)](#)) of the accelerometer user interface.

**Table 100. OUTX\_L\_A register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 101. OUTX\_H\_A register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 102. OUTX\_A register description**

D[15:0]	Accelerometer UI chain X-axis linear acceleration output value
---------	--

### 9.35 UI\_OUTZ\_L\_A\_DualC (34h) and UI\_OUTZ\_H\_A\_DualC (35h)

Linear acceleration sensor Z-axis output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the accelerometer full-scale and ODR settings of the accelerometer dual-channel mode configuration.

**Table 103. UI\_OUTZ\_L\_A\_DualC register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 104. UI\_OUTZ\_H\_A\_DualC register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 105. UI\_OUTZ\_A\_DualC register description**

D[15:0]	Accelerometer Z-axis DualC output expressed in two's complement
---------	---

### 9.36 UI\_OUTY\_L\_A\_DualC (36h) and UI\_OUTY\_H\_A\_DualC (37h)

Linear acceleration sensor Y-axis output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the accelerometer full-scale and ODR settings of the accelerometer dual-channel mode configuration.

**Table 106. UI\_OUTY\_L\_A\_DualC register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 107. UI\_OUTY\_H\_A\_DualC register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 108. UI\_OUTY\_A\_DualC register description**

D[15:0]	Accelerometer Y-axis DualC output expressed in two's complement
---------	---

### 9.37 UI\_OUTX\_L\_A\_DualC (38h) and UI\_OUTX\_H\_A\_DualC (39h)

Linear acceleration sensor X-axis output register (R). The value is expressed as a 16-bit word in two's complement.

Data are according to the accelerometer full-scale and ODR settings of the accelerometer dual-channel mode configuration.

**Table 109. UI\_OUTX\_L\_A\_DualC register**

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----

**Table 110. UI\_OUTX\_H\_A\_DualC register**

D15	D14	D13	D12	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

**Table 111. UI\_OUTX\_A\_DualC register description**

D[15:0]	Accelerometer X-axis DualC output expressed in two's complement
---------	---

## 9.38

### AH\_QVAR\_OUT\_L (3Ah) and AH\_QVAR\_OUT\_H (3Bh)

Analog hub and Qvar data output register (R). L and H registers together express a 16-bit word in two's complement.

**Table 112. AH\_QVAR\_OUT\_L register**

AH_Qvar_7	AH_Qvar_6	AH_Qvar_5	AH_Qvar_4	AH_Qvar_3	AH_Qvar_2	AH_Qvar_1	AH_Qvar_0
-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------

**Table 113. AH\_QVAR\_OUT\_H register**

AH_Qvar_15	AH_Qvar_14	AH_Qvar_13	AH_Qvar_12	AH_Qvar_11	AH_Qvar_10	AH_Qvar_9	AH_Qvar_8
------------	------------	------------	------------	------------	------------	-----------	-----------

**Table 114. AH\_QVAR\_OUT register description**

AH_Qvar_[15:0]	When the analog hub or Qvar is enabled (by setting the AH_QVAR_EN bit to 1 in CTRL7 (16h)), these registers contain the analog hub or Qvar sensor output data. Data are expressed in two's complement.
----------------	---

## 9.39

### TIMESTAMP0 (40h), TIMESTAMP1 (41h), TIMESTAMP2 (42h), and TIMESTAMP3 (43h)

Timestamp first data output register (R). The value is expressed as a 32-bit word and the bit resolution is 21.75  $\mu$ s (typical).

**Table 115. TIMESTAMP output registers**

D31	D30	D29	D28	D27	D26	D25	D24
D23	D22	D21	D20	D19	D18	D17	D16
D15	D14	D13	D12	D11	D10	D9	D8
D7	D6	D5	D4	D3	D2	D1	D0

**Table 116. TIMESTAMP output register description**

D[31:0]	Timestamp output registers: 1LSB = 21.75 $\mu$ s (typical)
---------	--

## 9.40 WAKE\_UP\_SRC (45h)

Wake-up interrupt source register (R)

**Table 117. WAKE\_UP\_SRC register**

0	SLEEP_CHANGE_IA	FF_IA	SLEEP_STATE	WU_IA	Z_WU	Y_WU	X_WU
---	-----------------	-------	-------------	-------	------	------	------

**Table 118. WAKE\_UP\_SRC register description**

SLEEP_CHANGE_IA	Detects change event in activity/inactivity status. Default value: 0 (0: change status not detected; 1: change status detected)
FF_IA	Free-fall event detection status. Default: 0 (0: free-fall event not detected; 1: free-fall event detected)
SLEEP_STATE	Sleep status bit. Default value: 0 (0: activity status; 1: inactivity status)
WU_IA	Wake-up event detection status. Default value: 0 (0: wake-up event not detected; 1: wake-up event detected.)
Z_WU	Wake-up event detection status on Z-axis. Default value: 0 (0: wake-up event on Z-axis not detected; 1: wake-up event on Z-axis detected)
Y_WU	Wake-up event detection status on Y-axis. Default value: 0 (0: wake-up event on Y-axis not detected; 1: wake-up event on Y-axis detected)
X_WU	Wake-up event detection status on X-axis. Default value: 0 (0: wake-up event on X-axis not detected; 1: wake-up event on X-axis detected)

## 9.41 TAP\_SRC (46h)

Tap source register (R)

Table 119. TAP\_SRC register

TAP_IA	SINGLE_TAP	DOUBLE_TAP	0	TAP_SIGN	Z_TAP	Y_TAP	X_TAP
--------	------------	------------	---	----------	-------	-------	-------

Table 120. TAP\_SRC register description

TAP_IA	Tap event detection status. Default: 0 (0: tap event not detected; 1: tap event detected)
SINGLE_TAP	Single-tap event status. Default value: 0 (0: single tap event not detected; 1: single tap event detected)
DOUBLE_TAP	Double-tap event detection status. Default value: 0 (0: double-tap event not detected; 1: double-tap event detected.)
TAP_SIGN	Sign of acceleration detected by tap event. Default: 0 (0: positive sign of acceleration detected by tap event; 1: negative sign of acceleration detected by tap event)
Z_TAP	Tap event detection status on Z-axis. Default value: 0 (0: tap event on Z-axis not detected; 1: tap event on Z-axis detected)
Y_TAP	Tap event detection status on Y-axis. Default value: 0 (0: tap event on Y-axis not detected; 1: tap event on Y-axis detected)
X_TAP	Tap event detection status on X-axis. Default value: 0 (0: tap event on X-axis not detected; 1: tap event on X-axis detected)

## 9.42 D6D\_SRC (47h)

Portrait, landscape, face-up, and face-down source register (R)

**Table 121.** D6D\_SRC register

0	D6D_IA	XH	XL	YH	YL	ZH	ZL
---	--------	----	----	----	----	----	----

**Table 122.** D6D\_SRC register description

D6D_IA	Interrupt active for change position portrait, landscape, face-up, face-down. Default value: 0 (0: change position not detected; 1: change position detected)
XH	X-axis high event (over threshold). Default value: 0 (0: event not detected; 1: event (over threshold) detected)
XL	X-axis low event (under threshold). Default value: 0 (0: event not detected; 1: event (under threshold) detected)
YH	Y-axis high event (over threshold). Default value: 0 (0: event not detected; 1: event (over-threshold) detected)
YL	Y-axis low event (under threshold). Default value: 0 (0: event not detected; 1: event (under threshold) detected)
ZH	Z-axis high event (over threshold). Default value: 0 (0: event not detected; 1: event (over threshold) detected)
ZL	Z-axis low event (under threshold). Default value: 0 (0: event not detected; 1: event (under threshold) detected)

## 9.43 EMB\_FUNC\_STATUS\_MAINPAGE (49h)

Embedded function status register (R)

**Table 123. EMB\_FUNC\_STATUS\_MAINPAGE register**

IS_FSM_LC	0	IS_SIGMOT	IS_TILT	IS_STEP_DET	0	0	0
-----------	---	-----------	---------	-------------	---	---	---

**Table 124. EMB\_FUNC\_STATUS\_MAINPAGE register description**

IS_FSM_LC	Interrupt status bit for FSM long counter timeout interrupt event. (1: interrupt detected; 0: no interrupt)
IS_SIGMOT	Interrupt status bit for significant motion detection (1: interrupt detected; 0: no interrupt)
IS_TILT	Interrupt status bit for tilt detection (1: interrupt detected; 0: no interrupt)
IS_STEP_DET	Interrupt status bit for step detection (1: interrupt detected; 0: no interrupt)

## 9.44 FSM\_STATUS\_MAINPAGE (4Ah)

Finite state machine status register (R)

**Table 125. FSM\_STATUS\_MAINPAGE register**

IS_FSM8	IS_FSM7	IS_FSM6	IS_FSM5	IS_FSM4	IS_FSM3	IS_FSM2	IS_FSM1
---------	---------	---------	---------	---------	---------	---------	---------

**Table 126. FSM\_STATUS\_MAINPAGE register description**

IS_FSM8	Interrupt status bit for FSM8 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM7	Interrupt status bit for FSM7 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM6	Interrupt status bit for FSM6 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM5	Interrupt status bit for FSM5 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM4	Interrupt status bit for FSM4 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM3	Interrupt status bit for FSM3 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM2	Interrupt status bit for FSM2 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM1	Interrupt status bit for FSM1 interrupt event. (1: interrupt detected; 0: no interrupt)

## 9.45 MLC\_STATUS\_MAINPAGE (4Bh)

Machine learning core status register (R)

Table 127. MLC\_STATUS\_MAINPAGE register

0	0	0	0	IS_MLC4	IS_MLC3	IS_MLC2	IS_MLC1
---	---	---	---	---------	---------	---------	---------

Table 128. MLC\_STATUS\_MAINPAGE register description

IS_MLC4	Interrupt status bit for MLC4 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_MLC3	Interrupt status bit for MLC3 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_MLC2	Interrupt status bit for MLC2 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_MLC1	Interrupt status bit for MLC1 interrupt event. (1: interrupt detected; 0: no interrupt)

## 9.46 INTERNAL\_FREQ\_FINE (4Fh)

Internal frequency register (R)

Table 129. INTERNAL\_FREQ\_FINE register

FREQ_FINE_7	FREQ_FINE_6	FREQ_FINE_5	FREQ_FINE_4	FREQ_FINE_3	FREQ_FINE_2	FREQ_FINE_1	FREQ_FINE_0
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

Table 130. INTERNAL\_FREQ\_FINE register description

FREQ_FINE_[7:0]	Difference in percentage of the effective ODR (and timestamp rate) with respect to the typical. Step: 0.13%. 8-bit format, two's complement.
-----------------	---

The actual timestamp resolution and the actual output data rate can be calculated using the following formulas:

$$t_{actual}[s] = \frac{1}{46080 \cdot (1 + 0.0013 \cdot FREQ\_FINE)}$$

$$ODR_{actual}[Hz] = \frac{7680 \cdot (1 + 0.0013 \cdot FREQ\_FINE)}{ODR_{coeff}}$$

Table 131. ODRcoeff values

Selected ODR [Hz]	ODRcoeff
7.5	1024
15	512
30	256
60	128
120	64
240	32
480	16
960	8
1.92 kHz	4
3.84 kHz	2

## 9.47 FUNCTIONS\_ENABLE (50h)

Enable interrupt functions register (R/W)

**Table 132. FUNCTIONS\_ENABLE register**

INTERRUPTS_ENABLE	TIMESTAMP_EN	0 <sup>(1)</sup>	0 <sup>(1)</sup>	DIS_RST_LIR_ALL_INT	0 <sup>(1)</sup>	INACT_EN_1	INACT_EN_0
-------------------	--------------	------------------	------------------	---------------------	------------------	------------	------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 133. FUNCTIONS\_ENABLE register description**

INTERRUPTS_ENABLE	Enables basic interrupts (6D, free-fall, wake-up, tap, activity/inactivity). Default value: 0 (0: interrupt disabled; 1: interrupt enabled)
TIMESTAMP_EN	Enables timestamp counter. The counter is readable in <b>TIMESTAMP0 (40h)</b> , <b>TIMESTAMP1 (41h)</b> , <b>TIMESTAMP2 (42h)</b> , and <b>TIMESTAMP3 (43h)</b> . Default value: 0 (0: disabled; 1: enabled)
DIS_RST_LIR_ALL_INT	When this bit is set to 1, reading the <b>ALL_INT_SRC (1Dh)</b> register does not reset the latched interrupt signals. This can be useful in order to not reset some status flags before reading the corresponding status register. Default value: 0 (0: disabled; 1: enabled)
INACT_EN_[1:0]	Enables activity/inactivity (sleep) function. Default value: 00 (00: stationary/motion-only interrupts generated, accelerometer and gyroscope configuration do not change; 01: sets accelerometer to low-power mode 1 with accelerometer ODR selected through the <b>XL_INACT_ODR_[1:0]</b> bits of the <b>INACTIVITY_DUR (54h)</b> register, gyroscope configuration does not change; 10: sets accelerometer to low-power mode 1 with accelerometer ODR selected through the <b>XL_INACT_ODR_[1:0]</b> bits of the <b>INACTIVITY_DUR (54h)</b> register, gyroscope in sleep mode; 11: sets accelerometer to low-power mode 1 with accelerometer ODR selected through the <b>XL_INACT_ODR_[1:0]</b> bits of the <b>INACTIVITY_DUR (54h)</b> register, gyroscope in power-down mode)

## 9.48 INACTIVITY\_DUR (54h)

Activity/inactivity configuration register (R/W)

**Table 134. INACTIVITY\_DUR register**

SLEEP_STATUS_ON_INT	WU_INACT_THS_W_2	WU_INACT_THS_W_1	WU_INACT_THS_W_0	XL_INACT_ODR_1	XL_INACT_ODR_0	INACT_DUR_1	INACT_DUR_0
---------------------	------------------	------------------	------------------	----------------	----------------	-------------	-------------

**Table 135. INACTIVITY\_DUR register description**

SLEEP_STATUS_ON_INT	Activity/inactivity interrupt mode configuration. If the INT1_SLEEP_CHANGE or INT2_SLEEP_CHANGE bit is enabled, drives the sleep status or sleep change on the INT pin. Default value: 0 (0: sleep change notification on INT pin; 1: sleep status reported on INT pin)
WU_INACT_THS_W_[2:0]	Weight of 1 LSB of wake-up (WU_THS) and activity/inactivity (INACT_THS) threshold. (000: 7.8125 mg/LSB (default); 001: 15.625 mg/LSB; 010: 31.25 mg/LSB; 011: 62.5 mg/LSB; 100: 125 mg/LSB; 101 - 110 - 111: 250 mg/LSB)
XL_INACT_ODR_[1:0]	Selects the ODR_XL target during inactivity. (00: 1.875 Hz; 01: 15 Hz (default); 10: 30 Hz; 11: 60 Hz)
INACT_DUR_[1:0]	Duration in the transition from stationary to motion (from inactivity to activity). (00: transition to motion (activity) immediately at first overthreshold event (default); 01: transition to motion (activity) after two consecutive overthreshold events; 10: transition to motion (activity) after three consecutive overthreshold events; 11: transition to motion (activity) after four consecutive overthreshold events)

## 9.49 INACTIVITY\_THS (55h)

Activity/inactivity threshold setting register (R/W)

**Table 136. INACTIVITY\_THS register**

0 <sup>(1)</sup>	0 <sup>(1)</sup>	INACT_THS_5	INACT_THS_4	INACT_THS_3	INACT_THS_2	INACT_THS_1	INACT_THS_0
------------------	------------------	-------------	-------------	-------------	-------------	-------------	-------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 137. INACTIVITY\_THS register description**

INACT_THS_[5:0]	Activity/inactivity threshold. The resolution of the threshold depends on the value of WU_INACT_THS_W_[2:0] in the INACTIVITY_DUR (54h) register. Default value: 000000
-----------------	---

## 9.50 TAP\_CFG0 (56h)

Tap configuration register 0 (R/W)

**Table 138. TAP\_CFG0 register**

0(1)	LOW_PASS_ON_6D	HW_FUNC_MASK_XL_SETTL	SLOPE_FDS	TAP_Z_EN	TAP_Y_EN	TAP_X_EN	LIR
------	----------------	-----------------------	-----------	----------	----------	----------	-----

1. This bit must be set to 0 for the correct operation of the device.

**Table 139. TAP\_CFG0 register description**

LOW_PASS_ON_6D	LPF2 filter on 6D function selection. Refer to Figure 31. Default value: 0 (0: ODR/2 low-pass filtered data sent to 6D interrupt function; 1: LPF2 output data sent to 6D interrupt function)
HW_FUNC_MASK_XL_SETTL	Enables masking the execution trigger of the basic interrupt functions (6D, free-fall, wake-up, tap, activity/inactivity) when accelerometer data are settling. Default value: 0 (0: disabled; 1: enabled)
SLOPE_FDS	HPF or slope filter selection on wake-up and activity/inactivity functions. Refer to Figure 31. Default value: 0 (0: slope filter applied; 1: HPF applied)
TAP_Z_EN	Enables Z direction in tap recognition. If the Z-axis is disabled, this bit must be set to 0. Default value: 0 (0: Z direction disabled; 1: Z direction enabled)
TAP_Y_EN	Enables Y direction in tap recognition. If the Y-axis is disabled, this bit must be set to 0. Default value: 0 (0: Y direction disabled; 1: Y direction enabled)
TAP_X_EN	Enables X direction in tap recognition. If the X-axis is disabled, this bit must be set to 0. Default value: 0 (0: X direction disabled; 1: X direction enabled)
LIR	Latched interrupt. Default value: 0 (0: interrupt request not latched; 1: interrupt request latched)

## 9.51 TAP\_CFG1 (57h)

Tap configuration register 1 (R/W)

Table 140. TAP\_CFG1 register

TAP_PRIORITY_2	TAP_PRIORITY_1	TAP_PRIORITY_0	TAP_THS_Z_4	TAP_THS_Z_3	TAP_THS_Z_2	TAP_THS_Z_1	TAP_THS_Z_0
----------------	----------------	----------------	-------------	-------------	-------------	-------------	-------------

Table 141. TAP\_CFG1 register description

TAP_PRIORITY_[2:0]	Selection of axis priority for tap detection (see Table 142)
TAP_THS_Z_[4:0]	Z-axis tap recognition threshold. Default value: 0 1 LSB = FS_XL / (2 <sup>5</sup> )

Table 142. TAP priority decoding

TAP_PRIORITY_[2:0]	Max. priority	Mid. priority	Min. priority
000	Z	Y	X
001	Y	Z	X
010	Z	X	Y
011	X	Y	Z
100	Z	Y	X
101	Y	X	Z
110	X	Z	Y
111	X	Y	Z

## 9.52 TAP\_CFG2 (58h)

Tap configuration register 2 (R/W)

Table 143. TAP\_CFG2 register

0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	TAP_THS_Y_4	TAP_THS_Y_3	TAP_THS_Y_2	TAP_THS_Y_1	TAP_THS_Y_0
------------------	------------------	------------------	-------------	-------------	-------------	-------------	-------------

1. This bit must be set to 0 for the correct operation of the device.

Table 144. TAP\_CFG2 register description

TAP_THS_Y_[4:0]	Y-axis tap recognition threshold. Default value: 0 1 LSB = FS_XL / (2 <sup>5</sup> )
-----------------	---

## 9.53 TAP\_THS\_6D (59h)

Portrait/landscape position and tap function threshold register (R/W)

**Table 145. TAP\_THS\_6D register**

0 <sup>(1)</sup>	SIXD_THS_1	SIXD_THS_0	TAP_THS_X_4	TAP_THS_X_3	TAP_THS_X_2	TAP_THS_X_1	TAP_THS_X_0
------------------	------------	------------	-------------	-------------	-------------	-------------	-------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 146. TAP\_THS\_6D register description**

SIXD_THS_[1:0]	Threshold for 6D function. Default value: 00 For details, refer to <a href="#">Table 147</a> .
TAP_THS_X_[4:0]	X-axis recognition threshold. Default value: 0 1 LSB = FS_XL / (2 <sup>5</sup> )

**Table 147. Threshold for D6D function**

SIXD_THS_[1:0]	Threshold value
00	80 degrees
01	70 degrees
10	60 degrees
11	50 degrees

## 9.54 TAP\_DUR (5Ah)

Tap recognition function setting register (R/W)

**Table 148. TAP\_DUR register**

DUR_3	DUR_2	DUR_1	DUR_0	QUIET_1	QUIET_0	SHOCK_1	SHOCK_0
-------	-------	-------	-------	---------	---------	---------	---------

**Table 149. TAP\_DUR register description**

DUR_[3:0]	Duration of maximum time gap for double tap recognition. Default: 0000  When double-tap recognition is enabled, this register expresses the maximum time between two consecutive detected taps to determine a double-tap event. The default value of these bits is 0000b which corresponds to 16/ODR_XL time. If the DUR_[3:0] bits are set to a different value, 1LSB corresponds to 32/ODR_XL time.
QUIET_[1:0]	Expected quiet time after a tap detection. Default value: 00  Quiet time is the time after the first detected tap in which there must not be any overthreshold event. The default value of these bits is 00b which corresponds to 2/ODR_XL time. If the QUIET_[1:0] bits are set to a different value, 1LSB corresponds to 4/ODR_XL time.
SHOCK_[1:0]	Maximum duration of overthreshold event. Default value: 00  Maximum duration is the maximum time of an overthreshold signal detection to be recognized as a tap event. The default value of these bits is 00b which corresponds to 4/ODR_XL time. If the SHOCK_[1:0] bits are set to a different value, 1LSB corresponds to 8/ODR_XL time.

## 9.55 WAKE\_UP\_THS (5Bh)

Single/double-tap selection and wake-up configuration (R/W)

**Table 150. WAKE\_UP\_THS register**

SINGLE_DOUBLE_TAP	USR_OFF_ON_WU	WK_THS_5	WK_THS_4	WK_THS_3	WK_THS_2	WK_THS_1	WK_THS_0
-------------------	---------------	----------	----------	----------	----------	----------	----------

**Table 151. WAKE\_UP\_THS register description**

SINGLE_DOUBLE_TAP	Enables single/double-tap event. Default value: 0  (0: only single-tap event enabled; 1: both single and double-tap events enabled)
USR_OFF_ON_WU	Drives the low-pass filtered data with user offset correction (instead of high-pass filtered data) to the wake-up and the activity/inactivity functions. Refer to Figure 31. Default value: 0
WK_THS_[5:0]	Wake-up threshold. The resolution of the threshold depends on the value of WU_INACT_THS_W_[2:0] in the INACTIVITY_DUR (54h) register. Default value: 000000

## 9.56 WAKE\_UP\_DUR (5Ch)

Free-fall, wake-up, and sleep mode functions duration setting register (R/W)

**Table 152. WAKE\_UP\_DUR register**

FF_DUR_5	WAKE_DUR_1	WAKE_DUR_0	0 <sup>(1)</sup>	SLEEP_DUR_3	SLEEP_DUR_2	SLEEP_DUR_1	SLEEP_DUR_0
----------	------------	------------	------------------	-------------	-------------	-------------	-------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 153. WAKE\_UP\_DUR register description**

FF_DUR_5	Free-fall duration event. Default: 0  For the complete configuration of the free-fall duration, refer to FF_DUR_[4:0] in the <a href="#">FREE_FALL (5Dh) configuration</a> .  1 LSB = 1/ODR_XL time
WAKE_DUR_[1:0]	Wake-up duration event. Default: 00  1 LSB = 1/ODR_XL time
SLEEP_DUR_[3:0]	Duration to go in sleep mode. Default value: 0000 (this corresponds to 16 ODR)  1 LSB = 512/ODR_XL time

## 9.57 FREE\_FALL (5Dh)

Free-fall function duration setting register (R/W)

**Table 154. FREE\_FALL register**

FF_DUR_4	FF_DUR_3	FF_DUR_2	FF_DUR_1	FF_DUR_0	FF_THS_2	FF_THS_1	FF_THS_0
----------	----------	----------	----------	----------	----------	----------	----------

**Table 155. FREE\_FALL register description**

FF_DUR_[4:0]	Free-fall duration event. Default: 0  For the complete configuration of the free-fall duration, refer to FF_DUR_5 in the <a href="#">WAKE_UP_DUR (5Ch) configuration</a> .
FF_THS_[2:0]	Free-fall threshold setting. Default: 000  For details refer to <a href="#">Table 156</a> .

**Table 156. Threshold for free-fall function**

FF_THS_[2:0]	Threshold value
000	156 mg
001	219 mg
010	250 mg
011	312 mg
100	344 mg
101	406 mg
110	469 mg
111	500 mg

## 9.58 MD1\_CFG (5Eh)

Functions routing to INT1 pin register (R/W). Each bit in this register enables a signal to be carried over the INT1 pin. The output of the pin is the OR combination of the signals selected here and in the [INT1\\_CTRL \(0Dh\)](#) register.

**Table 157. MD1\_CFG register**

INT1_SLEEP_CHANGE	INT1_SINGLE_TAP	INT1_WU	INT1_FF	INT1_DOUBLE_TAP	INT1_6D	INT1_EMB_FUNC	0 <sup>(1)</sup>
-------------------	-----------------	---------	---------	-----------------	---------	---------------	------------------

1. *This bit must be set to 0 for the correct operation of the device.*

**Table 158. MD1\_CFG register description**

INT1_SLEEP_CHANGE <sup>(1)</sup>	Routing activity/inactivity recognition event to INT1. Default: 0 (0: routing activity/inactivity event to INT1 disabled; 1: routing activity/inactivity event to INT1 enabled)
INT1_SINGLE_TAP	Routing single-tap recognition event to INT1. Default: 0 (0: routing single-tap event to INT1 disabled; 1: routing single-tap event to INT1 enabled)
INT1_WU	Routing wake-up event to INT1. Default value: 0 (0: routing wake-up event to INT1 disabled; 1: routing wake-up event to INT1 enabled)
INT1_FF	Routing free-fall event to INT1. Default value: 0 (0: routing free-fall event to INT1 disabled; 1: routing free-fall event to INT1 enabled)
INT1_DOUBLE_TAP	Routing tap event to INT1. Default value: 0 (0: routing double-tap event to INT1 disabled; 1: routing double-tap event to INT1 enabled)
INT1_6D	Routing 6D event to INT1. Default value: 0 (0: routing 6D event to INT1 disabled; 1: routing 6D event to INT1 enabled)
INT1_EMB_FUNC	Routing embedded functions event to INT1. Default value: 0 (0: routing embedded functions event to INT1 disabled; 1: routing embedded functions event to INT1 enabled)

1. *Activity/inactivity interrupt mode (sleep change or sleep status) depends on the SLEEP\_STATUS\_ON\_INT bit in the [INACTIVITY\\_DUR \(54h\)](#) register.*

## 9.59 MD2\_CFG (5Fh)

Functions routing to INT2 pin register (R/W). Each bit in this register enables a signal to be carried over the INT1 pin. The output of the pin is the OR combination of the signals selected here and in the INT2\_CTRL (0Eh) register.

Table 159. MD2\_CFG register

INT2_SLEEP_CHANGE	INT2_SINGLE_TAP	INT2_WU	INT2_FF	INT2_DOUBLE_TAP	INT2_6D	INT2_EMB_FUNC	INT2_TIMESTAMP
-------------------	-----------------	---------	---------	-----------------	---------	---------------	----------------

Table 160. MD2\_CFG register description

INT2_SLEEP_CHANGE <sup>(1)</sup>	Routing activity/inactivity recognition event to INT2. Default: 0 (0: routing activity/inactivity event to INT2 disabled; 1: routing activity/inactivity event to INT2 enabled)
INT2_SINGLE_TAP	Single-tap recognition routing to INT2. Default: 0 (0: routing single-tap event to INT2 disabled; 1: routing single-tap event to INT2 enabled)
INT2_WU	Routing wake-up event to INT2. Default value: 0 (0: routing wake-up event to INT2 disabled; 1: routing wake-up event to INT2 enabled)
INT2_FF	Routing free-fall event to INT2. Default value: 0 (0: routing free-fall event to INT2 disabled; 1: routing free-fall event to INT2 enabled)
INT2_DOUBLE_TAP	Routing tap event to INT2. Default value: 0 (0: routing double-tap event to INT2 disabled; 1: routing double-tap event to INT2 enabled)
INT2_6D	Routing 6D event to INT2. Default value: 0 (0: routing 6D event to INT2 disabled; 1: routing 6D event to INT2 enabled)
INT2_EMB_FUNC	Routing embedded functions event to INT2. Default value: 0 (0: routing embedded functions event to INT2 disabled; 1: routing embedded functions event to INT2 enabled)
INT2_TIMESTAMP	Enables routing the alert for timestamp overflow within 5.6 ms to the INT2 pin.

1. Activity/inactivity interrupt mode (sleep change or sleep status) depends on the SLEEP\_STATUS\_ON\_INT bit in the INACTIVITY\_DUR (54h) register.

## 9.60 EMB\_FUNC\_CFG (63h)

Embedded functions configuration register (R/W)

**Table 161. EMB\_FUNC\_CFG register**

XL_DualC_BATCH_FROM_IF	0 <sup>(1)</sup>	EMB_FUNC_IRQ_MASK_G_SETTL	EMB_FUNC_IRQ_MASK_XL_SETTL	EMB_FUNC_DISABLE	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>
------------------------	------------------	---------------------------	----------------------------	------------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 162. EMB\_FUNC\_CFG register description**

XL_DualC_BATCH_FROM_IF	When dual-channel mode is enabled, this bit enables batching the accelerometer channel 2 in FIFO. Default value: 0 (0: disabled; 1: enabled)
EMB_FUNC_IRQ_MASK_G_SETTL	Enables / masks execution trigger of the embedded functions when gyroscope data are settling. Default value: 0 (0: disabled; 1: masks execution trigger of the embedded functions until gyroscope filter settling ends)
EMB_FUNC_IRQ_MASK_XL_SETTL	Enables / masks execution trigger of the embedded functions when accelerometer data are settling. Default value: 0 (0: disabled; 1: masks execution trigger of the embedded functions until accelerometer filter settling ends)
EMB_FUNC_DISABLE	Disables execution of the embedded functions. Default value: 0 (0: disabled; 1: embedded functions execution trigger is not generated anymore and all initialization procedures are forced when this bit is set back to 0).

## 9.61 TDM\_CFG0 (6Ch)

TDM configuration register 0 (R/W)

**Table 163. TDM\_CFG0 register**

1 <sup>(1)</sup>	TDM_DELAYED_CFG	TDM_BCLK_EDGE_SEL	TDM_SLOT_SEL	0 <sup>(2)</sup>	TDM_WCLK_1	TDM_WCLK_0	TDM_WCLK_BCLK_SEL
------------------	-----------------	-------------------	--------------	------------------	------------	------------	-------------------

1. This bit must be set to 1 for the correct operation of the device.
2. This bit must be set to 0 for the correct operation of the device.

**Table 164. TDM\_CFG0 register description**

TDM_DELAYED_CFG	Enables TDM delayed configuration. Default value: 0 (0: disabled; 1: enabled)
TDM_BCLK_EDGE_SEL	BCLK edge selection for TDM interface. Default value: 0 (0: sampling on BCLK rising edge; 1: sampling on BCLK falling edge)
TDM_SLOT_SEL	Selection of TDM slot for transmission. Default value: 0 (0: slot {0, 1, 2} is selected; 1: slot {4, 5, 6} is selected)
TDM_WCLK_[1:0]	TDM word clock frequency selection (see Table 165)
TDM_WCLK_BCLK_SEL	Selection of cross association between WCLK and BCLK frequencies (see Table 165)

**Table 165. WCLK and BCLK frequencies**

TDM_WCLK_[1:0]	TDM_WCLK_BCLK_SEL	WCLK	BCLK
01	0	16 kHz	2048 kHz
00	1	8 kHz	2048 kHz

## 9.62 TDM\_CFG1 (6Dh)

TDM configuration register 1 (R/W)

**Table 166. TDM\_CFG1 register**

TDM_XL_X_EN	TDM_XL_Y_EN	TDM_XL_Z_EN	TDM_AXES_ORD_SEL_1	TDM_AXES_ORD_SEL_0	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>
-------------	-------------	-------------	--------------------	--------------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 167. TDM\_CFG1 register description**

TDM_XL_X_EN	Enables accelerometer X-axis elaboration and transmission (acts on both UI and TDM side). Disabling the X-axis can be done only during the initialization phase, while the accelerometer is in power-down mode and before turning on the accelerometer. The disabling of any axis is not compatible with the free-fall, 6D, or SFLP features and could impact the behavior and performance of the other advanced functions also. Default value: 1 (0: disabled; 1: enabled)
TDM_XL_Y_EN	Enables accelerometer Y-axis elaboration and transmission (acts on both UI and TDM side). Disabling the Y-axis can be done only during the initialization phase, while the accelerometer is in power-down mode and before turning on the accelerometer. The disabling of any axis is not compatible with the free-fall, 6D, or SFLP features and could impact the behavior and performance of the other advanced functions also. Default value: 1 (0: disabled; 1: enabled)
TDM_XL_Z_EN	Enables accelerometer Z-axis elaboration and transmission (acts on both UI and TDM side). Disabling the Z-axis can be done only during the initialization phase, while the accelerometer is in power-down mode and before turning on the accelerometer. The disabling of any axis is not compatible with the free-fall, 6D, or SFLP features and could impact the behavior and performance of the other advanced functions also. Default value: 1 (0: disabled; 1: enabled)
TDM_AXES_ORD_SEL_[1:0]	Selects the order of transmission of the TDM axes (see Table 168)

**Table 168. Selection of order of transmission of TDM axes**

TDM_AXES_ORD_SEL_[1:0]	Order of axes
00	Z, Y, X
01	X, Z, Y
10	X, Y, Z

## 9.63 TDM\_CFG2 (6Eh)

TDM configuration register 2 (R/W)

**Table 169. TDM\_CFG2 register**

0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	TDM_DATA_MASK	0 <sup>(1)</sup>	TDM_FS_XL_1	TDM_FS_XL_0
------------------	------------------	------------------	------------------	---------------	------------------	-------------	-------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 170. TDM\_CFG2 register description**

TDM_DATA_MASK	TDM outputs exception code (0x8000) until data is settled. Default value: 0 (0: disabled; 1: enabled)
TDM_FS_XL_[1:0]	TDM channel accelerometer full-scale selection: (00: ±2 g; 01: ±4 g (default); 10: ±8 g)

## 9.64 Z\_OFS\_USR (73h)

Accelerometer Z-axis user offset correction (R/W). The offset value set in the Z\_OFS\_USR offset register is internally subtracted from the acceleration value measured on the Z-axis.

**Table 171. Z\_OFS\_USR register**

Z_OFS_USR_7	Z_OFS_USR_6	Z_OFS_USR_5	Z_OFS_USR_4	Z_OFS_USR_3	Z_OFS_USR_2	Z_OFS_USR_1	Z_OFS_USR_0
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

**Table 172. Z\_OFS\_USR register description**

Z_OFS_USR_[7:0]	Accelerometer Z-axis user offset correction expressed in two's complement, weight depends on USR_OFF_W in <a href="#">CTRL9 (18h)</a> . The offset can be applied to the output registers (see USR_OFF_ON_OUT bit in the <a href="#">CTRL9 (18h)</a> register) or to the wakeup function input data (see USR_OFF_ON_WU bit in the <a href="#">WAKE_UP_THS (5Bh)</a> register). The value must be in the range [-127 127].
-----------------	---

## 9.65 Y\_OFS\_USR (74h)

Accelerometer Y-axis user offset correction (R/W). The offset value set in the Y\_OFS\_USR offset register is internally subtracted from the acceleration value measured on the Y-axis.

**Table 173. Y\_OFS\_USR register**

Y_OFS_USR_7	Y_OFS_USR_6	Y_OFS_USR_5	Y_OFS_USR_4	Y_OFS_USR_3	Y_OFS_USR_2	Y_OFS_USR_1	Y_OFS_USR_0
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

**Table 174. Y\_OFS\_USR register description**

Y_OFS_USR_[7:0]	Accelerometer Y-axis user offset correction expressed in two's complement, weight depends on USR_OFF_W in <a href="#">CTRL9 (18h)</a> . The offset can be applied to the output registers (see USR_OFF_ON_OUT bit in the <a href="#">CTRL9 (18h)</a> register) or to the wakeup function input data (see USR_OFF_ON_WU bit in the <a href="#">WAKE_UP_THS (5Bh)</a> register). The value must be in the range [-127 127].
-----------------	---

## 9.66 X\_OFS\_USR (75h)

Accelerometer X-axis user offset correction (R/W). The offset value set in the X\_OFS\_USR offset register is internally subtracted from the acceleration value measured on the X-axis.

**Table 175. X\_OFS\_USR register**

X_OFS_USR_7	X_OFS_USR_6	X_OFS_USR_5	X_OFS_USR_4	X_OFS_USR_3	X_OFS_USR_2	X_OFS_USR_1	X_OFS_USR_0
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

**Table 176. X\_OFS\_USR register description**

X_OFS_USR_[7:0]	Accelerometer X-axis user offset correction expressed in two's complement, weight depends on USR_OFF_W in <a href="#">CTRL9 (18h)</a> . The offset can be applied to the output registers (see USR_OFF_ON_OUT bit in the <a href="#">CTRL9 (18h)</a> register) or to the wakeup function input data (see USR_OFF_ON_WU bit in the <a href="#">WAKE_UP_THS (5Bh)</a> register). The value must be in the range [-127 127].
-----------------	---

## 9.67 FIFO\_DATA\_OUT\_TAG (78h)

FIFO tag register (R)

**Table 177. FIFO\_DATA\_OUT\_TAG register**

TAG_SENSOR_4	TAG_SENSOR_3	TAG_SENSOR_2	TAG_SENSOR_1	TAG_SENSOR_0	TAG_CNT_1	TAG_CNT_0	-
--------------	--------------	--------------	--------------	--------------	-----------	-----------	---

**Table 178. FIFO\_DATA\_OUT\_TAG register description**

TAG_SENSOR_[4:0]	FIFO tag. Identifies the sensor in:  FIFO_DATA_OUT_BYTE_0 (79h) and FIFO_DATA_OUT_BYTE_1 (7Ah), FIFO_DATA_OUT_BYTE_2 (7Bh) and FIFO_DATA_OUT_BYTE_3 (7Ch), and FIFO_DATA_OUT_BYTE_4 (7Dh) and FIFO_DATA_OUT_BYTE_5 (7Eh)  For details, refer to Table 179.
TAG_CNT_[1:0]	2-bit counter which identifies sensor time slot

**Table 179. FIFO tag**

TAG_SENSOR_[4:0]	Sensor name
0x00	FIFO empty
0x01	Gyroscope NC <sup>(1)</sup>
0x02	Accelerometer NC <sup>(2)</sup>
0x03	Temperature
0x04	Timestamp
0x05	CFG_Change
0x06	Accelerometer NC_T_2 <sup>(2)</sup>
0x07	Accelerometer NC_T_1 <sup>(2)</sup>
0x08	Accelerometer 2xC <sup>(2)</sup>
0x09	Accelerometer 3xC <sup>(2)</sup>
0x0A	Gyroscope NC_T_2 <sup>(1)</sup>
0x0B	Gyroscope NC_T_1 <sup>(1)</sup>
0x0C	Gyroscope 2xC <sup>(1)</sup>
0x0D	Gyroscope 3xC <sup>(1)</sup>
0x12	Step counter
0x13	SFLP game rotation vector
0x16	SFLP gyroscope bias
0x17	SFLP gravity vector
0x1A	MLC result
0x1B	MLC filter
0x1C	MLC feature
0x1D	Accelerometer DualC <sup>(2)</sup>
0x1F	Qvar

1. Gyroscope data are stored in FIFO in the order of the X, Y, Z axes.

2. Accelerometer data are stored in FIFO in the order of the Z, Y, X axes.

## 9.68 FIFO\_DATA\_OUT\_BYTE\_0 (79h) and FIFO\_DATA\_OUT\_BYTE\_1 (7Ah)

FIFO data output (R)

FIFO provides 6 bytes output, starting from byte 0 up to byte 5.

**Table 180. FIFO\_DATA\_OUT\_BYTE\_1 and FIFO\_DATA\_OUT\_BYTE\_0 registers**

D15	D14	D13	D12	D11	D10	D9	D8
D7	D6	D5	D4	D3	D2	D1	D0

**Table 181. FIFO\_DATA\_OUT\_BYTE\_1 and FIFO\_DATA\_OUT\_BYTE\_0 register description**

D[15:0]	FIFO output byte 1 and 0
---------	--------------------------

## 9.69 FIFO\_DATA\_OUT\_BYTE\_2 (7Bh) and FIFO\_DATA\_OUT\_BYTE\_3 (7Ch)

FIFO data output (R)

FIFO provides 6 bytes output, starting from byte 0 up to byte 5.

**Table 182. FIFO\_DATA\_OUT\_BYTE\_3 and FIFO\_DATA\_OUT\_BYTE\_2 registers**

D15	D14	D13	D12	D11	D10	D9	D8
D7	D6	D5	D4	D3	D2	D1	D0

**Table 183. FIFO\_DATA\_OUT\_BYTE\_3 and FIFO\_DATA\_OUT\_BYTE\_2 register description**

D[15:0]	FIFO output byte 3 and 2
---------	--------------------------

## 9.70 FIFO\_DATA\_OUT\_BYTE\_4 (7Dh) and FIFO\_DATA\_OUT\_BYTE\_5 (7Eh)

FIFO data output (R)

FIFO provides 6 bytes output, starting from byte 0 up to byte 5.

**Table 184. FIFO\_DATA\_OUT\_BYTE\_5 and FIFO\_DATA\_OUT\_BYTE\_4 registers**

D15	D14	D13	D12	D11	D10	D9	D8
D7	D6	D5	D4	D3	D2	D1	D0

**Table 185. FIFO\_DATA\_OUT\_BYTE\_5 and FIFO\_DATA\_OUT\_BYTE\_4 register description**

D[15:0]	FIFO output byte 5 and 4
---------	--------------------------

## 10

## Embedded functions register mapping

The table given below provides a list of the registers for the embedded functions available in the device and the corresponding addresses. Embedded functions registers are accessible when EMB\_FUNC\_REG\_ACCESS is set to 1 in FUNC\_CFG\_ACCESS (01h).

Table 186. Register address map - embedded functions

Name	Type	Register address		Default	Comment
		Hex	Binary		
PAGE_SEL	R/W	02	00000010	00000001	
EMB_FUNC_EN_A	R/W	04	00000100	00000000	
EMB_FUNC_EN_B	R/W	05	00000101	00000000	
EMB_FUNC_EXEC_STATUS	R	07	00000111	output	
PAGE_ADDRESS	R/W	08	00001000	00000000	
PAGE_VALUE	R/W	09	00001001	00000000	
EMB_FUNC_INT1	R/W	0A	00001010	00000000	
FSM_INT1	R/W	0B	00001011	00000000	
RESERVED	-	0C	00001100		
MLC_INT1	R/W	0D	00001101	00000000	
EMB_FUNC_INT2	R/W	0E	00001110	00000000	
FSM_INT2	R/W	0F	00001111	00000000	
RESERVED	-	10	00010000		
MLC_INT2	R/W	11	00010001	00000000	
EMB_FUNC_STATUS	R	12	00010010	output	
FSM_STATUS	R	13	00010011	output	
RESERVED	-	14	00010100		
MLC_STATUS	R	15	00010101	output	
PAGE_RW	R/W	17	00010111	00000000	
RESERVED	-	18-43			
EMB_FUNC_FIFO_EN_A	R/W	44	01000100	00000000	
EMB_FUNC_FIFO_EN_B	R/W	45	01000101		
FSM_ENABLE	R/W	46	01000110	00000000	
RESERVED	-	47	01000111		
FSM_LONG_COUNTER_L	R/W	48	01001000	00000000	
FSM_LONG_COUNTER_H	R/W	49	01001001	00000000	
RESERVED	-	4A			
INT_ACK_MASK	R/W	4B	01001011	00000000	
FSM_OUTS1	R	4C	01001100	output	
FSM_OUTS2	R	4D	01001101	output	
FSM_OUTS3	R	4E	01001110	output	
FSM_OUTS4	R	4F	01001111	output	
FSM_OUTS5	R	50	01010000	output	
FSM_OUTS6	R	51	01010001	output	

Name	Type	Register address		Default	Comment
		Hex	Binary		
FSM_OUTS7	R	52	01010010	output	
FSM_OUTS8	R	53	01010011	output	
RESERVED	-	54- 5D			
SFLP_ODR	R/W	5E	01011110	01011011	
FSM_ODR	R/W	5F	01011111	01001011	
MLC_ODR	R/W	60	01100000	00010101	
STEP_COUNTER_L	R	62	01100010	output	
STEP_COUNTER_H	R	63	01100011	output	
EMB_FUNC_SRC	R/W	64	01100100	output	
EMB_FUNC_INIT_A	R/W	66	01100110	00000000	
EMB_FUNC_INIT_B	R/W	67	01100111	00000000	
MLC1_SRC	R	70	01110000	output	
MLC2_SRC	R	71	01110001	output	
MLC3_SRC	R	72	01110010	output	
MLC4_SRC	R	73	01110011	output	

Reserved registers must not be changed. Writing to those registers may cause permanent damage to the device. The content of the registers that are loaded at boot should not be changed. They contain the factory calibration values. Their content is automatically restored when the device is powered up.

## 11 Embedded functions register description

### 11.1 PAGE\_SEL (02h)

Enable advanced features dedicated page (R/W)

Table 187. PAGE\_SEL register

PAGE_SEL3	PAGE_SEL2	PAGE_SEL1	PAGE_SEL0	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	1 <sup>(2)</sup>
-----------	-----------	-----------	-----------	------------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

2. This bit must be set to 1 for the correct operation of the device.

Table 188. PAGE\_SEL register description

PAGE_SEL[3:0]	Selects the advanced features dedicated page. Default value: 0000
---------------	---

### 11.2 EMB\_FUNC\_EN\_A (04h)

Enable embedded functions register (R/W)

Table 189. EMB\_FUNC\_EN\_A register

MLC_BEFORE_FSM_EN	0 <sup>(1)</sup>	SIGN_MOTION_EN	TILT_EN	PEDO_EN	0 <sup>(1)</sup>	SFLP_GAME_EN	0 <sup>(1)</sup>
-------------------	------------------	----------------	---------	---------	------------------	--------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

Table 190. EMB\_FUNC\_EN\_A register description

MLC_BEFORE_FSM_EN <sup>(1)</sup>	Enables the machine learning core function. When the machine learning core is enabled by setting this bit to 1, the MLC algorithms are executed before the FSM programs. Default value: 0 (0: machine learning core function disabled; 1: machine learning core function enabled and executed before FSM programs)
SIGN_MOTION_EN	Enables significant motion detection function. Default value: 0 (0: significant motion detection function disabled; 1: significant motion detection function enabled)
TILT_EN	Enables tilt calculation. Default value: 0 (0: tilt algorithm disabled; 1: tilt algorithm enabled)
PEDO_EN	Enables pedometer algorithm. Default value: 0 (0: pedometer algorithm disabled; 1: pedometer algorithm enabled)
SFLP_GAME_EN	Enables sensor fusion low-power algorithm for 6-axis (accelerometer + gyroscope) game rotation vector. Default value: 0 (0: sensor fusion algorithm for 6-axis accelerometer + gyroscope disabled; 1: sensor fusion algorithm for 6-axis accelerometer + gyroscope enabled)

1. MLC\_EN bit in the EMB\_FUNC\_EN\_B (05h) register must be set to 0 when using this bit.

### 11.3 EMB\_FUNC\_EN\_B (05h)

Enable embedded functions register (R/W)

**Table 191. EMB\_FUNC\_EN\_B register**

0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	MLC_EN	FIFO_COMPR_EN	0 <sup>(1)</sup>	0 <sup>(1)</sup>	FSM_EN
------------------	------------------	------------------	--------	---------------	------------------	------------------	--------

1. This bit must be set to 0 for the correct operation of the device.

**Table 192. EMB\_FUNC\_EN\_B register description**

MLC_EN <sup>(1)</sup>	Enables machine learning core function. When the machine learning core is enabled by setting this bit to 1, the MLC algorithms are executed after the FSM programs. Default value: 0 (0: machine learning core function disabled; 1: machine learning core function enabled and executed after FSM programs)
FIFO_COMPR_EN <sup>(2)</sup>	Enables FIFO compression function. Default value: 0 (0: FIFO compression function disabled; 1: FIFO compression function enabled)
FSM_EN	Enables finite state machine (FSM) function. Default value: 0 (0: FSM function disabled; 1: FSM function enabled)

1. *MLC\_BEFORE\_FSM\_EN* bit in the *EMB\_FUNC\_EN\_A* (04h) register must be set to 0 when using this bit.
2. This bit is active when the *FIFO\_COMPR\_RT\_EN* bit of *FIFO\_CTRL2* (08h) is set to 1.

### 11.4 EMB\_FUNC\_EXEC\_STATUS (07h)

Embedded functions execution status register (R)

**Table 193. EMB\_FUNC\_EXEC\_STATUS register**

0	0	0	0	0	0	EMB_FUNC_EXEC_OVR	EMB_FUNC_ENDOP
---	---	---	---	---	---	-------------------	----------------

**Table 194. EMB\_FUNC\_EXEC\_STATUS register description**

EMB_FUNC_EXEC_OVR	This bit is set to 1 when the execution of the embedded functions program exceeds maximum time (new data are generated before the end of the algorithms). Default value: 0
EMB_FUNC_ENDOP	When this bit is set to 1, no embedded function is running. Default value: 0

## 11.5 PAGE\_ADDRESS (08h)

Page address register (R/W)

Table 195. PAGE\_ADDRESS register

PAGE_ADDR7	PAGE_ADDR6	PAGE_ADDR5	PAGE_ADDR4	PAGE_ADDR3	PAGE_ADDR2	PAGE_ADDR1	PAGE_ADDR0
------------	------------	------------	------------	------------	------------	------------	------------

Table 196. PAGE\_ADDRESS register description

PAGE_ADDR[7:0]	After setting the bit PAGE_WRITE / PAGE_READ in register PAGE_RW (17h), this register is used to set the address of the register to be written/read in the advanced features page selected through the bits PAGE_SEL[3:0] in register PAGE_SEL (02h).
----------------	---

## 11.6 PAGE\_VALUE (09h)

Page value register (R/W)

Table 197. PAGE\_VALUE register

PAGE_VALUE7	PAGE_VALUE6	PAGE_VALUE5	PAGE_VALUE4	PAGE_VALUE3	PAGE_VALUE2	PAGE_VALUE1	PAGE_VALUE0
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

Table 198. PAGE\_VALUE register description

PAGE_VALUE[7:0]	These bits are used to write (if the bit PAGE_WRITE = 1 in register PAGE_RW (17h)) or read (if the bit PAGE_READ = 1 in register PAGE_RW (17h)) the data at the address PAGE_ADDR[7:0] of the selected advanced features page.
-----------------	--

## 11.7 EMB\_FUNC\_INT1 (0Ah)

INT1 pin control register (R/W)

Each bit in this register enables a signal to be carried over INT1. The pin's output supplies the OR combination of the selected signals.

Table 199. EMB\_FUNC\_INT1 register

INT1_FSM_LC	0 <sup>(1)</sup>	INT1_SIG_MOT	INT1_TILT	INT1_STEP_DETECTOR	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>
-------------	------------------	--------------	-----------	--------------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

Table 200. EMB\_FUNC\_INT1 register description

INT1_FSM_LC <sup>(1)</sup>	Routing FSM long counter timeout interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_SIG_MOT <sup>(1)</sup>	Routing significant motion event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_TILT <sup>(1)</sup>	Routing tilt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_STEP_DETECTOR <sup>(1)</sup>	Routing pedometer step recognition event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)

1. This bit is active when the INT1\_EMB\_FUNC bit of MD1\_CFG (5Eh) is set to 1.

## 11.8 FSM\_INT1 (0Bh)

INT1 pin control register (R/W)

Each bit in this register enables a signal to be carried over INT1. The pin's output supplies the OR combination of the selected signals.

**Table 201. FSM\_INT1 register**

INT1_FSM8	INT1_FSM7	INT1_FSM6	INT1_FSM5	INT1_FSM4	INT1_FSM3	INT1_FSM2	INT1_FSM1
-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------

**Table 202. FSM\_INT1 register description**

INT1_FSM8 <sup>(1)</sup>	Routing FSM8 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_FSM7 <sup>(1)</sup>	Routing FSM7 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_FSM6 <sup>(1)</sup>	Routing FSM6 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_FSM5 <sup>(1)</sup>	Routing FSM5 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_FSM4 <sup>(1)</sup>	Routing FSM4 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_FSM3 <sup>(1)</sup>	Routing FSM3 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_FSM2 <sup>(1)</sup>	Routing FSM2 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_FSM1 <sup>(1)</sup>	Routing FSM1 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)

1. This bit is active when the INT1\_EMB\_FUNC bit of MD1\_CFG (5Eh) is set to 1.

## 11.9 MLC\_INT1 (0Dh)

INT1 pin control register (R/W)

Each bit in this register enables a signal to be carried over INT1. The pin's output supplies the OR combination of the selected signals.

**Table 203. MLC\_INT1 register**

0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	INT1_MLC4	INT1_MLC3	INT1_MLC2	INT1_MLC1
------------------	------------------	------------------	------------------	-----------	-----------	-----------	-----------

1. This bit must be set to 0 for the correct operation of the device.

**Table 204. MLC\_INT1 register description**

INT1_MLC4	Routing MLC4 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_MLC3	Routing MLC3 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_MLC2	Routing MLC2 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)
INT1_MLC1	Routing MLC1 interrupt event to INT1. Default value: 0 (0: routing to INT1 disabled; 1: routing to INT1 enabled)

## 11.10 EMB\_FUNC\_INT2 (0Eh)

INT2 pin control register (R/W)

Each bit in this register enables a signal to be carried over INT2. The pin's output supplies the OR combination of the selected signals.

**Table 205. EMB\_FUNC\_INT2 register**

INT2_FSM_LC	0 <sup>(1)</sup>	INT2_SIG_MOT	INT2_TILT	INT2_STEP_DETECTOR	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>
-------------	------------------	--------------	-----------	--------------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 206. EMB\_FUNC\_INT2 register description**

INT2_FSM_LC <sup>(1)</sup>	Routing FSM long counter timeout interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_SIG_MOT <sup>(1)</sup>	Routing significant motion event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_TILT <sup>(1)</sup>	Routing tilt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_STEP_DETECTOR <sup>(1)</sup>	Routing pedometer step recognition event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)

1. This bit is active when the INT2\_EMB\_FUNC bit of MD2\_CFG (5Fh) is set to 1.

## 11.11 FSM\_INT2 (0Fh)

INT2 pin control register (R/W)

Each bit in this register enables a signal to be carried over INT2. The pin's output supplies the OR combination of the selected signals.

**Table 207. FSM\_INT2 register**

INT2_FSM8	INT2_FSM7	INT2_FSM6	INT2_FSM5	INT2_FSM4	INT2_FSM3	INT2_FSM2	INT2_FSM1
-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------

**Table 208. FSM\_INT2 register description**

INT2_FSM8 <sup>(1)</sup>	Routing FSM8 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_FSM7 <sup>(1)</sup>	Routing FSM7 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_FSM6 <sup>(1)</sup>	Routing FSM6 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_FSM5 <sup>(1)</sup>	Routing FSM5 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_FSM4 <sup>(1)</sup>	Routing FSM4 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_FSM3 <sup>(1)</sup>	Routing FSM3 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_FSM2 <sup>(1)</sup>	Routing FSM2 interrupt event on INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_FSM1 <sup>(1)</sup>	Routing FSM1 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)

1. This bit is active when the INT2\_EMB\_FUNC bit of MD2\_CFG (5Fh) is set to 1.

## 11.12 MLC\_INT2 (11h)

INT2 pin control register (R/W)

Each bit in this register enables a signal to be carried over INT2. The pin's output supplies the OR combination of the selected signals.

**Table 209. MLC\_INT2 register**

0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	INT2_MLC4	INT2_MLC3	INT2_MLC2	INT2_MLC1
------------------	------------------	------------------	------------------	-----------	-----------	-----------	-----------

1. This bit must be set to 0 for the correct operation of the device.

**Table 210. MLC\_INT2 register description**

INT2_MLC4	Routing MLC4 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_MLC3	Routing MLC3 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_MLC2	Routing MLC2 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)
INT2_MLC1	Routing MLC1 interrupt event to INT2. Default value: 0 (0: routing to INT2 disabled; 1: routing to INT2 enabled)

## 11.13 EMB\_FUNC\_STATUS (12h)

Embedded function status register (R)

**Table 211. EMB\_FUNC\_STATUS register**

IS_FSM_LC	0	IS_SIGMOT	IS_TILT	IS_STEP_DET	0	0	0
-----------	---	-----------	---------	-------------	---	---	---

**Table 212. EMB\_FUNC\_STATUS register description**

IS_FSM_LC	Interrupt status bit for FSM long counter timeout interrupt event. (1: interrupt detected; 0: no interrupt)
IS_SIGMOT	Interrupt status bit for significant motion detection (1: interrupt detected; 0: no interrupt)
IS_TILT	Interrupt status bit for tilt detection (1: interrupt detected; 0: no interrupt)
IS_STEP_DET	Interrupt status bit for step detection (1: interrupt detected; 0: no interrupt)

## 11.14 FSM\_STATUS (13h)

Finite state machine status register (R)

**Table 213. FSM\_STATUS register**

IS_FSM8	IS_FSM7	IS_FSM6	IS_FSM5	IS_FSM4	IS_FSM3	IS_FSM2	IS_FSM1
---------	---------	---------	---------	---------	---------	---------	---------

**Table 214. FSM\_STATUS register description**

IS_FSM8	Interrupt status bit for FSM8 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM7	Interrupt status bit for FSM7 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM6	Interrupt status bit for FSM6 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM5	Interrupt status bit for FSM5 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM4	Interrupt status bit for FSM4 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM3	Interrupt status bit for FSM3 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM2	Interrupt status bit for FSM2 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_FSM1	Interrupt status bit for FSM1 interrupt event. (1: interrupt detected; 0: no interrupt)

## 11.15 MLC\_STATUS (15h)

Machine learning core status register (R)

**Table 215. MLC\_STATUS register**

0	0	0	0	IS_MLC4	IS_MLC3	IS_MLC	IS_MLC1
---	---	---	---	---------	---------	--------	---------

**Table 216. MLC\_STATUS register description**

IS_MLC4	Interrupt status bit for MLC4 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_MLC3	Interrupt status bit for MLC3 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_MLC2	Interrupt status bit for MLC2 interrupt event. (1: interrupt detected; 0: no interrupt)
IS_MLC1	Interrupt status bit for MLC1 interrupt event. (1: interrupt detected; 0: no interrupt)

## 11.16 PAGE\_RW (17h)

Enable read and write mode of advanced features dedicated page (R/W)

**Table 217. PAGE\_RW register**

EMB_FUNC_LIR	PAGE_WRITE	PAGE_READ	0 <sup>(1)</sup>				
--------------	------------	-----------	------------------	------------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 218. PAGE\_RW register description**

EMB_FUNC_LIR	Latched interrupt mode for embedded functions. Default value: 0 (0: embedded functions interrupt request not latched; 1: embedded functions interrupt request latched)
PAGE_WRITE	Enables writes to the selected advanced features dedicated page. <sup>(1)</sup> Default value: 0 (1: enabled; 0: disabled)
PAGE_READ	Enables reads from the selected advanced features dedicated page. <sup>(1)</sup> Default value: 0 (1: enabled; 0: disabled)

1. Page selected by PAGE\_SEL[3:0] in PAGE\_SEL (02h) register.

## 11.17 EMB\_FUNC\_FIFO\_EN\_A (44h)

Embedded functions FIFO configuration register A (R/W)

**Table 219. EMB\_FUNC\_FIFO\_EN\_A register**

MLC_FIFO_EN	STEP_COUNTER_FIFO_EN	SFLP_GBIAS_FIFO_EN	SFLP_GRAVITY_FIFO_EN	0 <sup>(1)</sup>	0 <sup>(1)</sup>	SFLP_GAME_FIFO_EN	0 <sup>(1)</sup>
-------------	----------------------	--------------------	----------------------	------------------	------------------	-------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 220. EMB\_FUNC\_FIFO\_EN\_A register description**

MLC_FIFO_EN	Enables batching the machine learning core results in the FIFO buffer. Default value: 0 (0: disabled; 1: enabled)
STEP_COUNTER_FIFO_EN	Enables batching the step counter values in the FIFO buffer. Default value: 0 (0: disabled; 1: enabled)
SFLP_GBIAS_FIFO_EN	Enables batching the gyroscope bias values computed by the SFLP algorithm in the FIFO buffer. Default value: 0 (0: disabled; 1: enabled)
SFLP_GRAVITY_FIFO_EN	Enables batching the gravity values computed by the SFLP algorithm in the FIFO buffer. Default value: 0 (0: disabled; 1: enabled)
SFLP_GAME_FIFO_EN	Enables batching the game rotation vector (quaternion) values computed by the SFLP algorithm in the FIFO buffer. Default value: 0 (0: disabled; 1: enabled)

## 11.18 EMB\_FUNC\_FIFO\_EN\_B (45h)

Embedded functions FIFO configuration register B (R/W)

**Table 221. EMB\_FUNC\_FIFO\_EN\_B register**

0 <sup>(1)</sup>	MLC_FILTER_FEATURE_FIFO_EN	0 <sup>(1)</sup>					
------------------	------------------	------------------	------------------	------------------	------------------	----------------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 222. EMB\_FUNC\_FIFO\_EN\_B register description**

MLC_FILTER_FEATURE_FIFO_EN	Enables batching the machine learning core filters and features in the FIFO buffer. Default value: 0 (0: disabled; 1: enabled)
----------------------------	--

## 11.19 FSM\_ENABLE (46h)

Enable FSM register (R/W)

**Table 223. FSM\_ENABLE register**

FSM8_EN	FSM7_EN	FSM6_EN	FSM5_EN	FSM4_EN	FSM3_EN	FSM2_EN	FSM1_EN
---------	---------	---------	---------	---------	---------	---------	---------

**Table 224. FSM\_ENABLE register description**

FSM8_EN	Enables FSM8. Default value: 0 (0: FSM8 disabled; 1: FSM8 enabled)
FSM7_EN	Enables FSM7. Default value: 0 (0: FSM7 disabled; 1: FSM7 enabled)
FSM6_EN	Enables FSM6. Default value: 0 (0: FSM6 disabled; 1: FSM6 enabled)
FSM5_EN	Enables FSM5. Default value: 0 (0: FSM5 disabled; 1: FSM5 enabled)
FSM4_EN	Enables FSM4. Default value: 0 (0: FSM4 disabled; 1: FSM4 enabled)
FSM3_EN	Enables FSM3. Default value: 0 (0: FSM3 disabled; 1: FSM3 enabled)
FSM2_EN	Enables FSM2. Default value: 0 (0: FSM2 disabled; 1: FSM2 enabled)
FSM1_EN	Enables FSM1. Default value: 0 (0: FSM1 disabled; 1: FSM1 enabled)

## 11.20 **FSM\_LONG\_COUNTER\_L (48h) and FSM\_LONG\_COUNTER\_H (49h)**

FSM long counter status register (R/W)

Long counter value is an unsigned integer value (16-bit format).

**Table 225. FSM\_LONG\_COUNTER\_L register**

FSM_LC_7	FSM_LC_6	FSM_LC_5	FSM_LC_4	FSM_LC_3	FSM_LC_2	FSM_LC_1	FSM_LC_0
----------	----------	----------	----------	----------	----------	----------	----------

**Table 226. FSM\_LONG\_COUNTER\_L register description**

FSM_LC_[7:0]	Long counter current value (LSbyte). Default value: 00000000
--------------	--

**Table 227. FSM\_LONG\_COUNTER\_H register**

FSM_LC_15	FSM_LC_14	FSM_LC_13	FSM_LC_12	FSM_LC_11	FSM_LC_10	FSM_LC_9	FSM_LC_8
-----------	-----------	-----------	-----------	-----------	-----------	----------	----------

**Table 228. FSM\_LONG\_COUNTER\_H register description**

FSM_LC_[15:8]	Long counter current value (MSbyte). Default value: 00000000
---------------	--

## 11.21 INT\_ACK\_MASK (4Bh)

Reset status register (R/W)

**Table 229. INT\_ACK\_MASK register**

IACK_MASK7	IACK_MASK6	IACK_MASK5	IACK_MASK4	IACK_MASK3	IACK_MASK2	IACK_MASK1	IACK_MASK0
------------	------------	------------	------------	------------	------------	------------	------------

**Table 230. INT\_ACK\_MASK register description**

IACK_MASK7	If set to 1, when reading the EMB_FUNC_STATUS (12h) / EMB_FUNC_STATUS_MAINPAGE (49h), FSM_STATUS (13h) / FSM_STATUS_MAINPAGE (4Ah) and MLC_STATUS (15h) / MLC_STATUS_MAINPAGE (4Bh) registers in latched mode (when the EMB_FUNC_LIR bit is set to 1 in the PAGE_RW (17h) register), bit 7 of the status register is not reset. When this bit is set to 0, bit 7 of the status register is reset. Default value: 0
IACK_MASK6	If set to 1, when reading the EMB_FUNC_STATUS (12h) / EMB_FUNC_STATUS_MAINPAGE (49h), FSM_STATUS (13h) / FSM_STATUS_MAINPAGE (4Ah) and MLC_STATUS (15h) / MLC_STATUS_MAINPAGE (4Bh) registers in latched mode (when the EMB_FUNC_LIR bit is set to 1 in the PAGE_RW (17h) register), bit 6 of the status register is not reset. When this bit is set to 0, bit 6 of the status register is reset. Default value: 0
IACK_MASK5	If set to 1, when reading the EMB_FUNC_STATUS (12h) / EMB_FUNC_STATUS_MAINPAGE (49h), FSM_STATUS (13h) / FSM_STATUS_MAINPAGE (4Ah) and MLC_STATUS (15h) / MLC_STATUS_MAINPAGE (4Bh) registers in latched mode (when the EMB_FUNC_LIR bit is set to 1 in the PAGE_RW (17h) register), bit 5 of the status register is not reset. When this bit is set to 0, bit 5 of the status register is reset. Default value: 0
IACK_MASK4	If set to 1, when reading the EMB_FUNC_STATUS (12h) / EMB_FUNC_STATUS_MAINPAGE (49h), FSM_STATUS (13h) / FSM_STATUS_MAINPAGE (4Ah) and MLC_STATUS (15h) / MLC_STATUS_MAINPAGE (4Bh) registers in latched mode (when the EMB_FUNC_LIR bit is set to 1 in the PAGE_RW (17h) register), bit 4 of the status register is not reset. When this bit is set to 0, bit 4 of the status register is reset. Default value: 0
IACK_MASK3	If set to 1, when reading the EMB_FUNC_STATUS (12h) / EMB_FUNC_STATUS_MAINPAGE (49h), FSM_STATUS (13h) / FSM_STATUS_MAINPAGE (4Ah) and MLC_STATUS (15h) / MLC_STATUS_MAINPAGE (4Bh) registers in latched mode (when the EMB_FUNC_LIR bit is set to 1 in the PAGE_RW (17h) register), bit 3 of the status register is not reset. When this bit is set to 0, bit 3 of the status register is reset. Default value: 0
IACK_MASK2	If set to 1, when reading the EMB_FUNC_STATUS (12h) / EMB_FUNC_STATUS_MAINPAGE (49h), FSM_STATUS (13h) / FSM_STATUS_MAINPAGE (4Ah) and MLC_STATUS (15h) / MLC_STATUS_MAINPAGE (4Bh) registers in latched mode (when the EMB_FUNC_LIR bit is set to 1 in the PAGE_RW (17h) register), bit 2 of the status register is not reset. When this bit is set to 0, bit 2 of the status register is reset. Default value: 0
IACK_MASK1	If set to 1, when reading the EMB_FUNC_STATUS (12h) / EMB_FUNC_STATUS_MAINPAGE (49h), FSM_STATUS (13h) / FSM_STATUS_MAINPAGE (4Ah) and MLC_STATUS (15h) / MLC_STATUS_MAINPAGE (4Bh) registers in latched mode (when the EMB_FUNC_LIR bit is set to 1 in the PAGE_RW (17h) register), bit 1 of the status register is not reset. When this bit is set to 0, bit 1 of the status register is reset. Default value: 0
IACK_MASK0	If set to 1, when reading the EMB_FUNC_STATUS (12h) / EMB_FUNC_STATUS_MAINPAGE (49h), FSM_STATUS (13h) / FSM_STATUS_MAINPAGE (4Ah) and MLC_STATUS (15h) / MLC_STATUS_MAINPAGE (4Bh) registers in latched mode (when the EMB_FUNC_LIR bit is set to 1 in the PAGE_RW (17h) register), bit 0 of the status register is not reset. When this bit is set to 0, bit 0 of the status register is reset. Default value: 0

## 11.22 FSM\_OUTS1 (4Ch)

FSM1 output register (R)

**Table 231. FSM\_OUTS1 register**

P_axis_1	N_axis_1	P_axis_2	N_axis_2	P_axis_3	N_axis_3	P_V	N_V
----------	----------	----------	----------	----------	----------	-----	-----

**Table 232. FSM\_OUTS1 register description**

P_axis_1	FSM1 output: positive event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
N_axis_1	FSM1 output: negative event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
P_axis_2	FSM1 output: positive event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
N_axis_2	FSM1 output: negative event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
P_axis_3	FSM1 output: positive event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
N_axis_3	FSM1 output: negative event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
P_V	FSM1 output: positive event detected on the vector. (0: event not detected; 1: event detected)
N_V	FSM1 output: negative event detected on the vector. (0: event not detected; 1: event detected)

## 11.23 FSM\_OUTS2 (4Dh)

FSM2 output register (R)

**Table 233. FSM\_OUTS2 register**

P_axis_1	N_axis_1	P_axis_2	N_axis_2	P_axis_3	N_axis_3	P_V	N_V
----------	----------	----------	----------	----------	----------	-----	-----

**Table 234. FSM\_OUTS2 register description**

P_axis_1	FSM2 output: positive event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
N_axis_1	FSM2 output: negative event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
P_axis_2	FSM2 output: positive event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
N_axis_2	FSM2 output: negative event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
P_axis_3	FSM2 output: positive event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
N_axis_3	FSM2 output: negative event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
P_V	FSM2 output: positive event detected on the vector. (0: event not detected; 1: event detected)
N_V	FSM2 output: negative event detected on the vector. (0: event not detected; 1: event detected)

## 11.24 FSM\_OUTS3 (4Eh)

FSM3 output register (R)

**Table 235. FSM\_OUTS3 register**

P_axis_1	N_axis_1	P_axis_2	N_axis_2	P_axis_3	N_axis_3	P_V	N_V
----------	----------	----------	----------	----------	----------	-----	-----

**Table 236. FSM\_OUTS3 register description**

P_axis_1	FSM3 output: positive event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
N_axis_1	FSM3 output: negative event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
P_axis_2	FSM3 output: positive event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
N_axis_2	FSM3 output: negative event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
P_axis_3	FSM3 output: positive event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
N_axis_3	FSM3 output: negative event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
P_V	FSM3 output: positive event detected on the vector. (0: event not detected; 1: event detected)
N_V	FSM3 output: negative event detected on the vector. (0: event not detected; 1: event detected)

## 11.25 FSM\_OUTS4 (4Fh)

FSM4 output register (R)

**Table 237. FSM\_OUTS4 register**

P_axis_1	N_axis_1	P_axis_2	N_axis_2	P_axis_3	N_axis_3	P_V	N_V
----------	----------	----------	----------	----------	----------	-----	-----

**Table 238. FSM\_OUTS4 register description**

P_axis_1	FSM4 output: positive event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
N_axis_1	FSM4 output: negative event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
P_axis_2	FSM4 output: positive event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
N_axis_2	FSM4 output: negative event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
P_axis_3	FSM4 output: positive event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
N_axis_3	FSM4 output: negative event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
P_V	FSM4 output: positive event detected on the vector. (0: event not detected; 1: event detected)
N_V	FSM4 output: negative event detected on the vector. (0: event not detected; 1: event detected)

## 11.26 FSM\_OUTS5 (50h)

FSM5 output register (R)

**Table 239. FSM\_OUTS5 register**

P_axis_1	N_axis_1	P_axis_2	N_axis_2	P_axis_3	N_axis_3	P_V	N_V
----------	----------	----------	----------	----------	----------	-----	-----

**Table 240. FSM\_OUTS5 register description**

P_axis_1	FSM5 output: positive event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
N_axis_1	FSM5 output: negative event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
P_axis_2	FSM5 output: positive event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
N_axis_2	FSM5 output: negative event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
P_axis_3	FSM5 output: positive event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
N_axis_3	FSM5 output: negative event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
P_V	FSM5 output: positive event detected on the vector. (0: event not detected; 1: event detected)
N_V	FSM5 output: negative event detected on the vector. (0: event not detected; 1: event detected)

## 11.27 FSM\_OUTS6 (51h)

FSM6 output register (R)

**Table 241. FSM\_OUTS6 register**

P_axis_1	N_axis_1	P_axis_2	N_axis_2	P_axis_3	N_axis_3	P_V	N_V
----------	----------	----------	----------	----------	----------	-----	-----

**Table 242. FSM\_OUTS6 register description**

P_axis_1	FSM6 output: positive event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
N_axis_1	FSM6 output: negative event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
P_axis_2	FSM6 output: positive event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
N_axis_2	FSM6 output: negative event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
P_axis_3	FSM6 output: positive event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
N_axis_3	FSM6 output: negative event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
P_V	FSM6 output: positive event detected on the vector. (0: event not detected; 1: event detected)
N_V	FSM6 output: negative event detected on the vector. (0: event not detected; 1: event detected)

## 11.28 FSM\_OUTS7 (52h)

FSM7 output register (R)

**Table 243. FSM\_OUTS7 register**

P_axis_1	N_axis_1	P_axis_2	N_axis_2	P_axis_3	N_axis_3	P_V	N_V
----------	----------	----------	----------	----------	----------	-----	-----

**Table 244. FSM\_OUTS7 register description**

P_axis_1	FSM7 output: positive event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
N_axis_1	FSM7 output: negative event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
P_axis_2	FSM7 output: positive event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
N_axis_2	FSM7 output: negative event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
P_axis_3	FSM7 output: positive event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
N_axis_3	FSM7 output: negative event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
P_V	FSM7 output: positive event detected on the vector. (0: event not detected; 1: event detected)
N_V	FSM7 output: negative event detected on the vector. (0: event not detected; 1: event detected)

## 11.29 FSM\_OUTS8 (53h)

FSM8 output register (R)

**Table 245. FSM\_OUTS8 register**

P_axis_1	N_axis_1	P_axis_2	N_axis_2	P_axis_3	N_axis_3	P_V	N_V
----------	----------	----------	----------	----------	----------	-----	-----

**Table 246. FSM\_OUTS8 register description**

P_axis_1	FSM8 output: positive event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
N_axis_1	FSM8 output: negative event detected on axis 1. This axis corresponds to the X-axis if the gyroscope is used and to the Z-axis if the accelerometer is used. Results related to Qvar are reported on axis 1. (0: event not detected; 1: event detected)
P_axis_2	FSM8 output: positive event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
N_axis_2	FSM8 output: negative event detected on axis 2. This axis corresponds to the Y-axis for both the gyroscope and accelerometer. (0: event not detected; 1: event detected)
P_axis_3	FSM8 output: positive event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
N_axis_3	FSM8 output: negative event detected on axis 3. This axis corresponds to the Z-axis if the gyroscope is used and to the X-axis if the accelerometer is used. (0: event not detected; 1: event detected)
P_V	FSM8 output: positive event detected on the vector. (0: event not detected; 1: event detected)
N_V	FSM8 output: negative event detected on the vector. (0: event not detected; 1: event detected)

## 11.30 SFLP\_ODR (5Eh)

Sensor fusion low-power output data rate configuration register (R/W)

**Table 247. SFLP\_ODR register**

0 <sup>(1)</sup>	1 <sup>(2)</sup>	SFLP_GAME_ODR_2	SFLP_GAME_ODR_1	SFLP_GAME_ODR_0	0 <sup>(1)</sup>	1 <sup>(2)</sup>	1 <sup>(2)</sup>
------------------	------------------	-----------------	-----------------	-----------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.
2. This bit must be set to 1 for the correct operation of the device.

**Table 248. SFLP\_ODR register description**

SFLP_GAME_ODR_[2:0]	ODR configuration of the SFLP game algorithm: (000: 15 Hz; 001: 30 Hz; 010: 60 Hz; 011: 120 Hz (default); 100: 240 Hz; 101: 480 Hz)
---------------------	---

## 11.31 FSM\_ODR (5Fh)

Finite state machine output data rate configuration register (R/W)

**Table 249. FSM\_ODR register**

0 <sup>(1)</sup>	1 <sup>(2)</sup>	FSM_ODR_2	FSM_ODR_1	FSM_ODR_0	0 <sup>(1)</sup>	1 <sup>(2)</sup>	1 <sup>(2)</sup>
------------------	------------------	-----------	-----------	-----------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.
2. This bit must be set to 1 for the correct operation of the device.

**Table 250. FSM\_ODR register description**

FSM_ODR_[2:0]	Finite state machine ODR configuration: (000: 15 Hz; 001: 30 Hz (default); 010: 60 Hz; 011: 120 Hz; 100: 240 Hz; 101: 480 Hz; 110: 960 Hz)
---------------	---

## 11.32 MLC\_ODR (60h)

Machine learning core output data rate configuration register (R/W)

**Table 251. MLC\_ODR register**

0 <sup>(1)</sup>	MLC_ODR_2	MLC_ODR_1	MLC_ODR_0	0 <sup>(1)</sup>	1 <sup>(2)</sup>	0 <sup>(1)</sup>	1 <sup>(2)</sup>
------------------	-----------	-----------	-----------	------------------	------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.
2. This bit must be set to 1 for the correct operation of the device.

**Table 252. MLC\_ODR register description**

MLC_ODR_[2:0]	Machine learning core ODR configuration: (000: 15 Hz; 001: 30 Hz (default); 010: 60 Hz; 011: 120 Hz; 100: 240 Hz; 101: 480 Hz; 110: 960 Hz)
---------------	--

## 11.33 STEP\_COUNTER\_L (62h) and STEP\_COUNTER\_H (63h)

Step counter output register (R)

**Table 253. STEP\_COUNTER\_L register**

STEP_7	STEP_6	STEP_5	STEP_4	STEP_3	STEP_2	STEP_1	STEP_0
--------	--------	--------	--------	--------	--------	--------	--------

**Table 254. STEP\_COUNTER\_L register description**

STEP_[7:0]	Step counter output (LSbyte)
------------	------------------------------

**Table 255. STEP\_COUNTER\_H register**

STEP_15	STEP_14	STEP_13	STEP_12	STEP_11	STEP_10	STEP_9	STEP_8
---------	---------	---------	---------	---------	---------	--------	--------

**Table 256. STEP\_COUNTER\_H register description**

STEP_[15:8]	Step counter output (MSbyte)
-------------	------------------------------

## 11.34 EMB\_FUNC\_SRC (64h)

Embedded function source register (R/W)

**Table 257. EMB\_FUNC\_SRC register**

PEDO_RST_STEP	0 <sup>(1)</sup>	STEP_DETECTED	STEP_COUNT_DELTA_IA	STEP_OVERFLOW	STEPCOUNTER_BIT_SET	0 <sup>(1)</sup>	0 <sup>(1)</sup>
---------------	------------------	---------------	---------------------	---------------	---------------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 258. EMB\_FUNC\_SRC register description**

PEDO_RST_STEP	Reset pedometer step counter. Read/write bit. (0: disabled; 1: enabled)
STEP_DETECTED	Step detector event detection status. Read-only bit. (0: step detection event not detected; 1: step detection event detected)
STEP_COUNT_DELTA_IA	Pedometer step recognition on delta time status. Read-only bit. (0: no step recognized during delta time; 1: at least one step recognized during delta time)
STEP_OVERFLOW	Step counter overflow status. Read-only bit. (0: step counter value < 2 <sup>16</sup> ; 1: step counter value reached 2 <sup>16</sup> )
STEPCOUNTER_BIT_SET	This bit is equal to 1 when the step count is increased. If a timer period is programmed in <a href="#">PEDO_SC_DELTAT_L (D0h)</a> and <a href="#">PEDO_SC_DELTAT_H (D1h)</a> embedded advanced features (page 1) registers, this bit is kept at 0.  Read-only bit.

## 11.35 EMB\_FUNC\_INIT\_A (66h)

Embedded functions initialization register (R/W)

**Table 259. EMB\_FUNC\_INIT\_A register**

MLC_BEFORE_FSM_INIT	0 <sup>(1)</sup>	SIG_MOT_INIT	TILT_INIT	STEP_DET_INIT	0 <sup>(1)</sup>	SFLP_GAME_INIT	0 <sup>(1)</sup>
---------------------	------------------	--------------	-----------	---------------	------------------	----------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

**Table 260. EMB\_FUNC\_INIT\_A register description**

MLC_BEFORE_FSM_INIT	Machine learning core initialization request (MLC executed before FSM). Default value: 0
SIG_MOT_INIT	Significant motion detection algorithm initialization request. Default value: 0
TILT_INIT	Tilt algorithm initialization request. Default value: 0
STEP_DET_INIT	Pedometer step counter/detector algorithm initialization request. Default value: 0
SFLP_GAME_INIT	SFLP game algorithm initialization request. Default value: 0

## 11.36 EMB\_FUNC\_INIT\_B (67h)

Embedded functions initialization register (R/W)

**Table 261. EMB\_FUNC\_INIT\_B register**

0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	MLC_INIT	FIFO_COMPR_INIT	0 <sup>(1)</sup>	0 <sup>(1)</sup>	FSM_INIT
------------------	------------------	------------------	----------	-----------------	------------------	------------------	----------

1. This bit must be set to 0 for the correct operation of the device.

**Table 262. EMB\_FUNC\_INIT\_B register description**

MLC_INIT	Machine learning core initialization request (MLC executed after FSM). Default value: 0
FIFO_COMPR_INIT	FIFO compression function initialization request. Default value: 0
FSM_INIT	FSM initialization request. Default value: 0

## 11.37 MLC1\_SRC (70h)

Machine learning core source register (R)

**Table 263. MLC1\_SRC register**

MLC1_SRC_7	MLC1_SRC_6	MLC1_SRC_5	MLC1_SRC_4	MLC1_SRC_3	MLC1_SRC_2	MLC1_SRC_1	MLC1_SRC_0
------------	------------	------------	------------	------------	------------	------------	------------

**Table 264. MLC1\_SRC register description**

MLC1_SRC_[7:0]	Output value of MLC1 decision tree
----------------	------------------------------------

## 11.38 MLC2\_SRC (71h)

Machine learning core source register (R)

**Table 265. MLC2\_SRC register**

MLC2_SRC_7	MLC2_SRC_6	MLC2_SRC_5	MLC2_SRC_4	MLC2_SRC_3	MLC2_SRC_2	MLC2_SRC_1	MLC2_SRC_0
------------	------------	------------	------------	------------	------------	------------	------------

**Table 266. MLC2\_SRC register description**

MLC2_SRC_[7:0]	Output value of MLC2 decision tree
----------------	------------------------------------

## 11.39 MLC3\_SRC (72h)

Machine learning core source register (R)

**Table 267. MLC3\_SRC register**

MLC3_SRC_7	MLC3_SRC_6	MLC3_SRC_5	MLC3_SRC_4	MLC3_SRC_3	MLC3_SRC_2	MLC3_SRC_1	MLC3_SRC_0
------------	------------	------------	------------	------------	------------	------------	------------

**Table 268. MLC3\_SRC register description**

MLC3_SRC_[7:0]	Output value of MLC3 decision tree
----------------	------------------------------------

## 11.40 MLC4\_SRC (73h)

Machine learning core source register (R)

**Table 269. MLC4\_SRC register**

MLC4_SRC_7	MLC4_SRC_6	MLC4_SRC_5	MLC4_SRC_4	MLC4_SRC_3	MLC4_SRC_2	MLC4_SRC_1	MLC4_SRC_0
------------	------------	------------	------------	------------	------------	------------	------------

**Table 270. MLC4\_SRC register description**

MLC4_SRC_[7:0]	Output value of MLC4 decision tree
----------------	------------------------------------

## 12

## Embedded advanced features pages

The table given below provides a list of the registers for the embedded advanced features page 0. These registers are accessible when PAGE\_SEL[3:0] are set to 0000 in PAGE\_SEL (02h).

Table 271. Register address map - embedded advanced features page 0

Name	Type	Register address		Default	Comment
		Hex	Binary		
SFLP_GAME_GBIASX_L	R/W	6E	01101110	00000000	
SFLP_GAME_GBIASX_H	R/W	6F	01101111	00000000	
SFLP_GAME_GBIASY_L	R/W	70	01110000	00000000	
SFLP_GAME_GBIASY_H	R/W	71	01110001	00000000	
SFLP_GAME_GBIASZ_L	R/W	72	01110010	00000000	
SFLP_GAME_GBIASZ_H	R/W	73	01110011	00000000	
FSM_QVAR_SENSITIVITY_L	R/W	BA	10111010	00100100	
FSM_QVAR_SENSITIVITY_H	R/W	BB	10111011	00010110	

The following table provides a list of the registers for the embedded advanced features page 1. These registers are accessible when PAGE\_SEL[3:0] are set to 0001 in PAGE\_SEL (02h).

Table 272. Register address map - embedded advanced features page 1

Name	Type	Register address		Default	Comment
		Hex	Binary		
FSM_LC_TIMEOUT_L	R/W	7A	01111010	00000000	
FSM_LC_TIMEOUT_H	R/W	7B	01111011	00000000	
FSM_PROGRAMS	R/W	7C	01111100	00000000	
FSM_START_ADD_L	R/W	7E	01111110	00000000	
FSM_START_ADD_H	R/W	7F	01111111	00000000	
PEDO_CMD_REG	R/W	83	10000011	00000000	
PEDO_DEB_STEPS_CONF	R/W	84	10000100	00001010	
PEDO_SC_DELTAT_L	R/W	D0	11010000	00000000	
PEDO_SC_DELTAT_H	R/W	D1	11010001	00000000	
MLC_QVAR_SENSITIVITY_L	R/W	E8	11101000	00000000	
MLC_QVAR_SENSITIVITY_H	R/W	E9	11101001	00111100	

Reserved registers must not be changed. Writing to those registers may cause permanent damage to the device. The content of the registers that are loaded at boot should not be changed. They contain the factory calibration values. Their content is automatically restored when the device is powered up.

**Write procedure example:** write value 06h in register at address 84h (PEDO\_DEB\_STEPS\_CONF) in page 1

1. Write bit EMB\_FUNC\_REG\_ACCESS = 1 in FUNC\_CFG\_ACCESS (01h) // Enable access to embedded functions registers
2. Write bit PAGE\_WRITE = 1 in PAGE\_RW (17h) register // Select write operation mode
3. Write 0001 in PAGE\_SEL[3:0] field of register PAGE\_SEL (02h) // Select page 1
4. Write 84h in PAGE\_ADDR register (08h) // Set address
5. Write 06h in PAGE\_DATA register (09h) // Set value to be written
6. Write bit PAGE\_WRITE = 0 in PAGE\_RW (17h) register // Write operation disabled
7. Write bit EMB\_FUNC\_REG\_ACCESS = 0 in FUNC\_CFG\_ACCESS (01h) // Disable access to embedded functions registers

**Read procedure example:** read value of register at address 84h (PEDO\_DEB\_STEPS\_CONF) in page 1

1. Write bit EMB\_FUNC\_REG\_ACCESS = 1 in FUNC\_CFG\_ACCESS (01h) // Enable access to embedded functions registers
2. Write bit PAGE\_READ = 1 in PAGE\_RW (17h) register // Select read operation mode
3. Write 0001 in PAGE\_SEL[3:0] field of register PAGE\_SEL (02h) // Select page 1
4. Write 84h in PAGE\_ADDR register (08h) // Set address
5. Read value of PAGE\_DATA register (09h) // Get register value
6. Write bit PAGE\_READ = 0 in PAGE\_RW (17h) register // Read operation disabled
7. Write bit EMB\_FUNC\_REG\_ACCESS = 0 in FUNC\_CFG\_ACCESS (01h) // Disable access to embedded functions registers

**Note:**

*Steps 1 and 2 of both procedures are intended to be performed at the beginning of the procedure. Steps 6 and 7 of both procedures are intended to be performed at the end of the procedure. If the procedure involves multiple operations, only steps 3, 4 and 5 must be repeated for each operation. If, in particular, the multiple operations involve consecutive registers, only step 5 can be performed.*

## 13 Embedded advanced features register description

### 13.1 Page 0 - embedded advanced features registers

#### 13.1.1 SFLP\_GAME\_GBIASX\_L (6Eh) and SFLP\_GAME\_GBIASX\_H (6Fh)

SFLP game algorithm X-axis gyroscope bias register (R/W)

The value is expressed as half-precision floating-point format: SEEEEEFFFFFF (S: 1 sign bit; E: 5 exponent bits; F: 10 fraction bits).

**Table 273. SFLP\_GAME\_GBIASX\_L register**

GAME_GBIASX_7	GAME_GBIASX_6	GAME_GBIASX_5	GAME_GBIASX_4	GAME_GBIASX_3	GAME_GBIASX_2	GAME_GBIASX_1	GAME_GBIASX_0
---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------

**Table 274. SFLP\_GAME\_GBIASX\_L register description**

GAME_GBIASX_[7:0]	SFLP game algorithm X-axis gbias: temporary register for gbias setting procedure (LSbyte). Default value: 00000000
-------------------	--

**Table 275. SFLP\_GAME\_GBIASX\_H register**

GAME_GBIASX_15	GAME_GBIASX_14	GAME_GBIASX_13	GAME_GBIASX_12	GAME_GBIASX_11	GAME_GBIASX_10	GAME_GBIASX_9	GAME_GBIASX_8
----------------	----------------	----------------	----------------	----------------	----------------	---------------	---------------

**Table 276. SFLP\_GAME\_GBIASX\_H register description**

GAME_GBIASX_[15:8]	SFLP game algorithm X-axis gbias: temporary register for gbias setting procedure (MSbyte). Default value: 00000000
--------------------	--

#### 13.1.2 SFLP\_GAME\_GBIASY\_L (70h) and SFLP\_GAME\_GBIASY\_H (71h)

SFLP game algorithm Y-axis gyroscope bias register (R/W)

The value is expressed as half-precision floating-point format: SEEEEEFFFFFF (S: 1 sign bit; E: 5 exponent bits; F: 10 fraction bits).

**Table 277. SFLP\_GAME\_GBIASY\_L register**

GAME_GBIASY_7	GAME_GBIASY_6	GAME_GBIASY_5	GAME_GBIASY_4	GAME_GBIASY_3	GAME_GBIASY_2	GAME_GBIASY_1	GAME_GBIASY_0
---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------

**Table 278. SFLP\_GAME\_GBIASY\_L register description**

GAME_GBIASY_[7:0]	SFLP game algorithm Y-axis gbias: temporary register for gbias setting procedure (LSbyte). Default value: 00000000
-------------------	--

**Table 279. SFLP\_GAME\_GBIASY\_H register**

GAME_GBIASY_15	GAME_GBIASY_14	GAME_GBIASY_13	GAME_GBIASY_12	GAME_GBIASY_11	GAME_GBIASY_10	GAME_GBIASY_9	GAME_GBIASY_8
----------------	----------------	----------------	----------------	----------------	----------------	---------------	---------------

**Table 280. SFLP\_GAME\_GBIASY\_H register description**

GAME_GBIASY_[15:8]	SFLP game algorithm Y-axis gbias: temporary register for gbias setting procedure (MSbyte). Default value: 00000000
--------------------	--

### 13.1.3

#### SFLP\_GAME\_GBIASZ\_L (72h) and SFLP\_GAME\_GBIASZ\_H (73h)

SFLP game algorithm Z-axis gyroscope bias register (R/W)

The value is expressed as half-precision floating-point format: SEEEEEFFFFFFFFF (S: 1 sign bit; E: 5 exponent bits; F: 10 fraction bits).

**Table 281. SFLP\_GAME\_GBIASZ\_L register**

GAME_GBIASZ_7	GAME_GBIASZ_6	GAME_GBIASZ_5	GAME_GBIASZ_4	GAME_GBIASZ_3	GAME_GBIASZ_2	GAME_GBIASZ_1	GAME_GBIASZ_0
---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------

**Table 282. SFLP\_GAME\_GBIASZ\_L register description**

GAME_GBIASZ_[7:0]	SFLP game algorithm Z-axis gbias: temporary register for gbias setting procedure (LSbyte). Default value: 00000000
-------------------	--

**Table 283. SFLP\_GAME\_GBIASZ\_H register**

GAME_GBIASZ_15	GAME_GBIASZ_14	GAME_GBIASZ_13	GAME_GBIASZ_12	GAME_GBIASZ_11	GAME_GBIASZ_10	GAME_GBIASZ_9	GAME_GBIASZ_8
----------------	----------------	----------------	----------------	----------------	----------------	---------------	---------------

**Table 284. SFLP\_GAME\_GBIASZ\_H register description**

GAME_GBIASZ_[15:8]	SFLP game algorithm Z-axis gbias: temporary register for gbias setting procedure (MSbyte). Default value: 00000000
--------------------	--

### 13.1.4

#### FSM\_QVAR\_SENSITIVITY\_L (BAh) and FSM\_QVAR\_SENSITIVITY\_L (BBh)

Qvar sensor sensitivity value register for the finite state machine (R/W)

This register corresponds to the conversion value of the Qvar sensor. The register value is expressed as half-precision floating-point format: SEEEEEFFFFFFFFF (S: 1 sign bit; E: 5 exponent bits; F: 10 fraction bits).

The default value of FSM\_QVAR\_S\_[15:0] bits is 0x1624.

**Table 285. FSM\_QVAR\_SENSITIVITY\_L register**

FSM_QVAR_S_7	FSM_QVAR_S_6	FSM_QVAR_S_5	FSM_QVAR_S_4	FSM_QVAR_S_3	FSM_QVAR_S_2	FSM_QVAR_S_1	FSM_QVAR_S_0
--------------	--------------	--------------	--------------	--------------	--------------	--------------	--------------

**Table 286. FSM\_QVAR\_SENSITIVITY\_L register description**

FSM_QVAR_S_[7:0]	Qvar sensor sensitivity (LSbyte). Default value: 00100100
------------------	---

**Table 287. FSM\_QVAR\_SENSITIVITY\_H register**

FSM_QVAR_S_15	FSM_QVAR_S_14	FSM_QVAR_S_13	FSM_QVAR_S_12	FSM_QVAR_S_11	FSM_QVAR_S_10	FSM_QVAR_S_9	FSM_QVAR_S_8
---------------	---------------	---------------	---------------	---------------	---------------	--------------	--------------

**Table 288. FSM\_QVAR\_SENSITIVITY\_H register description**

FSM_QVAR_S_[15:8]	Qvar sensor (MSbyte). Default value: 00010110
-------------------	---

## 13.2 Page1 - embedded advanced features registers

### 13.2.1 FSM\_LC\_TIMEOUT\_L (7Ah) and FSM\_LC\_TIMEOUT\_H (7Bh)

FSM long counter timeout register (R/W)

The long counter timeout value is an unsigned integer value (16-bit format). When the long counter value reached this value, the FSM generates an interrupt.

**Table 289. FSM\_LC\_TIMEOUT\_L register**

FSM_LC_TIMEOUT7	FSM_LC_TIMEOUT6	FSM_LC_TIMEOUT5	FSM_LC_TIMEOUT4	FSM_LC_TIMEOUT3	FSM_LC_TIMEOUT2	FSM_LC_TIMEOUT1	FSM_LC_TIMEOUT0
-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------

**Table 290. FSM\_LC\_TIMEOUT\_L register description**

FSM_LC_TIMEOUT[7:0]	FSM long counter timeout value (LSbyte). Default value: 00000000
---------------------	--

**Table 291. FSM\_LC\_TIMEOUT\_H register**

FSM_LC_TIMEOUT15	FSM_LC_TIMEOUT14	FSM_LC_TIMEOUT13	FSM_LC_TIMEOUT12	FSM_LC_TIMEOUT11	FSM_LC_TIMEOUT10	FSM_LC_TIMEOUT9	FSM_LC_TIMEOUT8
------------------	------------------	------------------	------------------	------------------	------------------	-----------------	-----------------

**Table 292. FSM\_LC\_TIMEOUT\_H register description**

FSM_LC_TIMEOUT[15:8]	FSM long counter timeout value (MSbyte). Default value: 00000000
----------------------	--

### 13.2.2 FSM\_PROGRAMS (7Ch)

FSM number of programs register (R/W)

**Table 293. FSM\_PROGRAMS register**

FSM_N_PROG7	FSM_N_PROG6	FSM_N_PROG5	FSM_N_PROG4	FSM_N_PROG3	FSM_N_PROG2	FSM_N_PROG1	FSM_N_PROG0
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

**Table 294. FSM\_PROGRAMS register description**

FSM_N_PROG[7:0]	Number of FSM programs; must be less than or equal to 8. Default value: 00000000
-----------------	--

### 13.2.3 FSM\_START\_ADD\_L (7Eh) and FSM\_START\_ADD\_H (7Fh)

FSM start address register (R/W). First available address is 0x35C.

Table 295. **FSM\_START\_ADD\_L** register

FSM_START7	FSM_START6	FSM_START5	FSM_START4	FSM_START3	FSM_START2	FSM_START1	FSM_START0
------------	------------	------------	------------	------------	------------	------------	------------

Table 296. **FSM\_START\_ADD\_L** register description

FSM_START[7:0]	FSM start address value (LSbyte). Default value: 00000000
----------------	---

Table 297. **FSM\_START\_ADD\_H** register

FSM_START15	FSM_START14	FSM_START13	FSM_START12	FSM_START11	FSM_START10	FSM_START9	FSM_START8
-------------	-------------	-------------	-------------	-------------	-------------	------------	------------

Table 298. **FSM\_START\_ADD\_H** register description

FSM_START[15:8]	FSM start address value (MSbyte). Default value: 00000000
-----------------	---

### 13.2.4 PEDO\_CMD\_REG (83h)

Pedometer configuration register (R/W)

Table 299. **PEDO\_CMD\_REG** register

0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	0 <sup>(1)</sup>	CARRY_COUNT_EN	FP_REJECTION_EN	0 <sup>(1)</sup>	0 <sup>(1)</sup>
------------------	------------------	------------------	------------------	----------------	-----------------	------------------	------------------

1. This bit must be set to 0 for the correct operation of the device.

Table 300. **PEDO\_CMD\_REG** register description

CARRY_COUNT_EN	Set when user wants to generate interrupt only on count overflow event
FP_REJECTION_EN <sup>(1)</sup>	Enables the false-positive rejection feature

1. This bit is active when the MLC\_EN bit of [EMB\\_FUNC\\_EN\\_B \(05h\)](#) or the MLC\_BEFORE\_FSM\_EN bit in the [EMB\\_FUNC\\_EN\\_A \(04h\)](#) register is set to 1.

### 13.2.5 PEDO\_DEB\_STEPS\_CONF (84h)

Pedometer debounce configuration register (R/W)

**Table 301. PEDO\_DEB\_STEPS\_CONF register**

DEB_STEP7	DEB_STEP6	DEB_STEP5	DEB_STEP4	DEB_STEP3	DEB_STEP2	DEB_STEP1	DEB_STEP0
-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------

**Table 302. PEDO\_DEB\_STEPS\_CONF register description**

DEB_STEP[7:0]	Debounce threshold. Minimum number of steps to increment the step counter (debounce). Default value: 00001010
---------------	---

### 13.2.6 PEDO\_SC\_DELTAT\_L (D0h) and PEDO\_SC\_DELTAT\_H (D1h)

Time period register for step detection on delta time (R/W)

**Table 303. PEDO\_SC\_DELTAT\_L register**

PD_SC_7	PD_SC_6	PD_SC_5	PD_SC_4	PD_SC_3	PD_SC_2	PD_SC_1	PD_SC_0
---------	---------	---------	---------	---------	---------	---------	---------

**Table 304. PEDO\_SC\_DELTAT\_H register**

PD_SC_15	PD_SC_14	PD_SC_13	PD_SC_12	PD_SC_11	PD_SC_10	PD_SC_9	PD_SC_8
----------	----------	----------	----------	----------	----------	---------	---------

**Table 305. PEDO\_SC\_DELTAT\_H/L register description**

PD_SC_[15:0]	Time period value (1LSB = 6.4 ms)
--------------	-----------------------------------

### 13.2.7

### MLC\_QVAR\_SENSITIVITY\_L (E8h) and MLC\_QVAR\_SENSITIVITY\_H (E9h)

Qvar sensor sensitivity value register for the machine learning core (R/W)

This register corresponds to the conversion value of the Qvar sensor. The register value is expressed as half-precision floating-point format: SEEEEEEEEEEEE (S: 1 sign bit; E: 5 exponent bits; F: 10 fraction bits).

The default value of MLC\_QVAR\_S\_[15:0] is 0x3C00.

**Table 306. MLC\_QVAR\_SENSITIVITY\_L register**

MLC_QVAR_S_7	MLC_QVAR_S_6	MLC_QVAR_S_5	MLC_QVAR_S_4	MLC_QVAR_S_3	MLC_QVAR_S_2	MLC_QVAR_S_1	MLC_QVAR_S_0
--------------	--------------	--------------	--------------	--------------	--------------	--------------	--------------

**Table 307. MLC\_QVAR\_SENSITIVITY\_L register description**

MLC_QVAR_S_[7:0]	Qvar sensor sensitivity (LSbyte). Default value: 00000000
------------------	---

**Table 308. MLC\_QVAR\_SENSITIVITY\_H register**

MLC_QVAR_S_15	MLC_QVAR_S_14	MLC_QVAR_S_13	MLC_QVAR_S_12	MLC_QVAR_S_11	MLC_QVAR_S_10	MLC_QVAR_S_9	MLC_QVAR_S_8
---------------	---------------	---------------	---------------	---------------	---------------	--------------	--------------

**Table 309. MLC\_QVAR\_SENSITIVITY\_H register description**

MLC_QVAR_S_[15:8]	Qvar sensor sensitivity (MSbyte). Default value: 00111100
-------------------	---

## 14 Soldering information

The LGA package is compliant with the ECOPACK and RoHS standard.

It is qualified for soldering heat resistance according to JEDEC J-STD-020.



For land pattern and soldering recommendations, consult technical note TN0018 available on [www.st.com](http://www.st.com).

## 15 Package information

In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK packages, depending on their level of environmental compliance. ECOPACK specifications, grade definitions and product status are available at: [www.st.com](http://www.st.com). ECOPACK is an ST trademark.

### 15.1 LGA-14L package information

Figure 32. LGA-14L 2.5 x 3.0 x 0.74 mm package outline and mechanical data

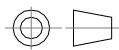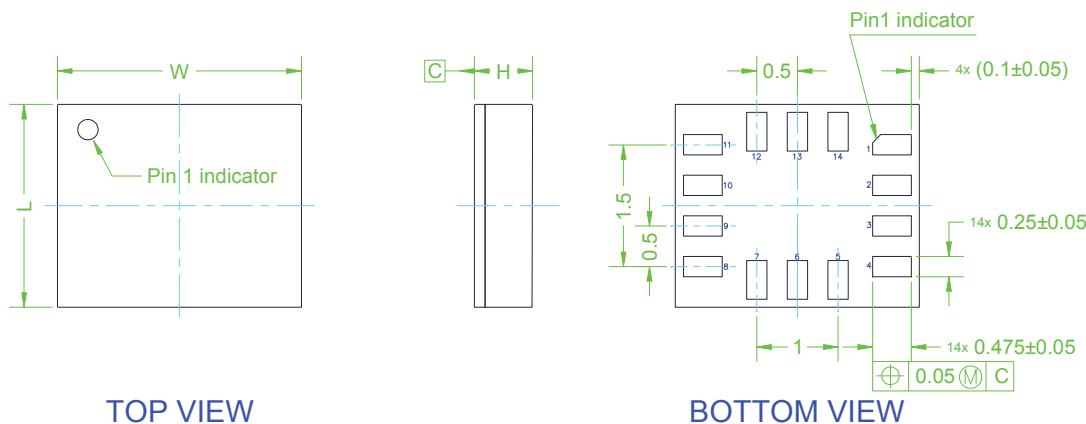

Dimensions are in millimeter unless otherwise specified  
General tolerance is +/-0.1mm unless otherwise specified

#### OUTER DIMENSIONS

ITEM	DIMENSION [mm]	TOLERANCE [mm]
Length [L]	2.50	±0.05
Width [W]	3.00	±0.05
Height [H]	0.74	MAX

DM00747677\_4

## 15.2 LGA-14 packing information

Figure 33. Carrier tape information for LGA-14 package



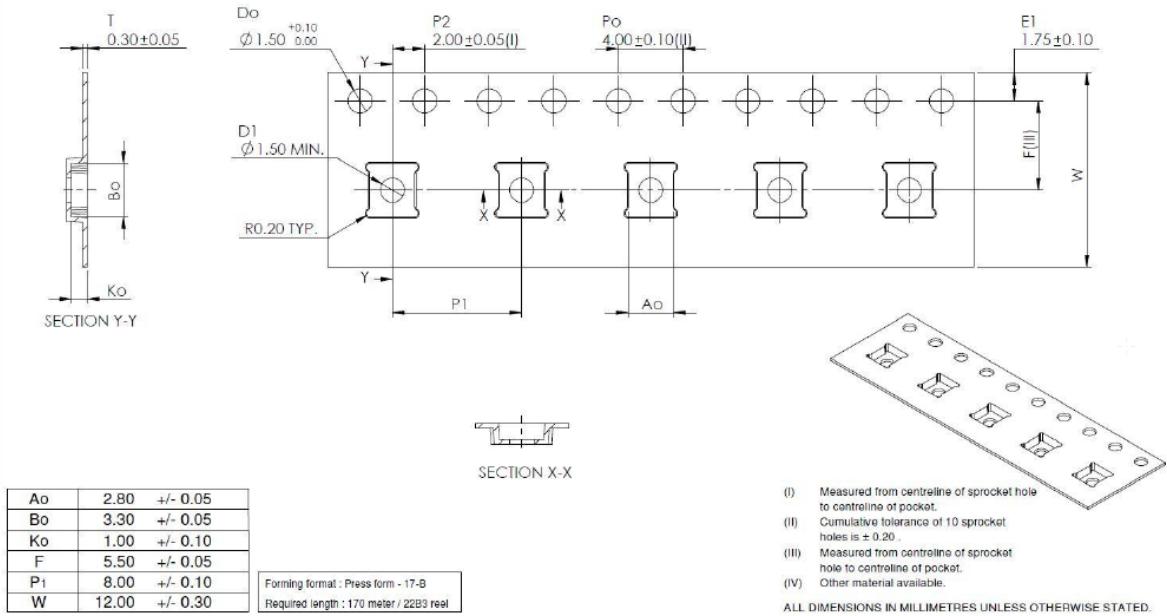


Figure 34. LGA-14 package orientation in carrier tape

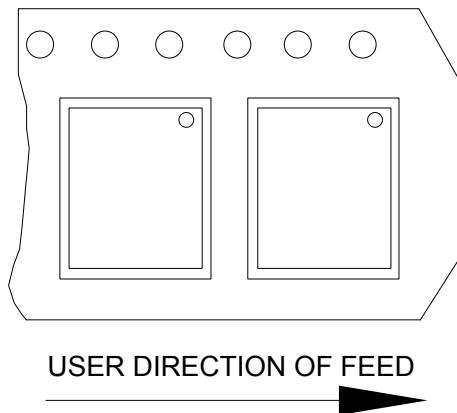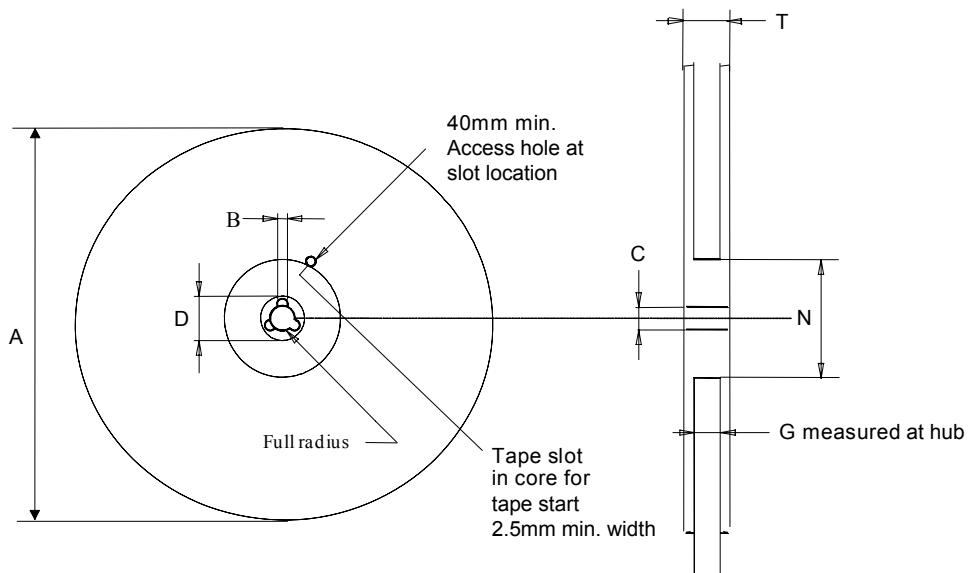

**Figure 35.** Reel information for carrier tape of LGA-14 package**Table 310.** Reel dimensions for carrier tape of LGA-14 package

Reel dimensions (mm)	
A (max)	330
B (min)	1.5
C	13 ±0.25
D (min)	20.2
N (min)	60
G	12.4 +2/-0
T (max)	18.4

## Revision history

**Table 311. Document revision history**

Date	Revision	Changes
11-Mar-2024	1	Initial release

## Contents

<b>1</b>	<b>Overview</b>	<b>3</b>
<b>2</b>	<b>Embedded low-power features</b>	<b>4</b>
<b>2.1</b>	Pedometer functions: step detector and step counters	4
<b>2.2</b>	Finite state machine	5
<b>2.3</b>	Machine learning core	6
<b>2.4</b>	Adaptive self-configuration (ASC)	6
<b>2.5</b>	Sensor fusion low power	7
<b>2.6</b>	Pedometer algorithm	8
<b>2.7</b>	Tilt detection	8
<b>2.8</b>	Significant motion detection	8
<b>3</b>	<b>Pin description</b>	<b>9</b>
<b>3.1</b>	Pin connections	10
<b>4</b>	<b>Module specifications</b>	<b>12</b>
<b>4.1</b>	Mechanical characteristics	12
<b>4.2</b>	Electrical characteristics	15
<b>4.3</b>	Temperature sensor characteristics	16
<b>4.4</b>	Communication interface characteristics	17
<b>4.4.1</b>	SPI - serial peripheral interface	17
<b>4.4.2</b>	I <sup>2</sup> C - inter-IC control interface	19
<b>4.4.3</b>	TDM - time-division multiplexing interface	20
<b>4.5</b>	Absolute maximum ratings	21
<b>4.6</b>	Terminology	22
<b>4.6.1</b>	Sensitivity	22
<b>4.6.2</b>	Zero-g and zero-rate level	22
<b>5</b>	<b>Digital interfaces</b>	<b>23</b>
<b>5.1</b>	I <sup>2</sup> C/SPI interface	23
<b>5.1.1</b>	I <sup>2</sup> C serial interface	23
<b>5.1.2</b>	I <sup>2</sup> C operation	24
<b>5.1.3</b>	SPI bus interface	26
<b>5.2</b>	MIPI I3C® interface	29
<b>5.2.1</b>	MIPI I3C® target interface	29
<b>5.2.2</b>	MIPI I3C® CCC supported commands	29
<b>5.2.3</b>	Overview of antispike filter management	30
<b>5.3</b>	TDM interface	31

5.3.1	Frame synchronization (WCLK) . . . . .	31
5.3.2	Serial clock (BCLK) . . . . .	31
5.3.3	Mapping the TDM axes . . . . .	32
5.3.4	TDM configurations . . . . .	33
<b>6</b>	<b>Functionality . . . . .</b>	<b>35</b>
6.1	Operating modes . . . . .	35
6.2	Accelerometer power modes . . . . .	35
6.3	Accelerometer dual-channel mode . . . . .	36
6.4	Gyroscope power modes . . . . .	37
6.5	Analog hub functionality . . . . .	37
6.6	Qvar functionality . . . . .	37
6.7	Block diagram of filters . . . . .	38
6.7.1	Block diagrams of the accelerometer filters . . . . .	39
6.7.2	Block diagrams of the gyroscope filters . . . . .	41
6.8	FIFO . . . . .	42
6.8.1	Bypass mode . . . . .	42
6.8.2	FIFO mode . . . . .	43
6.8.3	Continuous mode . . . . .	43
6.8.4	Continuous-to-FIFO mode . . . . .	43
6.8.5	ContinuousWTM-to-full mode . . . . .	43
6.8.6	Bypass-to-continuous mode . . . . .	44
6.8.7	Bypass-to-FIFO mode . . . . .	44
6.8.8	FIFO reading procedure . . . . .	44
<b>7</b>	<b>Application hints . . . . .</b>	<b>45</b>
7.1	ISM330BX electrical connections in mode 1 . . . . .	45
7.2	ISM330BX electrical connections in mode 2 . . . . .	46
7.3	ISM330BX electrical connections for Qvar . . . . .	47
7.4	ISM330BX internal pin status . . . . .	48
<b>8</b>	<b>Register mapping . . . . .</b>	<b>49</b>
<b>9</b>	<b>Register description . . . . .</b>	<b>52</b>
9.1	FUNC_CFG_ACCESS (01h) . . . . .	52
9.2	PIN_CTRL (02h) . . . . .	52
9.3	IF_CFG (03h) . . . . .	53
9.4	FIFO_CTRL1 (07h) . . . . .	54
9.5	FIFO_CTRL2 (08h) . . . . .	54
9.6	FIFO_CTRL3 (09h) . . . . .	55

<b>9.7</b>	FIFO_CTRL4 (0Ah) . . . . .	56
<b>9.8</b>	COUNTER_BDR_REG1 (0Bh) . . . . .	57
<b>9.9</b>	COUNTER_BDR_REG2 (0Ch) . . . . .	57
<b>9.10</b>	INT1_CTRL (0Dh) . . . . .	58
<b>9.11</b>	INT2_CTRL (0Eh) . . . . .	59
<b>9.12</b>	WHO_AM_I (0Fh) . . . . .	59
<b>9.13</b>	CTRL1 (10h) . . . . .	60
<b>9.14</b>	CTRL2 (11h) . . . . .	61
<b>9.15</b>	CTRL3 (12h) . . . . .	62
<b>9.16</b>	CTRL4 (13h) . . . . .	63
<b>9.17</b>	CTRL5 (14h) . . . . .	64
<b>9.18</b>	CTRL6 (15h) . . . . .	64
<b>9.19</b>	CTRL7 (16h) . . . . .	65
<b>9.20</b>	CTRL8 (17h) . . . . .	66
<b>9.21</b>	CTRL9 (18h) . . . . .	67
<b>9.22</b>	CTRL10 (19h) . . . . .	69
<b>9.23</b>	CTRL_STATUS (1Ah) . . . . .	69
<b>9.24</b>	FIFO_STATUS1 (1Bh) . . . . .	70
<b>9.25</b>	FIFO_STATUS2 (1Ch) . . . . .	70
<b>9.26</b>	ALL_INT_SRC (1Dh) . . . . .	71
<b>9.27</b>	STATUS_REG (1Eh) . . . . .	72
<b>9.28</b>	OUT_TEMP_L (20h), OUT_TEMP_H (21h) . . . . .	72
<b>9.29</b>	OUTX_L_G (22h) and OUTX_H_G (23h) . . . . .	73
<b>9.30</b>	OUTY_L_G (24h) and OUTY_H_G (25h) . . . . .	73
<b>9.31</b>	OUTZ_L_G (26h) and OUTZ_H_G (27h) . . . . .	73
<b>9.32</b>	OUTZ_L_A (28h) and OUTZ_H_A (29h) . . . . .	74
<b>9.33</b>	OUTY_L_A (2Ah) and OUTY_H_A (2Bh) . . . . .	74
<b>9.34</b>	OUTX_L_A (2Ch) and OUTX_H_A (2Dh) . . . . .	74
<b>9.35</b>	UI_OUTZ_L_A_DualC (34h) and UI_OUTZ_H_A_DualC (35h) . . . . .	75
<b>9.36</b>	UI_OUTY_L_A_DualC (36h) and UI_OUTY_H_A_DualC (37h) . . . . .	75
<b>9.37</b>	UI_OUTX_L_A_DualC (38h) and UI_OUTX_H_A_DualC (39h) . . . . .	75
<b>9.38</b>	AH_QVAR_OUT_L (3Ah) and AH_QVAR_OUT_H (3Bh) . . . . .	76
<b>9.39</b>	TIMESTAMP0 (40h), TIMESTAMP1 (41h), TIMESTAMP2 (42h), and TIMESTAMP3 (43h)	76
<b>9.40</b>	WAKE_UP_SRC (45h) . . . . .	77
<b>9.41</b>	TAP_SRC (46h) . . . . .	78
<b>9.42</b>	D6D_SRC (47h) . . . . .	79

<b>9.43</b>	EMB_FUNC_STATUS_MAINPAGE (49h) . . . . .	80
<b>9.44</b>	FSM_STATUS_MAINPAGE (4Ah) . . . . .	80
<b>9.45</b>	MLC_STATUS_MAINPAGE (4Bh) . . . . .	81
<b>9.46</b>	INTERNAL_FREQ_FINE (4Fh) . . . . .	81
<b>9.47</b>	FUNCTIONS_ENABLE (50h) . . . . .	82
<b>9.48</b>	INACTIVITY_DUR (54h) . . . . .	83
<b>9.49</b>	INACTIVITY_THS (55h) . . . . .	83
<b>9.50</b>	TAP_CFG0 (56h) . . . . .	84
<b>9.51</b>	TAP_CFG1 (57h) . . . . .	85
<b>9.52</b>	TAP_CFG2 (58h) . . . . .	85
<b>9.53</b>	TAP_THS_6D (59h) . . . . .	86
<b>9.54</b>	TAP_DUR (5Ah) . . . . .	87
<b>9.55</b>	WAKE_UP_THS (5Bh) . . . . .	87
<b>9.56</b>	WAKE_UP_DUR (5Ch) . . . . .	88
<b>9.57</b>	FREE_FALL (5Dh) . . . . .	88
<b>9.58</b>	MD1_CFG (5Eh) . . . . .	89
<b>9.59</b>	MD2_CFG (5Fh) . . . . .	90
<b>9.60</b>	EMB_FUNC_CFG (63h) . . . . .	91
<b>9.61</b>	TDM_CFG0 (6Ch) . . . . .	92
<b>9.62</b>	TDM_CFG1 (6Dh) . . . . .	93
<b>9.63</b>	TDM_CFG2 (6Eh) . . . . .	93
<b>9.64</b>	Z_OFS_USR (73h) . . . . .	94
<b>9.65</b>	Y_OFS_USR (74h) . . . . .	94
<b>9.66</b>	X_OFS_USR (75h) . . . . .	94
<b>9.67</b>	FIFO_DATA_OUT_TAG (78h) . . . . .	95
<b>9.68</b>	FIFO_DATA_OUT_BYTE_0 (79h) and FIFO_DATA_OUT_BYTE_1 (7Ah) . . . . .	96
<b>9.69</b>	FIFO_DATA_OUT_BYTE_2 (7Bh) and FIFO_DATA_OUT_BYTE_3 (7Ch) . . . . .	96
<b>9.70</b>	FIFO_DATA_OUT_BYTE_4 (7Dh) and FIFO_DATA_OUT_BYTE_5 (7Eh) . . . . .	96
<b>10</b>	<b>Embedded functions register mapping</b> . . . . .	97
<b>11</b>	<b>Embedded functions register description</b> . . . . .	99
<b>11.1</b>	PAGE_SEL (02h) . . . . .	99
<b>11.2</b>	EMB_FUNC_EN_A (04h) . . . . .	99
<b>11.3</b>	EMB_FUNC_EN_B (05h) . . . . .	100
<b>11.4</b>	EMB_FUNC_EXEC_STATUS (07h) . . . . .	100
<b>11.5</b>	PAGE_ADDRESS (08h) . . . . .	101
<b>11.6</b>	PAGE_VALUE (09h) . . . . .	101

<b>11.7</b>	EMB_FUNC_INT1 (0Ah) . . . . .	101
<b>11.8</b>	FSM_INT1 (0Bh) . . . . .	102
<b>11.9</b>	MLC_INT1 (0Dh) . . . . .	103
<b>11.10</b>	EMB_FUNC_INT2 (0Eh) . . . . .	103
<b>11.11</b>	FSM_INT2 (0Fh) . . . . .	104
<b>11.12</b>	MLC_INT2 (11h) . . . . .	105
<b>11.13</b>	EMB_FUNC_STATUS (12h) . . . . .	105
<b>11.14</b>	FSM_STATUS (13h) . . . . .	106
<b>11.15</b>	MLC_STATUS (15h) . . . . .	106
<b>11.16</b>	PAGE_RW (17h) . . . . .	107
<b>11.17</b>	EMB_FUNC_FIFO_EN_A (44h) . . . . .	107
<b>11.18</b>	EMB_FUNC_FIFO_EN_B (45h) . . . . .	108
<b>11.19</b>	FSM_ENABLE (46h) . . . . .	108
<b>11.20</b>	FSM_LONG_COUNTER_L (48h) and FSM_LONG_COUNTER_H (49h) . . . . .	109
<b>11.21</b>	INT_ACK_MASK (4Bh) . . . . .	110
<b>11.22</b>	FSM_OUTS1 (4Ch) . . . . .	111
<b>11.23</b>	FSM_OUTS2 (4Dh) . . . . .	112
<b>11.24</b>	FSM_OUTS3 (4Eh) . . . . .	113
<b>11.25</b>	FSM_OUTS4 (4Fh) . . . . .	114
<b>11.26</b>	FSM_OUTS5 (50h) . . . . .	115
<b>11.27</b>	FSM_OUTS6 (51h) . . . . .	116
<b>11.28</b>	FSM_OUTS7 (52h) . . . . .	117
<b>11.29</b>	FSM_OUTS8 (53h) . . . . .	118
<b>11.30</b>	SFLP_ODR (5Eh) . . . . .	119
<b>11.31</b>	FSM_ODR (5Fh) . . . . .	119
<b>11.32</b>	MLC_ODR (60h) . . . . .	120
<b>11.33</b>	STEP_COUNTER_L (62h) and STEP_COUNTER_H (63h) . . . . .	120
<b>11.34</b>	EMB_FUNC_SRC (64h) . . . . .	121
<b>11.35</b>	EMB_FUNC_INIT_A (66h) . . . . .	122
<b>11.36</b>	EMB_FUNC_INIT_B (67h) . . . . .	122
<b>11.37</b>	MLC1_SRC (70h) . . . . .	123
<b>11.38</b>	MLC2_SRC (71h) . . . . .	123
<b>11.39</b>	MLC3_SRC (72h) . . . . .	123
<b>11.40</b>	MLC4_SRC (73h) . . . . .	123
<b>12</b>	<b>Embedded advanced features pages . . . . .</b>	<b>124</b>
<b>13</b>	<b>Embedded advanced features register description . . . . .</b>	<b>126</b>

---

<b>13.1</b>	Page 0 - embedded advanced features registers .....	126
<b>13.1.1</b>	SFLP_GAME_GBIASX_L (6Eh) and SFLP_GAME_GBIASX_H (6Fh) .....	126
<b>13.1.2</b>	SFLP_GAME_GBIASY_L (70h) and SFLP_GAME_GBIASY_H (71h) .....	126
<b>13.1.3</b>	SFLP_GAME_GBIASZ_L (72h) and SFLP_GAME_GBIASZ_H (73h) .....	127
<b>13.1.4</b>	FSM_QVAR_SENSITIVITY_L (BAh) and FSM_QVAR_SENSITIVITY_L (BBh) .....	127
<b>13.2</b>	Page1 - embedded advanced features registers.....	128
<b>13.2.1</b>	FSM_LC_TIMEOUT_L (7Ah) and FSM_LC_TIMEOUT_H (7Bh). ....	128
<b>13.2.2</b>	FSM_PROGRAMS (7Ch) .....	128
<b>13.2.3</b>	FSM_START_ADD_L (7Eh) and FSM_START_ADD_H (7Fh) .....	129
<b>13.2.4</b>	PEDO_CMD_REG (83h).....	129
<b>13.2.5</b>	PEDO_DEB_STEPS_CONF (84h) .....	130
<b>13.2.6</b>	PEDO_SC_DELTAT_L (D0h) and PEDO_SC_DELTAT_H (D1h) .....	130
<b>13.2.7</b>	MLC_QVAR_SENSITIVITY_L (E8h) and MLC_QVAR_SENSITIVITY_H (E9h).....	131
<b>14</b>	<b>Soldering information.</b> .....	132
<b>15</b>	<b>Package information.</b> .....	133
<b>15.1</b>	LGA-14L package information.....	133
<b>15.2</b>	LGA-14 packing information .....	134
	<b>Revision history</b> .....	136
	<b>List of tables</b> .....	143
	<b>List of figures.</b> .....	149

## List of tables

<b>Table 1.</b>	Sensor fusion performance .....	7
<b>Table 2.</b>	Pin description .....	11
<b>Table 3.</b>	Mechanical characteristics .....	12
<b>Table 4.</b>	Electrical characteristics .....	15
<b>Table 5.</b>	Electrical parameters of Qvar (@VDD = 1.8 V, T = 25 °C) .....	15
<b>Table 6.</b>	Temperature sensor characteristics .....	16
<b>Table 7.</b>	SPI target timing values .....	17
<b>Table 8.</b>	I <sup>2</sup> C target timing values .....	19
<b>Table 9.</b>	TDM timing values .....	20
<b>Table 10.</b>	Absolute maximum ratings .....	21
<b>Table 11.</b>	Serial interface pin description .....	23
<b>Table 12.</b>	I <sup>2</sup> C terminology .....	23
<b>Table 13.</b>	TAD+read/write patterns .....	24
<b>Table 14.</b>	Transfer when controller is writing one byte to target .....	24
<b>Table 15.</b>	Transfer when controller is writing multiple bytes to target .....	24
<b>Table 16.</b>	Transfer when controller is receiving (reading) one byte of data from target .....	24
<b>Table 17.</b>	Transfer when controller is receiving (reading) multiple bytes of data from target .....	24
<b>Table 18.</b>	MIPI I3C® CCC commands .....	29
<b>Table 19.</b>	Axes Z, Y, X mapped to SLOT0, SLOT1, SLOT2 .....	32
<b>Table 20.</b>	Axes Z, Y, X mapped to SLOT4, SLOT5, SLOT6 .....	32
<b>Table 21.</b>	Analog hub / Qvar channel ODR and bandwidth configuration .....	37
<b>Table 22.</b>	Gyroscope LPF2 bandwidth selection .....	41
<b>Table 23.</b>	Internal pin status .....	48
<b>Table 24.</b>	Registers address map .....	49
<b>Table 25.</b>	FUNC_CFG_ACCESS register .....	52
<b>Table 26.</b>	FUNC_CFG_ACCESS register description .....	52
<b>Table 27.</b>	PIN_CTRL register .....	52
<b>Table 28.</b>	PIN_CTRL register description .....	52
<b>Table 29.</b>	IF_CFG register .....	53
<b>Table 30.</b>	IF_CFG register description .....	53
<b>Table 31.</b>	FIFO_CTRL1 register .....	54
<b>Table 32.</b>	FIFO_CTRL1 register description .....	54
<b>Table 33.</b>	FIFO_CTRL2 register .....	54
<b>Table 34.</b>	FIFO_CTRL2 register description .....	54
<b>Table 35.</b>	FIFO_CTRL3 register .....	55
<b>Table 36.</b>	FIFO_CTRL3 register description .....	55
<b>Table 37.</b>	FIFO_CTRL4 register .....	56
<b>Table 38.</b>	FIFO_CTRL4 register description .....	56
<b>Table 39.</b>	COUNTER_BDR_REG1 register .....	57
<b>Table 40.</b>	COUNTER_BDR_REG1 register description .....	57
<b>Table 41.</b>	COUNTER_BDR_REG2 register .....	57
<b>Table 42.</b>	COUNTER_BDR_REG2 register description .....	57
<b>Table 43.</b>	INT1_CTRL register .....	58
<b>Table 44.</b>	INT1_CTRL register description .....	58
<b>Table 45.</b>	INT2_CTRL register .....	59
<b>Table 46.</b>	INT2_CTRL register description .....	59
<b>Table 47.</b>	WhoAmI register .....	59
<b>Table 48.</b>	CTRL1 register .....	60
<b>Table 49.</b>	CTRL1 register description .....	60
<b>Table 50.</b>	Accelerometer ODR selection .....	60
<b>Table 51.</b>	CTRL2 register .....	61
<b>Table 52.</b>	CTRL2 register description .....	61
<b>Table 53.</b>	Gyroscope ODR selection .....	61

<b>Table 54.</b> CTRL3 register . . . . .	62
<b>Table 55.</b> CTRL3 register description . . . . .	62
<b>Table 56.</b> CTRL4 register . . . . .	63
<b>Table 57.</b> CTRL4 register description . . . . .	63
<b>Table 58.</b> CTRL5 register . . . . .	64
<b>Table 59.</b> CTRL5 register description . . . . .	64
<b>Table 60.</b> CTRL6 register . . . . .	64
<b>Table 61.</b> CTRL6 register description . . . . .	64
<b>Table 62.</b> Gyroscope LPF1 + LPF2 bandwidth selection . . . . .	65
<b>Table 63.</b> CTRL7 register . . . . .	65
<b>Table 64.</b> CTRL7 register description . . . . .	65
<b>Table 65.</b> CTRL8 register . . . . .	66
<b>Table 66.</b> CTRL8 register description . . . . .	66
<b>Table 67.</b> Accelerometer bandwidth configurations . . . . .	66
<b>Table 68.</b> CTRL9 register . . . . .	67
<b>Table 69.</b> CTRL9 register description . . . . .	67
<b>Table 70.</b> CTRL10 register . . . . .	69
<b>Table 71.</b> CTRL10 register description . . . . .	69
<b>Table 72.</b> CTRL_STATUS register . . . . .	69
<b>Table 73.</b> CTRL_STATUS register description . . . . .	69
<b>Table 74.</b> FIFO_STATUS1 register . . . . .	70
<b>Table 75.</b> FIFO_STATUS1 register description . . . . .	70
<b>Table 76.</b> FIFO_STATUS2 register . . . . .	70
<b>Table 77.</b> FIFO_STATUS2 register description . . . . .	70
<b>Table 78.</b> ALL_INT_SRC register . . . . .	71
<b>Table 79.</b> ALL_INT_SRC register description . . . . .	71
<b>Table 80.</b> STATUS_REG register . . . . .	72
<b>Table 81.</b> STATUS_REG register description . . . . .	72
<b>Table 82.</b> OUT_TEMP_L register . . . . .	72
<b>Table 83.</b> OUT_TEMP_H register . . . . .	72
<b>Table 84.</b> OUT_TEMP register . . . . .	72
<b>Table 85.</b> OUTX_L_G register . . . . .	73
<b>Table 86.</b> OUTX_H_G register . . . . .	73
<b>Table 87.</b> OUTX_G register description . . . . .	73
<b>Table 88.</b> OUTY_L_G register . . . . .	73
<b>Table 89.</b> OUTY_H_G register . . . . .	73
<b>Table 90.</b> OUTY_G register description . . . . .	73
<b>Table 91.</b> OUTZ_L_G register . . . . .	73
<b>Table 92.</b> OUTZ_H_G register . . . . .	73
<b>Table 93.</b> OUTZ_H_G register description . . . . .	73
<b>Table 94.</b> OUTZ_L_A register . . . . .	74
<b>Table 95.</b> OUTZ_H_A register . . . . .	74
<b>Table 96.</b> OUTZ_A register description . . . . .	74
<b>Table 97.</b> OUTY_L_A register . . . . .	74
<b>Table 98.</b> OUTY_H_A register . . . . .	74
<b>Table 99.</b> OUTY_A register description . . . . .	74
<b>Table 100.</b> OUTX_L_A register . . . . .	74
<b>Table 101.</b> OUTX_H_A register . . . . .	74
<b>Table 102.</b> OUTX_A register description . . . . .	74
<b>Table 103.</b> UI_OUTZ_L_A_DualC register . . . . .	75
<b>Table 104.</b> UI_OUTZ_H_A_DualC register . . . . .	75
<b>Table 105.</b> UI_OUTZ_A_DualC register description . . . . .	75
<b>Table 106.</b> UI_OUTY_L_A_DualC register . . . . .	75
<b>Table 107.</b> UI_OUTY_H_A_DualC register . . . . .	75
<b>Table 108.</b> UI_OUTY_A_DualC register description . . . . .	75

<b>Table 109.</b> UI_OUTX_L_A_DualC register .....	75
<b>Table 110.</b> UI_OUTX_H_A_DualC register .....	75
<b>Table 111.</b> UI_OUTX_A_DualC register description .....	75
<b>Table 112.</b> AH_QVAR_OUT_L register .....	76
<b>Table 113.</b> AH_QVAR_OUT_H register .....	76
<b>Table 114.</b> AH_QVAR_OUT register description .....	76
<b>Table 115.</b> TIMESTAMP output registers .....	76
<b>Table 116.</b> TIMESTAMP output register description .....	76
<b>Table 117.</b> WAKE_UP_SRC register .....	77
<b>Table 118.</b> WAKE_UP_SRC register description .....	77
<b>Table 119.</b> TAP_SRC register .....	78
<b>Table 120.</b> TAP_SRC register description .....	78
<b>Table 121.</b> D6D_SRC register .....	79
<b>Table 122.</b> D6D_SRC register description .....	79
<b>Table 123.</b> EMB_FUNC_STATUS_MAINPAGE register .....	80
<b>Table 124.</b> EMB_FUNC_STATUS_MAINPAGE register description .....	80
<b>Table 125.</b> FSM_STATUS_MAINPAGE register .....	80
<b>Table 126.</b> FSM_STATUS_MAINPAGE register description .....	80
<b>Table 127.</b> MLC_STATUS_MAINPAGE register .....	81
<b>Table 128.</b> MLC_STATUS_MAINPAGE register description .....	81
<b>Table 129.</b> INTERNAL_FREQ_FINE register .....	81
<b>Table 130.</b> INTERNAL_FREQ_FINE register description .....	81
<b>Table 131.</b> ODRcoeff values .....	81
<b>Table 132.</b> FUNCTIONS_ENABLE register .....	82
<b>Table 133.</b> FUNCTIONS_ENABLE register description .....	82
<b>Table 134.</b> INACTIVITY_DUR register .....	83
<b>Table 135.</b> INACTIVITY_DUR register description .....	83
<b>Table 136.</b> INACTIVITY_THS register .....	83
<b>Table 137.</b> INACTIVITY_THS register description .....	83
<b>Table 138.</b> TAP_CFG0 register .....	84
<b>Table 139.</b> TAP_CFG0 register description .....	84
<b>Table 140.</b> TAP_CFG1 register .....	85
<b>Table 141.</b> TAP_CFG1 register description .....	85
<b>Table 142.</b> TAP priority decoding .....	85
<b>Table 143.</b> TAP_CFG2 register .....	85
<b>Table 144.</b> TAP_CFG2 register description .....	85
<b>Table 145.</b> TAP_THS_6D register .....	86
<b>Table 146.</b> TAP_THS_6D register description .....	86
<b>Table 147.</b> Threshold for D6D function .....	86
<b>Table 148.</b> TAP_DUR register .....	87
<b>Table 149.</b> TAP_DUR register description .....	87
<b>Table 150.</b> WAKE_UP_THS register .....	87
<b>Table 151.</b> WAKE_UP_THS register description .....	87
<b>Table 152.</b> WAKE_UP_DUR register .....	88
<b>Table 153.</b> WAKE_UP_DUR register description .....	88
<b>Table 154.</b> FREE_FALL register .....	88
<b>Table 155.</b> FREE_FALL register description .....	88
<b>Table 156.</b> Threshold for free-fall function .....	88
<b>Table 157.</b> MD1_CFG register .....	89
<b>Table 158.</b> MD1_CFG register description .....	89
<b>Table 159.</b> MD2_CFG register .....	90
<b>Table 160.</b> MD2_CFG register description .....	90
<b>Table 161.</b> EMB_FUNC_CFG register .....	91
<b>Table 162.</b> EMB_FUNC_CFG register description .....	91
<b>Table 163.</b> TDM_CFG0 register .....	92

<b>Table 164.</b> TDM_CFG0 register description . . . . .	92
<b>Table 165.</b> WCLK and BCLK frequencies . . . . .	92
<b>Table 166.</b> TDM_CFG1 register . . . . .	93
<b>Table 167.</b> TDM_CFG1 register description . . . . .	93
<b>Table 168.</b> Selection of order of transmission of TDM axes . . . . .	93
<b>Table 169.</b> TDM_CFG2 register . . . . .	93
<b>Table 170.</b> TDM_CFG2 register description . . . . .	93
<b>Table 171.</b> Z_OFS_USR register . . . . .	94
<b>Table 172.</b> Z_OFS_USR register description . . . . .	94
<b>Table 173.</b> Y_OFS_USR register . . . . .	94
<b>Table 174.</b> Y_OFS_USR register description . . . . .	94
<b>Table 175.</b> X_OFS_USR register . . . . .	94
<b>Table 176.</b> X_OFS_USR register description . . . . .	94
<b>Table 177.</b> FIFO_DATA_OUT_TAG register . . . . .	95
<b>Table 178.</b> FIFO_DATA_OUT_TAG register description . . . . .	95
<b>Table 179.</b> FIFO tag . . . . .	95
<b>Table 180.</b> FIFO_DATA_OUT_BYTE_1 and FIFO_DATA_OUT_BYTE_0 registers . . . . .	96
<b>Table 181.</b> FIFO_DATA_OUT_BYTE_1 and FIFO_DATA_OUT_BYTE_0 register description . . . . .	96
<b>Table 182.</b> FIFO_DATA_OUT_BYTE_3 and FIFO_DATA_OUT_BYTE_2 registers . . . . .	96
<b>Table 183.</b> FIFO_DATA_OUT_BYTE_3 and FIFO_DATA_OUT_BYTE_2 register description . . . . .	96
<b>Table 184.</b> FIFO_DATA_OUT_BYTE_5 and FIFO_DATA_OUT_BYTE_4 registers . . . . .	96
<b>Table 185.</b> FIFO_DATA_OUT_BYTE_5 and FIFO_DATA_OUT_BYTE_4 register description . . . . .	96
<b>Table 186.</b> Register address map - embedded functions . . . . .	97
<b>Table 187.</b> PAGE_SEL register . . . . .	99
<b>Table 188.</b> PAGE_SEL register description . . . . .	99
<b>Table 189.</b> EMB_FUNC_EN_A register . . . . .	99
<b>Table 190.</b> EMB_FUNC_EN_A register description . . . . .	99
<b>Table 191.</b> EMB_FUNC_EN_B register . . . . .	100
<b>Table 192.</b> EMB_FUNC_EN_B register description . . . . .	100
<b>Table 193.</b> EMB_FUNC_EXEC_STATUS register . . . . .	100
<b>Table 194.</b> EMB_FUNC_EXEC_STATUS register description . . . . .	100
<b>Table 195.</b> PAGE_ADDRESS register . . . . .	101
<b>Table 196.</b> PAGE_ADDRESS register description . . . . .	101
<b>Table 197.</b> PAGE_VALUE register . . . . .	101
<b>Table 198.</b> PAGE_VALUE register description . . . . .	101
<b>Table 199.</b> EMB_FUNC_INT1 register . . . . .	101
<b>Table 200.</b> EMB_FUNC_INT1 register description . . . . .	101
<b>Table 201.</b> FSM_INT1 register . . . . .	102
<b>Table 202.</b> FSM_INT1 register description . . . . .	102
<b>Table 203.</b> MLC_INT1 register . . . . .	103
<b>Table 204.</b> MLC_INT1 register description . . . . .	103
<b>Table 205.</b> EMB_FUNC_INT2 register . . . . .	103
<b>Table 206.</b> EMB_FUNC_INT2 register description . . . . .	103
<b>Table 207.</b> FSM_INT2 register . . . . .	104
<b>Table 208.</b> FSM_INT2 register description . . . . .	104
<b>Table 209.</b> MLC_INT2 register . . . . .	105
<b>Table 210.</b> MLC_INT2 register description . . . . .	105
<b>Table 211.</b> EMB_FUNC_STATUS register . . . . .	105
<b>Table 212.</b> EMB_FUNC_STATUS register description . . . . .	105
<b>Table 213.</b> FSM_STATUS register . . . . .	106
<b>Table 214.</b> FSM_STATUS register description . . . . .	106
<b>Table 215.</b> MLC_STATUS register . . . . .	106
<b>Table 216.</b> MLC_STATUS register description . . . . .	106
<b>Table 217.</b> PAGE_RW register . . . . .	107
<b>Table 218.</b> PAGE_RW register description . . . . .	107

Table 219. EMB_FUNC_FIFO_EN_A register . . . . .	107
Table 220. EMB_FUNC_FIFO_EN_A register description . . . . .	107
Table 221. EMB_FUNC_FIFO_EN_B register . . . . .	108
Table 222. EMB_FUNC_FIFO_EN_B register description . . . . .	108
Table 223. FSM_ENABLE register . . . . .	108
Table 224. FSM_ENABLE register description . . . . .	108
Table 225. FSM_LONG_COUNTER_L register . . . . .	109
Table 226. FSM_LONG_COUNTER_L register description . . . . .	109
Table 227. FSM_LONG_COUNTER_H register . . . . .	109
Table 228. FSM_LONG_COUNTER_H register description . . . . .	109
Table 229. INT_ACK_MASK register . . . . .	110
Table 230. INT_ACK_MASK register description . . . . .	110
Table 231. FSM_OUTS1 register . . . . .	111
Table 232. FSM_OUTS1 register description . . . . .	111
Table 233. FSM_OUTS2 register . . . . .	112
Table 234. FSM_OUTS2 register description . . . . .	112
Table 235. FSM_OUTS3 register . . . . .	113
Table 236. FSM_OUTS3 register description . . . . .	113
Table 237. FSM_OUTS4 register . . . . .	114
Table 238. FSM_OUTS4 register description . . . . .	114
Table 239. FSM_OUTS5 register . . . . .	115
Table 240. FSM_OUTS5 register description . . . . .	115
Table 241. FSM_OUTS6 register . . . . .	116
Table 242. FSM_OUTS6 register description . . . . .	116
Table 243. FSM_OUTS7 register . . . . .	117
Table 244. FSM_OUTS7 register description . . . . .	117
Table 245. FSM_OUTS8 register . . . . .	118
Table 246. FSM_OUTS8 register description . . . . .	118
Table 247. SFLP_ODR register . . . . .	119
Table 248. SFLP_ODR register description . . . . .	119
Table 249. FSM_ODR register . . . . .	119
Table 250. FSM_ODR register description . . . . .	119
Table 251. MLC_ODR register . . . . .	120
Table 252. MLC_ODR register description . . . . .	120
Table 253. STEP_COUNTER_L register . . . . .	120
Table 254. STEP_COUNTER_L register description . . . . .	120
Table 255. STEP_COUNTER_H register . . . . .	120
Table 256. STEP_COUNTER_H register description . . . . .	120
Table 257. EMB_FUNC_SRC register . . . . .	121
Table 258. EMB_FUNC_SRC register description . . . . .	121
Table 259. EMB_FUNC_INIT_A register . . . . .	122
Table 260. EMB_FUNC_INIT_A register description . . . . .	122
Table 261. EMB_FUNC_INIT_B register . . . . .	122
Table 262. EMB_FUNC_INIT_B register description . . . . .	122
Table 263. MLC1_SRC register . . . . .	123
Table 264. MLC1_SRC register description . . . . .	123
Table 265. MLC2_SRC register . . . . .	123
Table 266. MLC2_SRC register description . . . . .	123
Table 267. MLC3_SRC register . . . . .	123
Table 268. MLC3_SRC register description . . . . .	123
Table 269. MLC4_SRC register . . . . .	123
Table 270. MLC4_SRC register description . . . . .	123
Table 271. Register address map - embedded advanced features page 0 . . . . .	124
Table 272. Register address map - embedded advanced features page 1 . . . . .	124
Table 273. SFLP_GAME_GBIASX_L register . . . . .	126

---

<b>Table 274.</b> SFLP_GAME_GBIASX_L register description . . . . .	126
<b>Table 275.</b> SFLP_GAME_GBIASX_H register . . . . .	126
<b>Table 276.</b> SFLP_GAME_GBIASX_H register description . . . . .	126
<b>Table 277.</b> SFLP_GAME_GBIASY_L register . . . . .	126
<b>Table 278.</b> SFLP_GAME_GBIASY_L register description . . . . .	126
<b>Table 279.</b> SFLP_GAME_GBIASY_H register . . . . .	126
<b>Table 280.</b> SFLP_GAME_GBIASY_H register description . . . . .	126
<b>Table 281.</b> SFLP_GAME_GBIASZ_L register . . . . .	127
<b>Table 282.</b> SFLP_GAME_GBIASZ_L register description . . . . .	127
<b>Table 283.</b> SFLP_GAME_GBIASZ_H register . . . . .	127
<b>Table 284.</b> SFLP_GAME_GBIASZ_H register description . . . . .	127
<b>Table 285.</b> FSM_QVAR_SENSITIVITY_L register . . . . .	127
<b>Table 286.</b> FSM_QVAR_SENSITIVITY_L register description . . . . .	127
<b>Table 287.</b> FSM_QVAR_SENSITIVITY_H register . . . . .	127
<b>Table 288.</b> FSM_QVAR_SENSITIVITY_H register description . . . . .	127
<b>Table 289.</b> FSM_LC_TIMEOUT_L register . . . . .	128
<b>Table 290.</b> FSM_LC_TIMEOUT_L register description . . . . .	128
<b>Table 291.</b> FSM_LC_TIMEOUT_H register . . . . .	128
<b>Table 292.</b> FSM_LC_TIMEOUT_H register description . . . . .	128
<b>Table 293.</b> FSM_PROGRAMS register . . . . .	128
<b>Table 294.</b> FSM_PROGRAMS register description . . . . .	128
<b>Table 295.</b> FSM_START_ADD_L register . . . . .	129
<b>Table 296.</b> FSM_START_ADD_L register description . . . . .	129
<b>Table 297.</b> FSM_START_ADD_H register . . . . .	129
<b>Table 298.</b> FSM_START_ADD_H register description . . . . .	129
<b>Table 299.</b> PEDO_CMD_REG register . . . . .	129
<b>Table 300.</b> PEDO_CMD_REG register description . . . . .	129
<b>Table 301.</b> PEDO_DEB_STEPS_CONF register . . . . .	130
<b>Table 302.</b> PEDO_DEB_STEPS_CONF register description . . . . .	130
<b>Table 303.</b> PEDO_SC_DELTAT_L register . . . . .	130
<b>Table 304.</b> PEDO_SC_DELTAT_H register . . . . .	130
<b>Table 305.</b> PEDO_SC_DELTAT_H/L register description . . . . .	130
<b>Table 306.</b> MLC_QVAR_SENSITIVITY_L register . . . . .	131
<b>Table 307.</b> MLC_QVAR_SENSITIVITY_L register description . . . . .	131
<b>Table 308.</b> MLC_QVAR_SENSITIVITY_H register . . . . .	131
<b>Table 309.</b> MLC_QVAR_SENSITIVITY_H register description . . . . .	131
<b>Table 310.</b> Reel dimensions for carrier tape of LGA-14 package . . . . .	135
<b>Table 311.</b> Document revision history . . . . .	136

## List of figures

<b>Figure 1.</b>	Generic state machine. . . . .	5
<b>Figure 2.</b>	State machine in the ISM330BX . . . . .	5
<b>Figure 3.</b>	Machine learning core in the ISM330BX. . . . .	6
<b>Figure 4.</b>	Four-stage pedometer algorithm . . . . .	8
<b>Figure 5.</b>	Pin connections . . . . .	9
<b>Figure 6.</b>	ISM330BX connection modes. . . . .	10
<b>Figure 7.</b>	SPI target timing in mode 0 . . . . .	17
<b>Figure 8.</b>	SPI target timing in mode 3 . . . . .	18
<b>Figure 9.</b>	I <sup>2</sup> C target timing diagram . . . . .	19
<b>Figure 10.</b>	TDM timing diagram . . . . .	20
<b>Figure 11.</b>	Read and write protocol (in mode 3) . . . . .	26
<b>Figure 12.</b>	SPI read protocol (in mode 3) . . . . .	27
<b>Figure 13.</b>	Multiple byte SPI read protocol (2-byte example) (in mode 3) . . . . .	27
<b>Figure 14.</b>	SPI write protocol (in mode 3). . . . .	28
<b>Figure 15.</b>	Multiple byte SPI write protocol (2-byte example) (in mode 3) . . . . .	28
<b>Figure 16.</b>	SPI read protocol in 3-wire mode (in mode 3) . . . . .	28
<b>Figure 17.</b>	WCLK, TDMout change on the falling edge of BCLK and are valid on the rising edge of BCLK, no delay . . . . .	33
<b>Figure 18.</b>	WCLK, TDMout change on the rising edge of BCLK and are valid on the falling edge of BCLK, no delay . . . . .	33
<b>Figure 19.</b>	WCLK, TDMout change on the falling edge of BCLK and are valid on the rising edge of BCLK, delayed. . . . .	34
<b>Figure 20.</b>	WCLK, TDMout change on the rising edge of BCLK and are valid on the falling edge of BCLK, delayed. . . . .	34
<b>Figure 21.</b>	Single-channel mode (XL_DualC_EN = 0) . . . . .	36
<b>Figure 22.</b>	Dual-channel mode (XL_DualC_EN = 1) . . . . .	36
<b>Figure 23.</b>	Block diagram of filters . . . . .	38
<b>Figure 24.</b>	Accelerometer UI chain . . . . .	39
<b>Figure 25.</b>	Accelerometer composite filter . . . . .	39
<b>Figure 26.</b>	Frequency response . . . . .	40
<b>Figure 27.</b>	Gyroscope digital chain - mode 1 (UI) and mode 2 . . . . .	41
<b>Figure 28.</b>	ISM330BX electrical connections in mode 1 . . . . .	45
<b>Figure 29.</b>	ISM330BX electrical connections in mode 2 . . . . .	46
<b>Figure 30.</b>	Qvar external connections to pin 6, 9 (Qvar input) . . . . .	47
<b>Figure 31.</b>	Accelerometer block diagram . . . . .	68
<b>Figure 32.</b>	LGA-14L 2.5 x 3.0 x 0.74 mm package outline and mechanical data . . . . .	133
<b>Figure 33.</b>	Carrier tape information for LGA-14 package . . . . .	134
<b>Figure 34.</b>	LGA-14 package orientation in carrier tape. . . . .	134
<b>Figure 35.</b>	Reel information for carrier tape of LGA-14 package . . . . .	135

**IMPORTANT NOTICE – READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to [www.st.com/trademarks](http://www.st.com/trademarks). All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2024 STMicroelectronics – All rights reserved